

Designed for DIY...

Our Electric Double Roman Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.


Featuring our innovative ClickLock fitting system, you can install your new blind in minutes with no drilling or messy DIY.

Please read each page of this guide carefully during installation, following along one step at a time.


Upgrades & Variations...

If you did not choose our ClickLock upgrade, just click or tap this link to find your installation guide:


[Standard Double Roman Blinds >>](#)

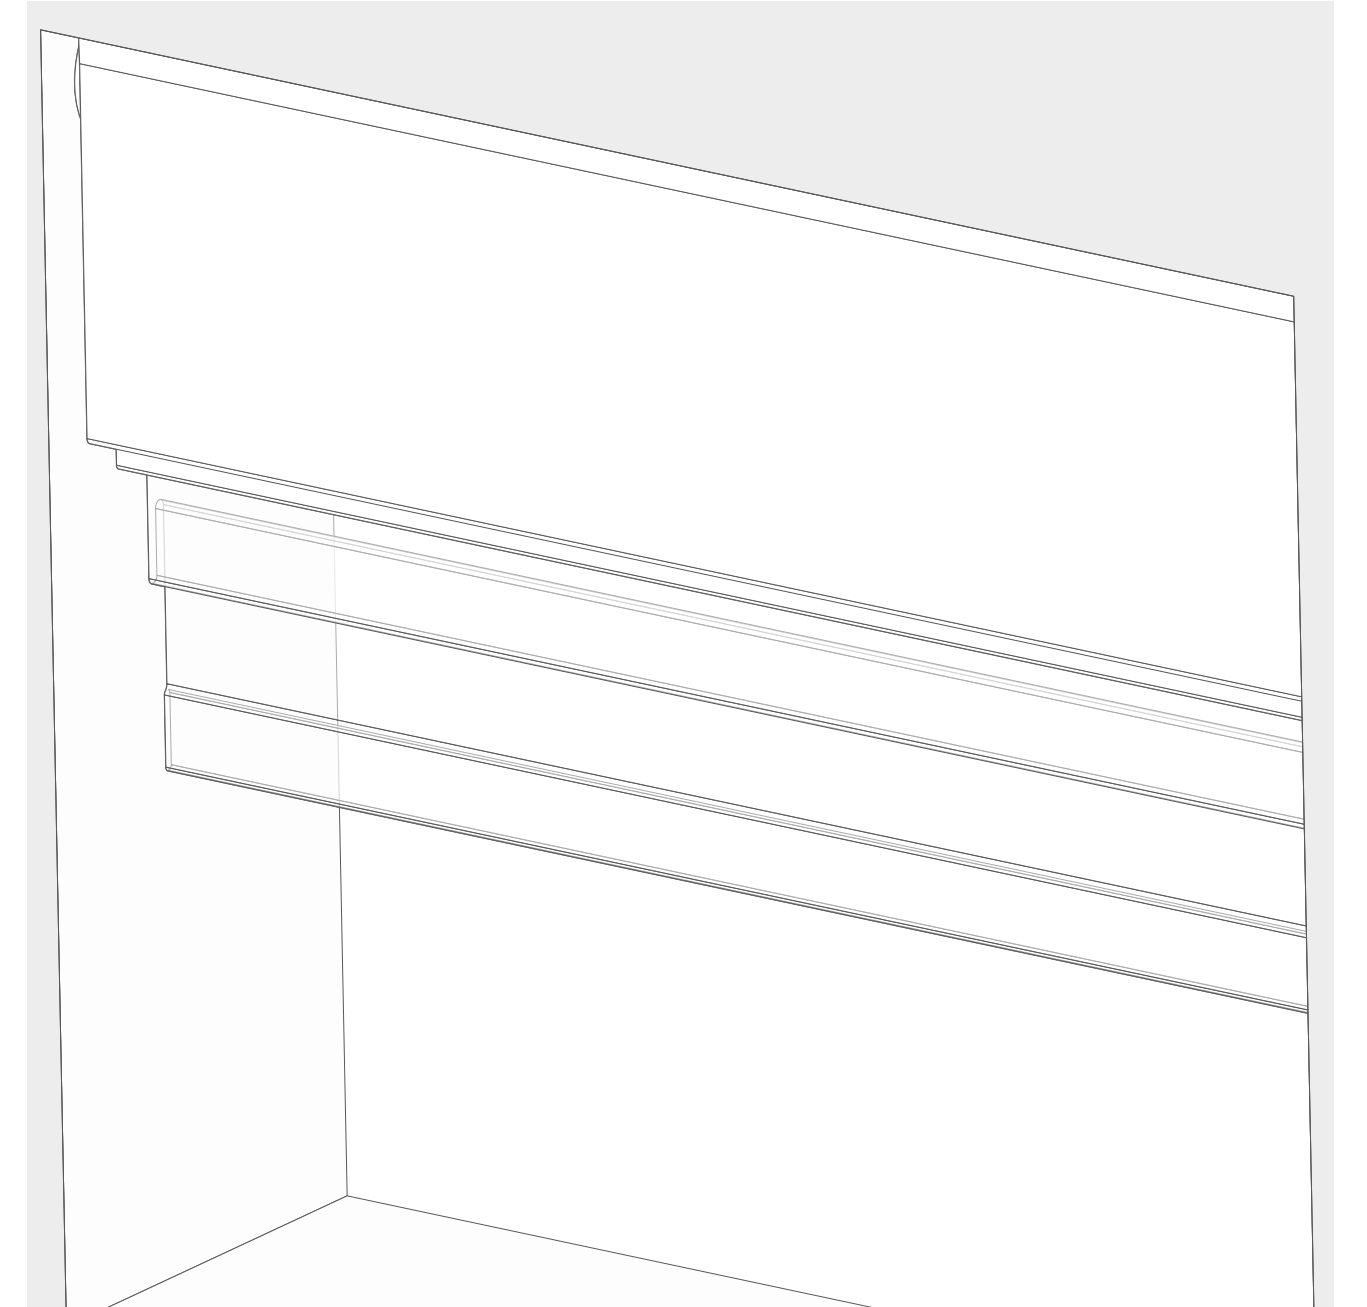


Parts contained in your order...

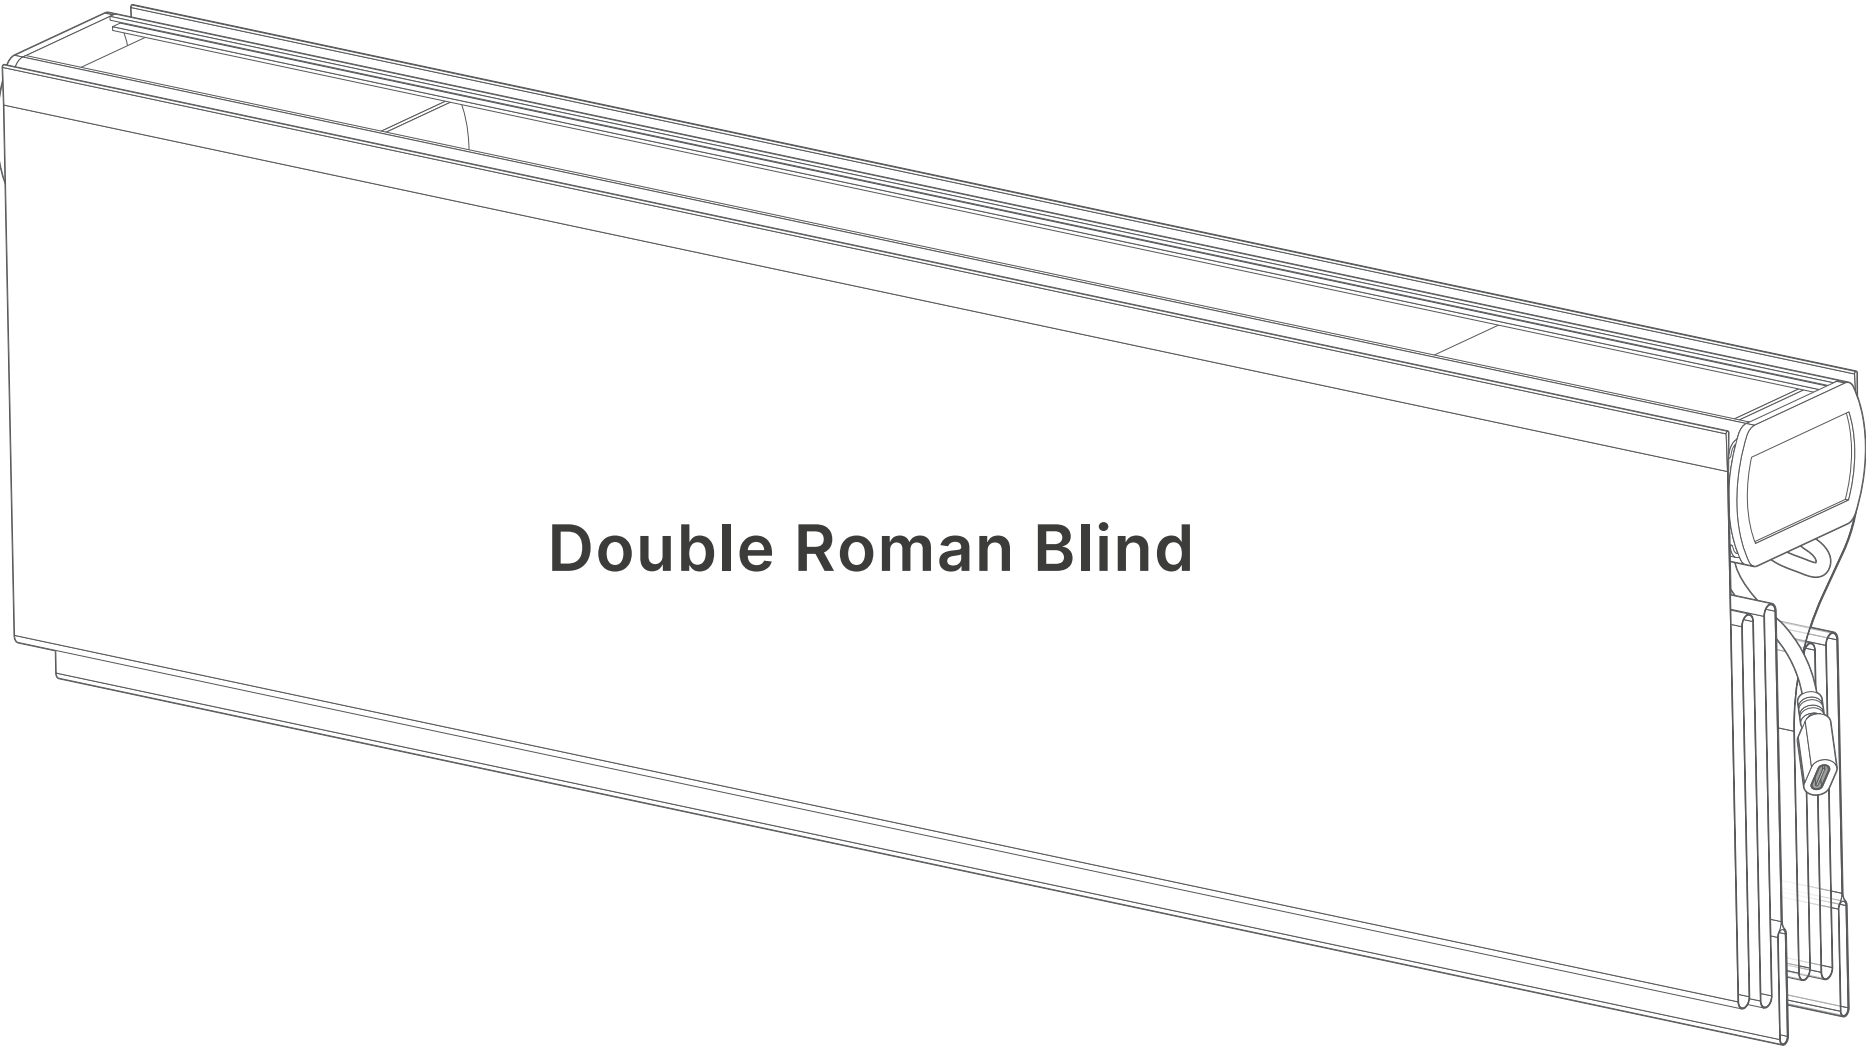


Double Roman Blind

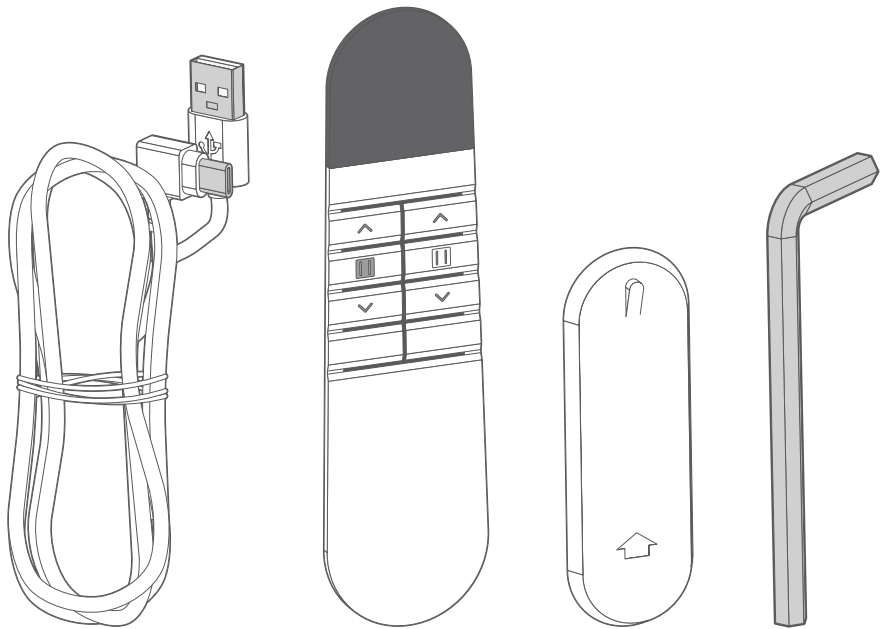


- Motor Charging Cable
- Remote Control
- Remote Wall Mount
- Allen key
- x1 each per blind

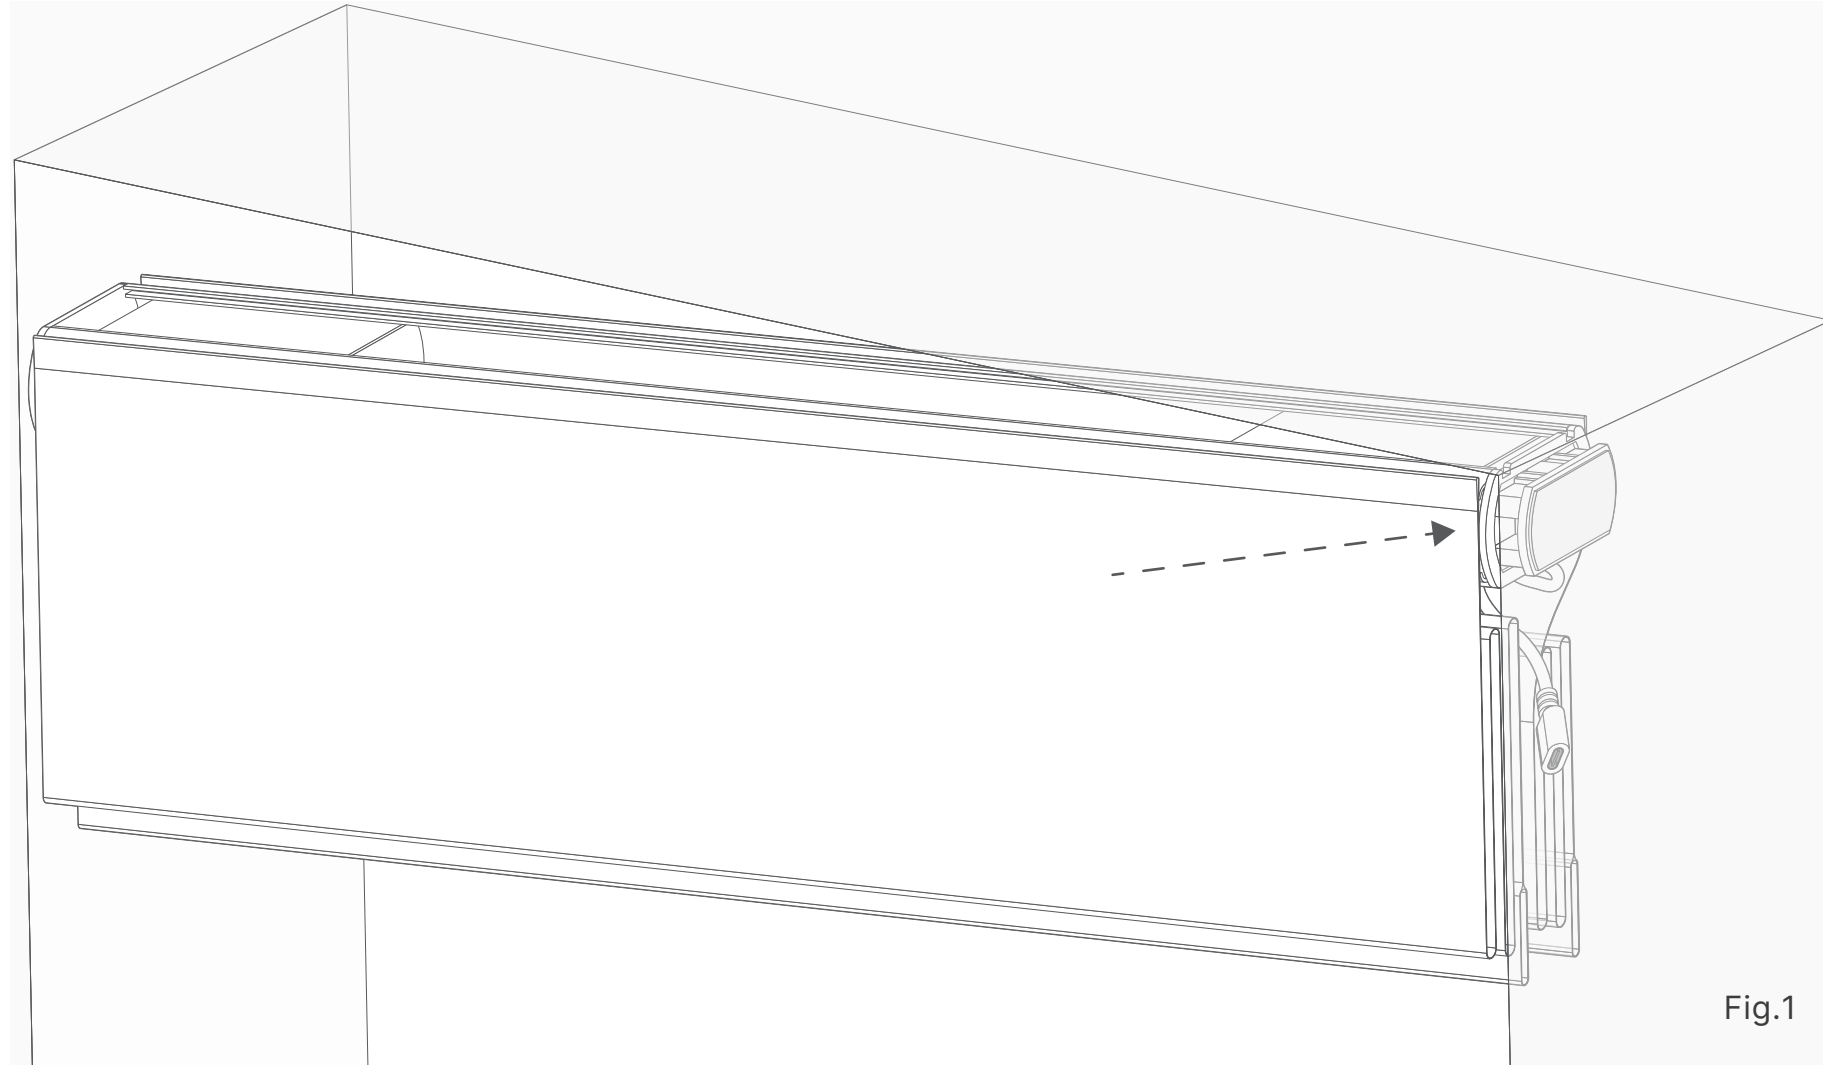


Raise the blind into the recess at an angle, pressing the ClickLock push pad against the wall (Fig.1).

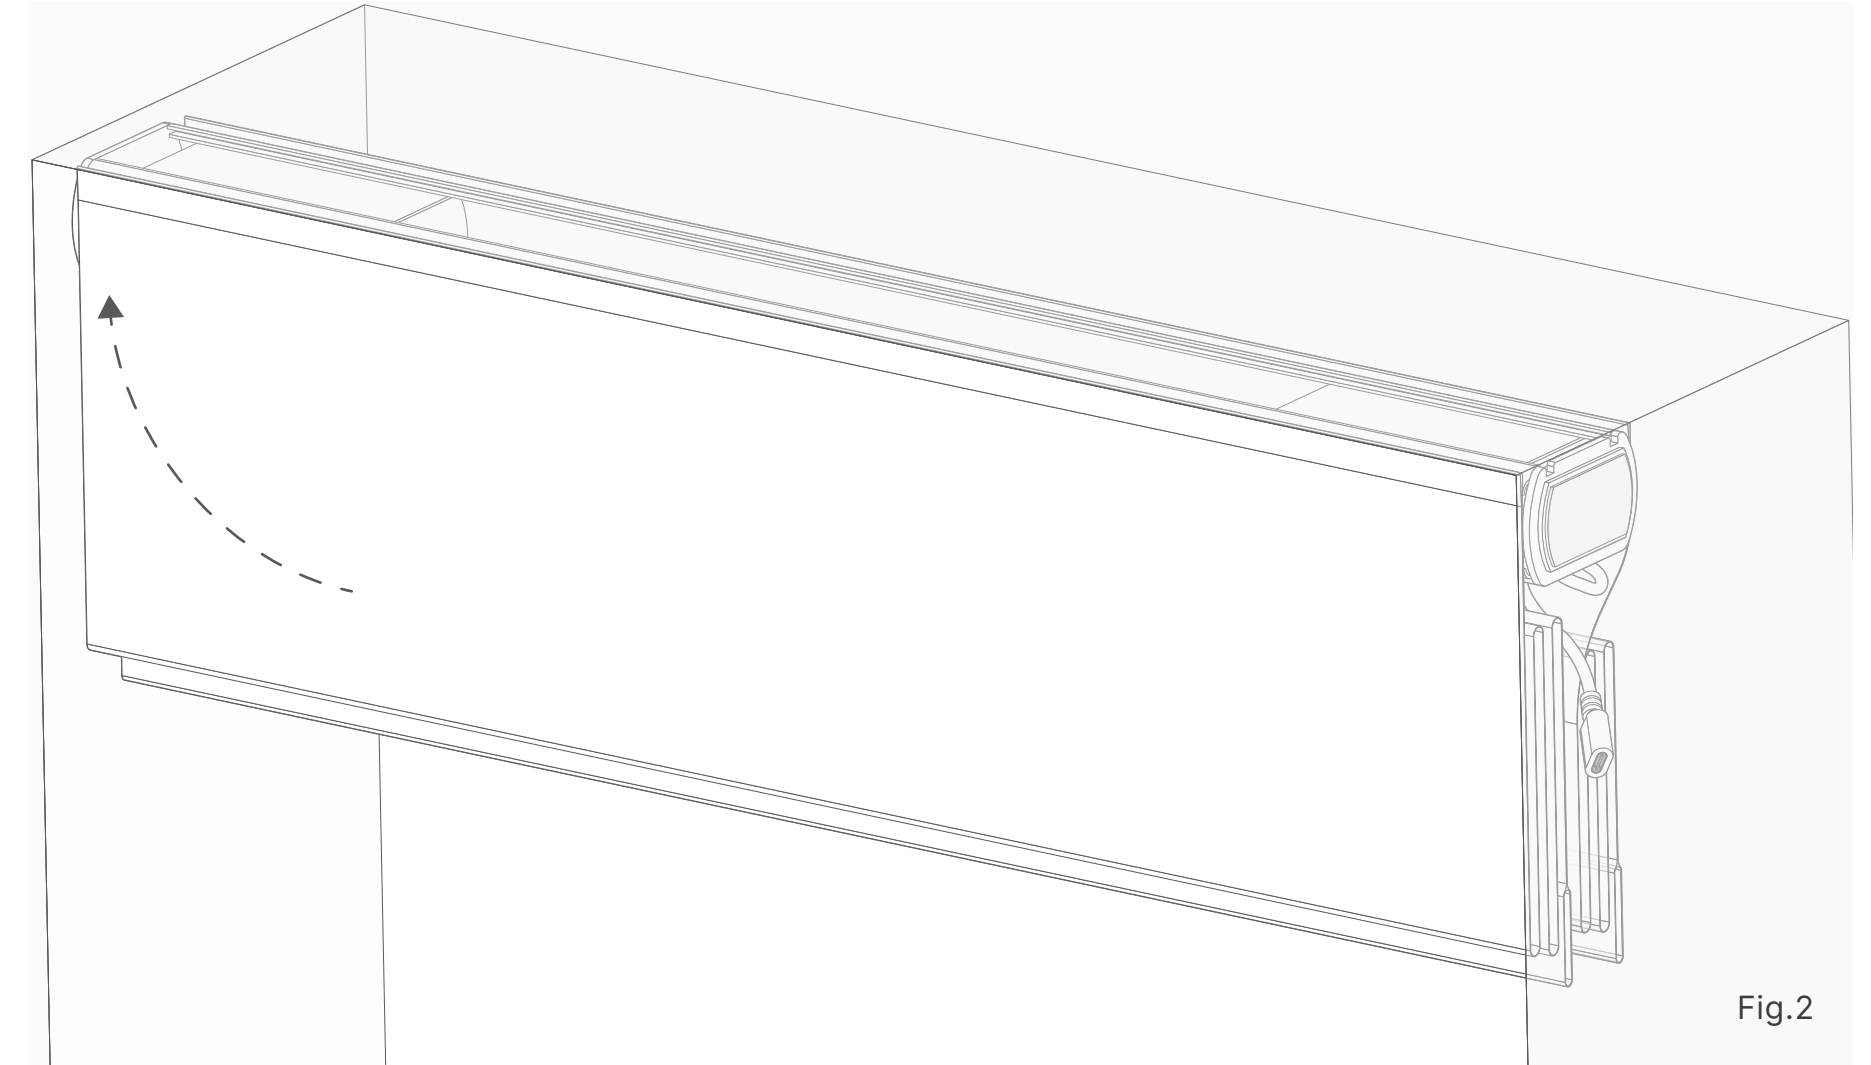

Raise the other end and straighten the blind, making sure it's level (Fig.2).

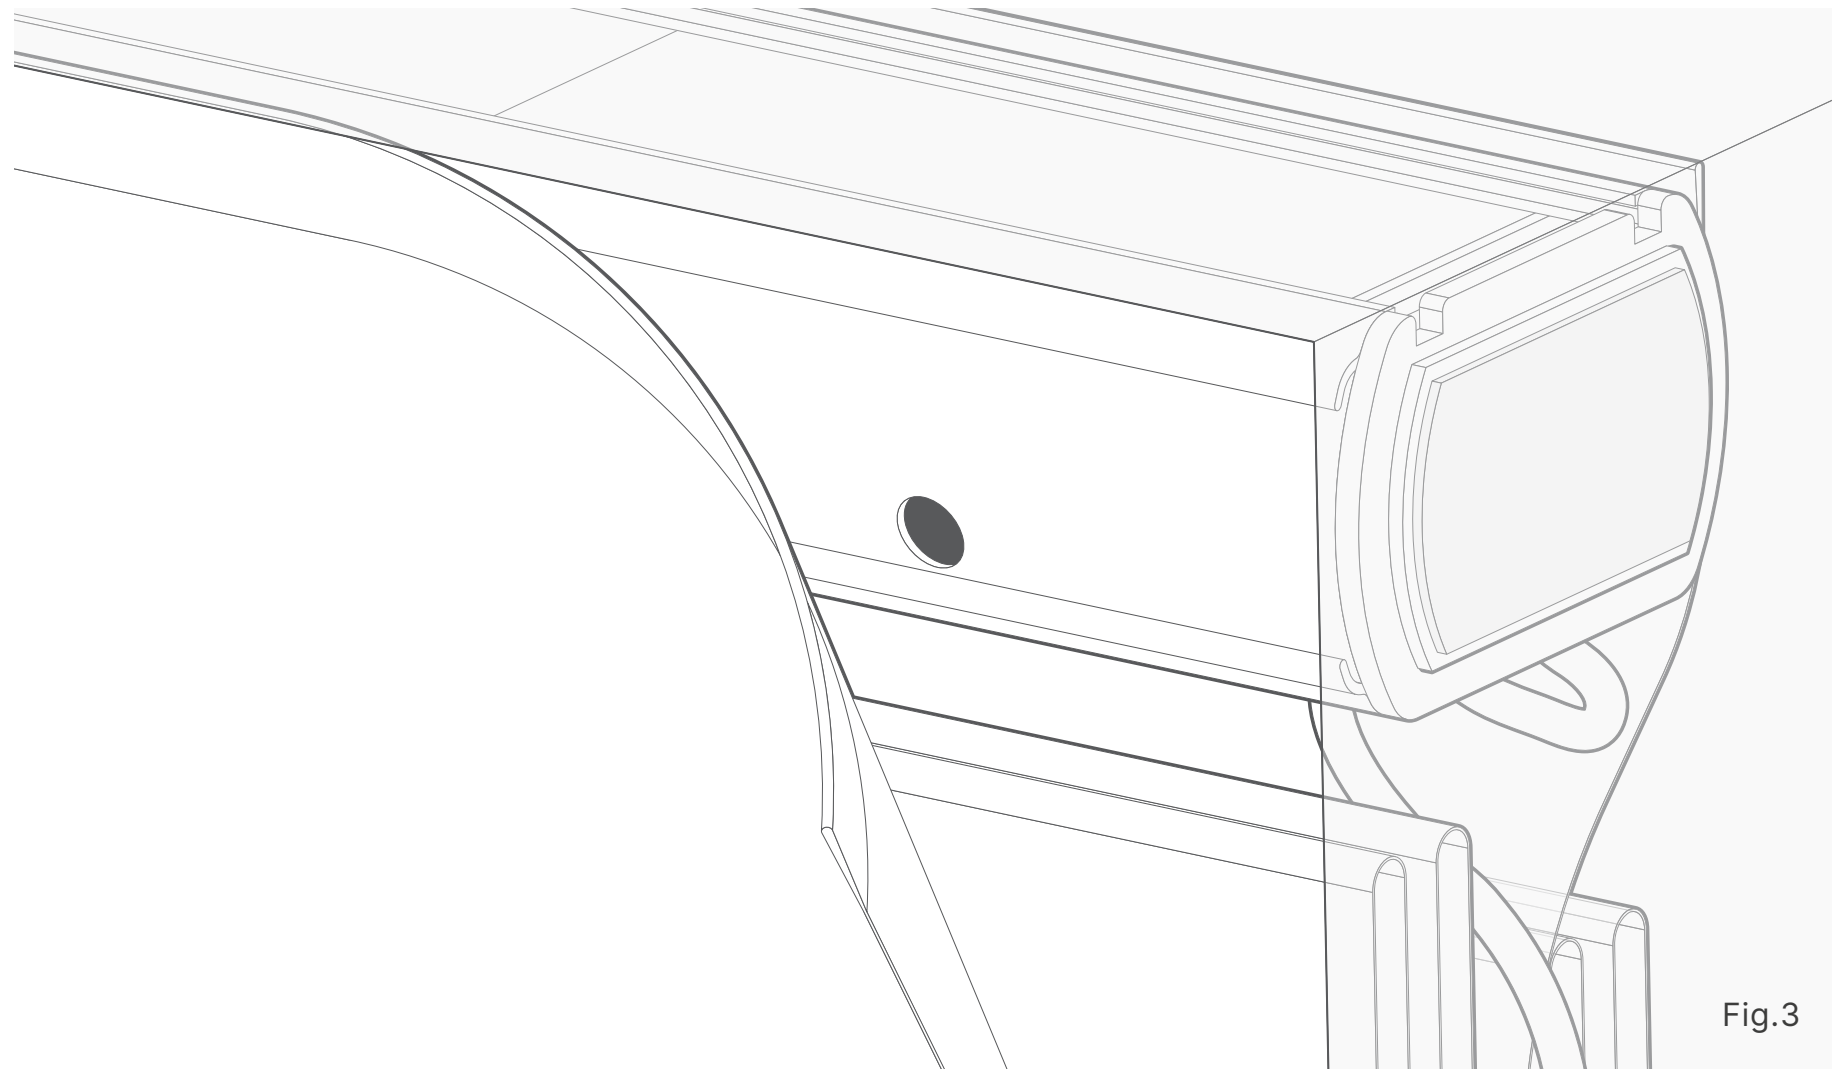

On the ClickLock end of the blind, peel the front fabric away to expose the tightening slot in the headrail (Fig.3).

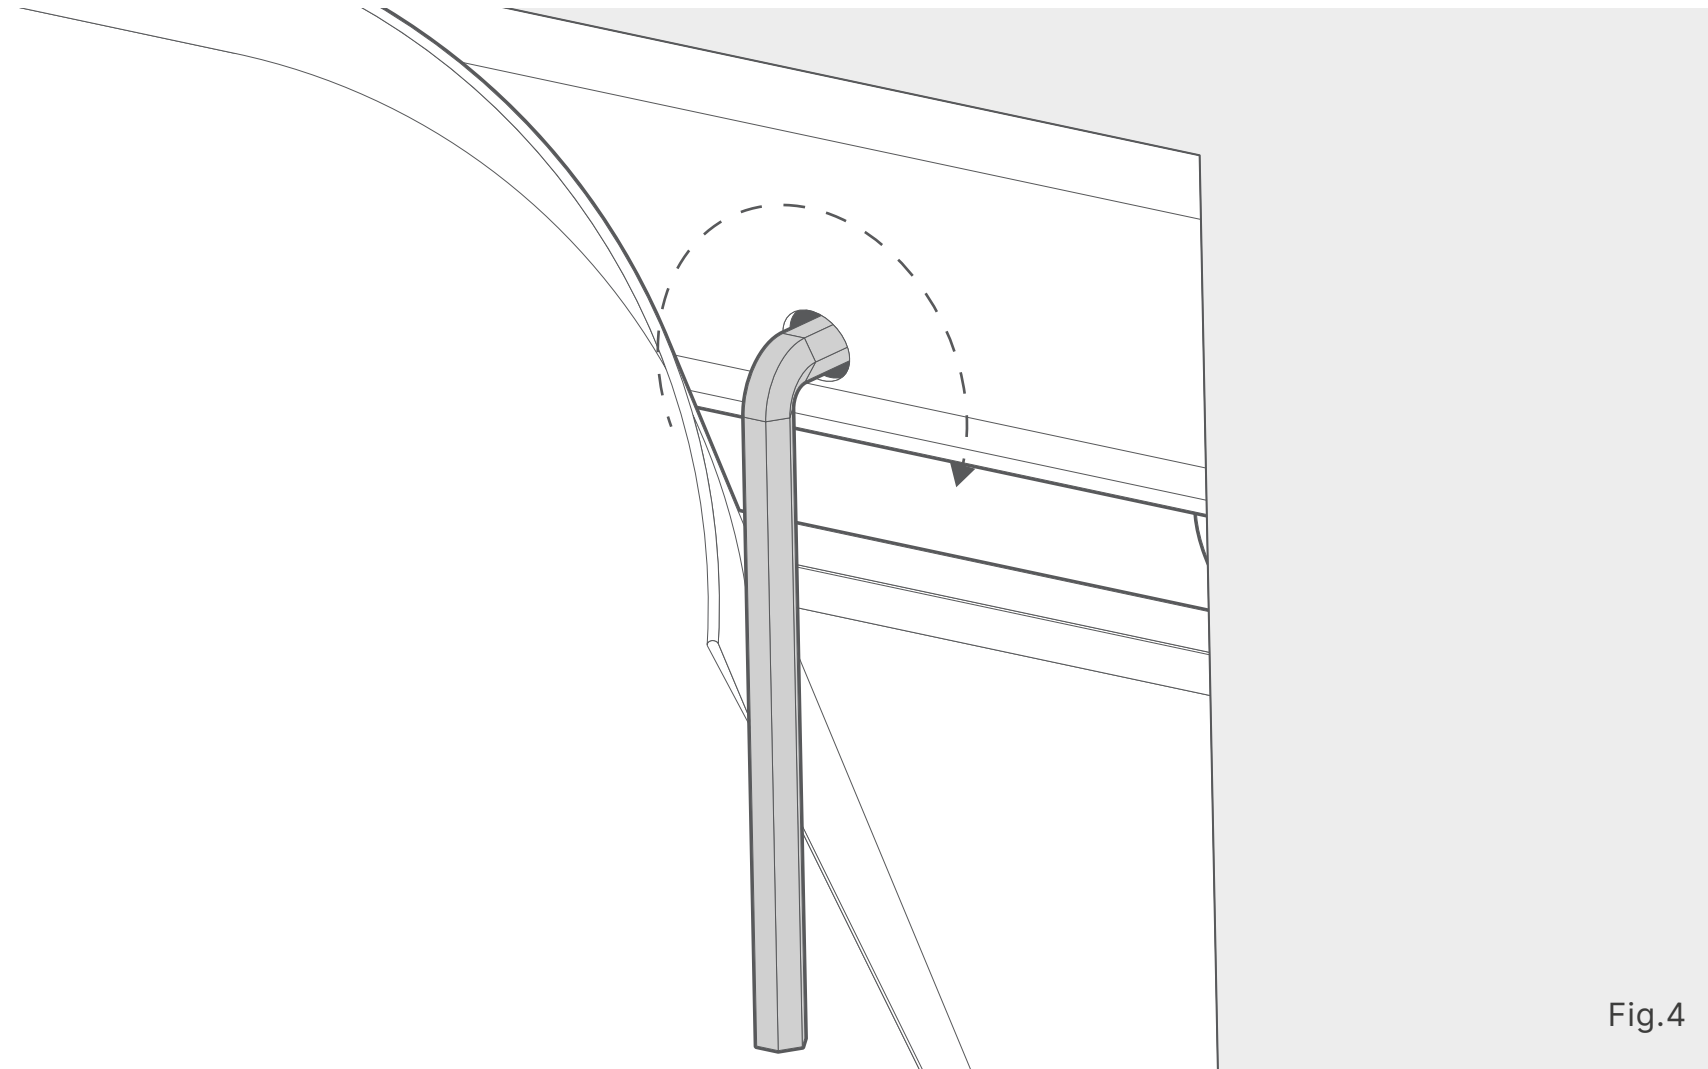

Use the supplied Allen key to lock the ClickLock mechanism (Fig.4). Turn the key clockwise until you feel the mechanism clicking as you turn.

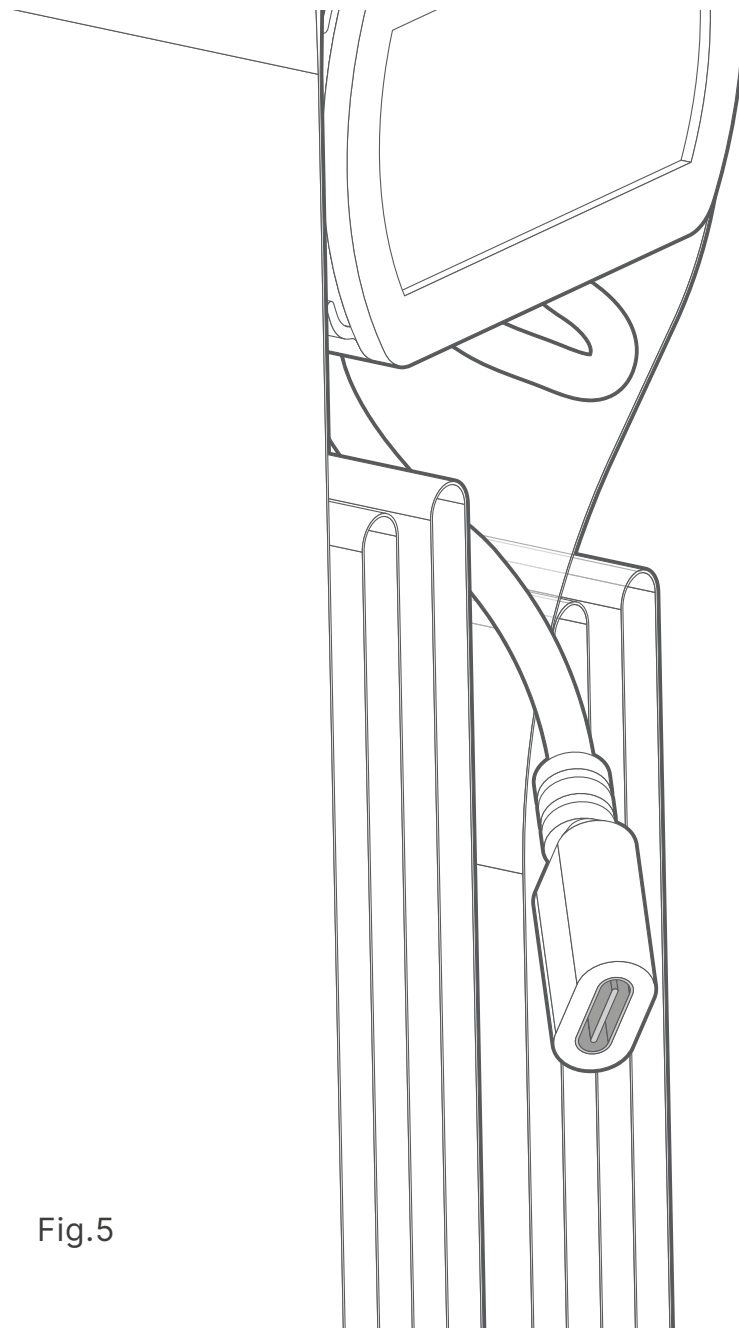


Fig.5


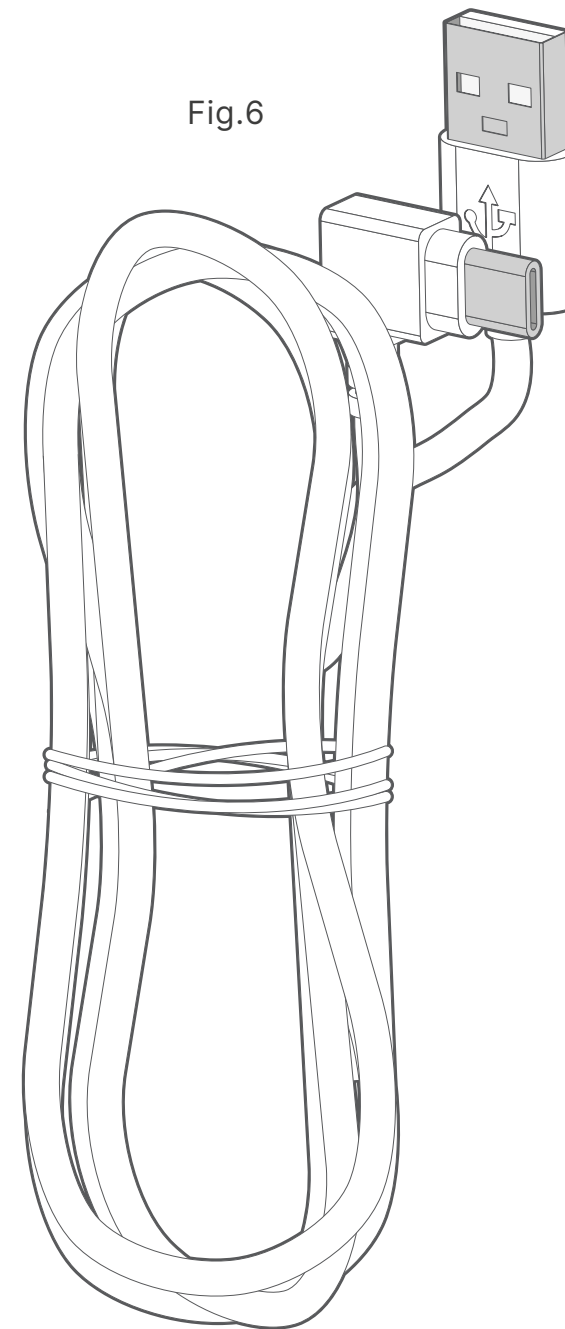


Fig.6


We'd recommend charging the motor's built-in battery for around 2.5 hours before use, this should bring the battery up to full charge.

Plug the supplied USB-C charger (Fig.6) into the battery's port cable (Fig.5). The charger cable can be plugged into any standard USB-A charger plug.


Remote Control
(front)

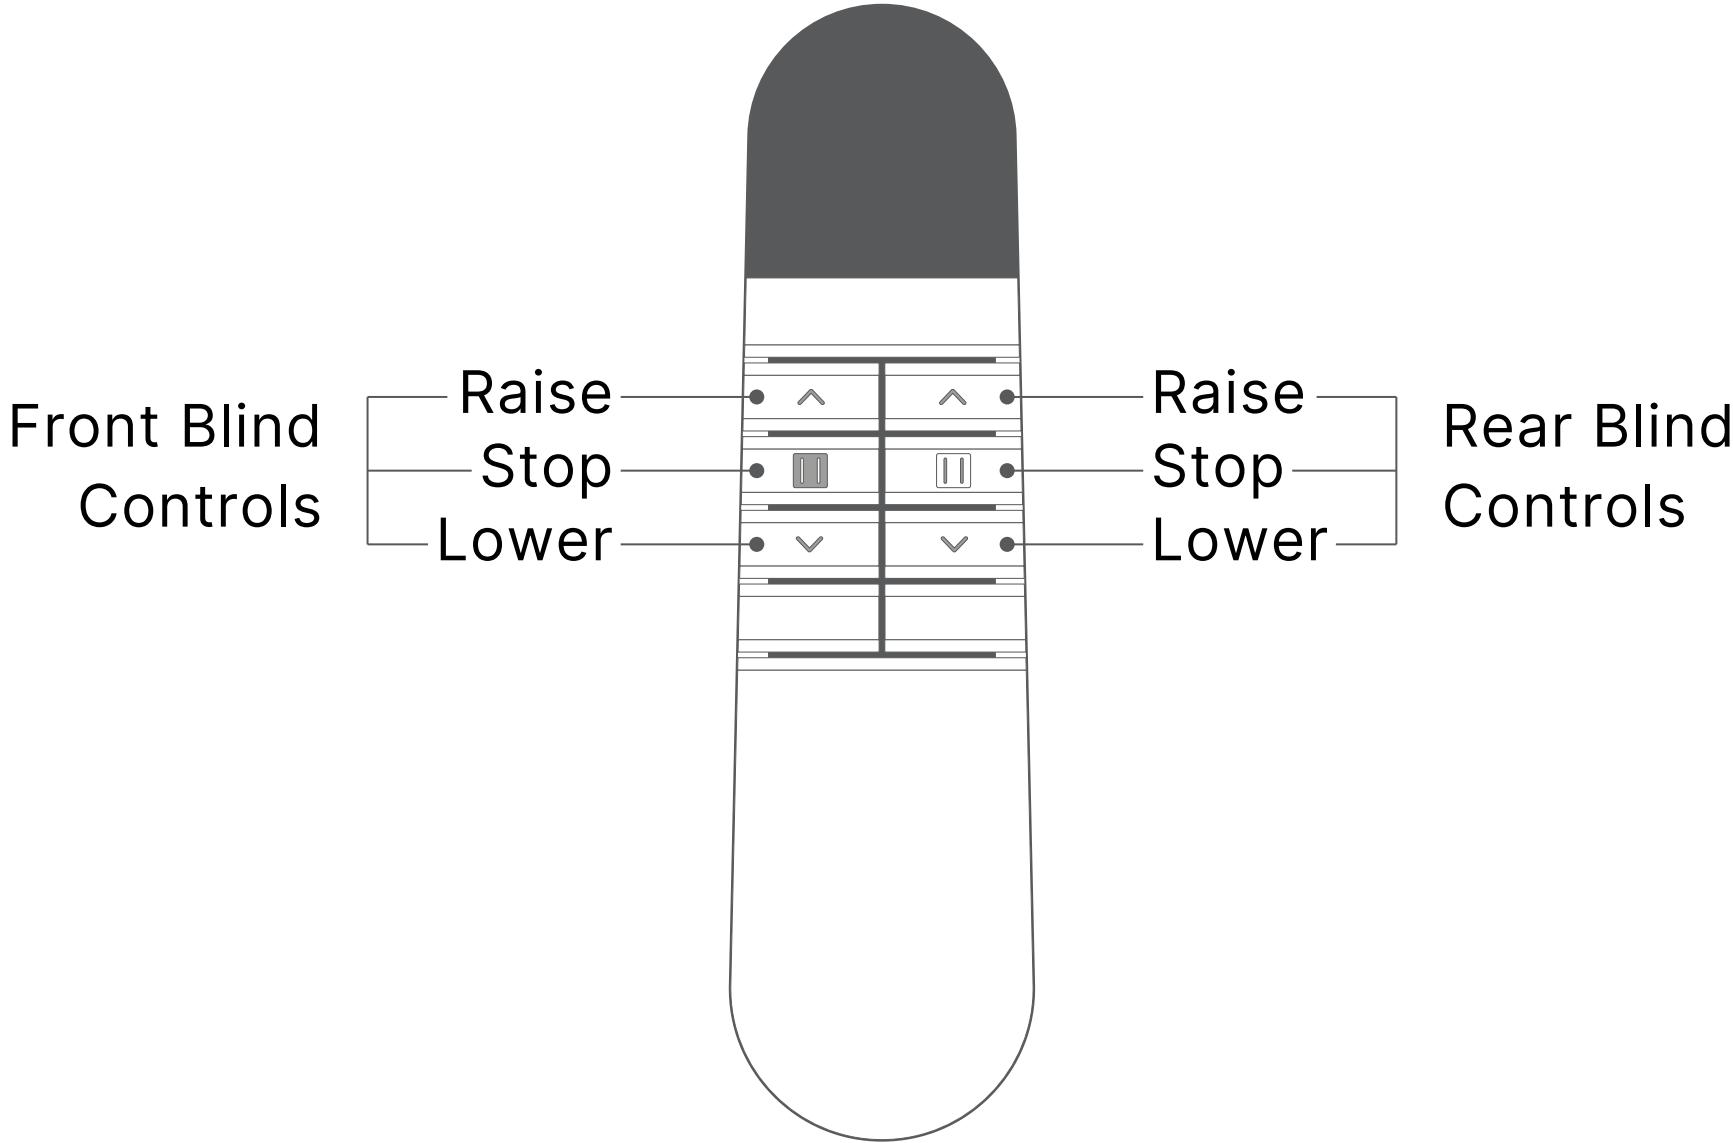

Remote Control
(back)

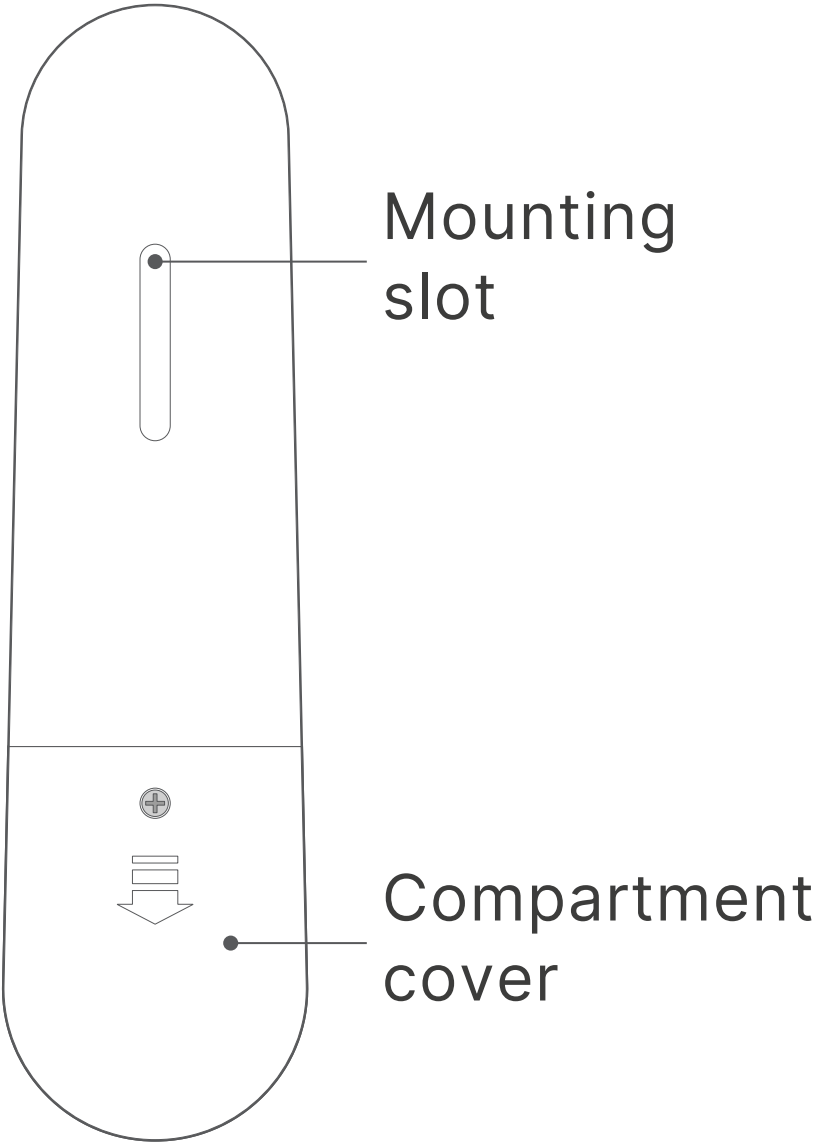

Remote Control
(rear compartment open)

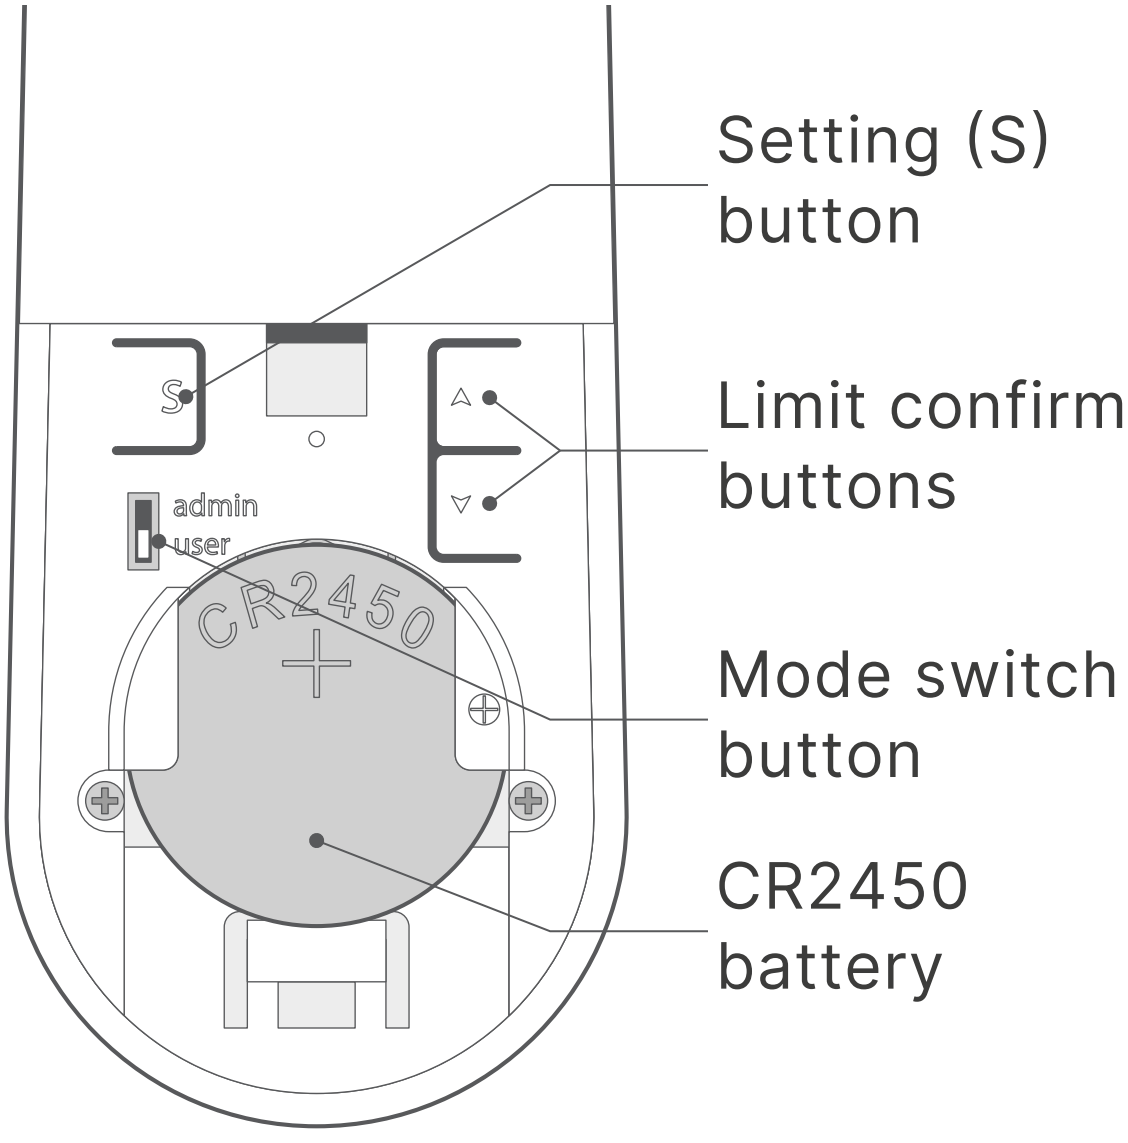

Remote and motor default settings

Each Double Roman Blind will have its own remote control, which operates both its front and back fabrics. The remote control that comes with each blind will already be paired to that blind and ready to use once the remote's battery is inserted. The 'fully raised' and 'fully lowered' positions of each blind are also pre-set to their optimum settings.

Whilst remotes can be manually paired and unpaired, and the upper and lower 'limit' positions can be changed, we'd recommend leaving these settings at their defaults.

If you do wish to change them, there are more details on the following pages.

But, if you're happy to leave everything as it is, then your installation is complete - congratulations! Your beautiful new Double Roman Blind is ready to enjoy...

Setting the upper and lower limits

Do the following for the front blind first (controls on left side of remote), then when you're done, repeat for the rear blind.



Start by removing the compartment cover from the back of the remote, and pushing the mode switch button to 'admin'. Switch back to 'user' when the below steps are completed.

Set the upper limit first:

1. Press the  button to toggle between 'step' movement and fluid movement.
2. Raise the blind until it reaches the desired position. Press the  button once to stop.
3. On the back of the remote, press and hold the  button for several seconds until the blind 'jogs' up and down a couple of times. The upper limit position is now set.

Then set the lower limit:


4. Press the  button to toggle between 'step' movement and fluid movement.
5. Lower the blind until it reaches the desired position. Press the  button once to stop.
6. On the back of the remote, press and hold the  button for several seconds until the blind 'jogs' up and down a couple of times. The lower limit position is now set.

Deleting or pairing a remote control



Start by removing the compartment cover from the back of the remote, and pushing the mode switch button to 'admin'. Switch back to 'user' when the below steps are completed.


Deleting a remote control:

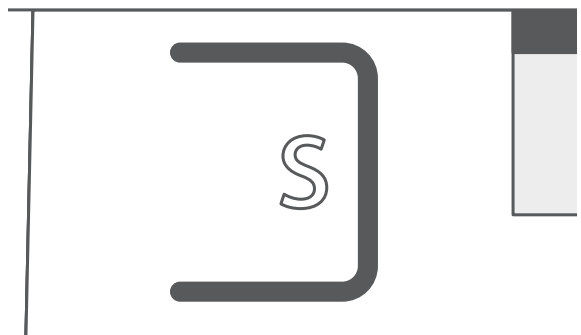

Press x 5

With the remote in 'admin' mode, simply press the S button 5 times consecutively. The blind will 'jog' up and down briefly. The remote is now deleted from that blind.

Pairing a remote control:

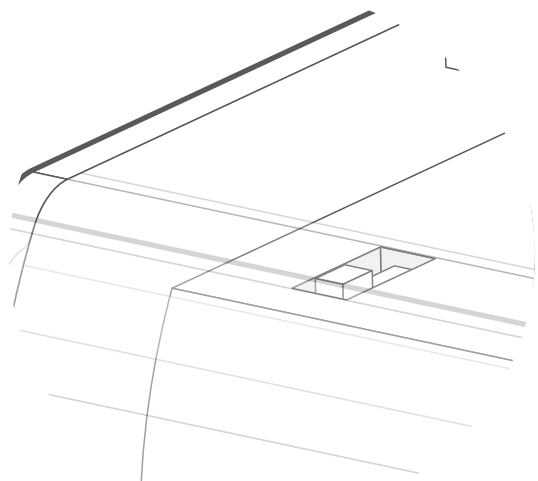

Hold 2 seconds

Press and hold the setting button on the blind's motor for 2 seconds, until the blind jogs up and down briefly. With the remote you want to add in 'admin' mode, press and hold the S button for 2 seconds until the blind jogs again. The remote is now paired.