


Designed for DIY...


Our Stick2Go No Drill Roman Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Featuring our innovative Stick2Go fitting system, you can install your new blind in minutes with no drilling or messy DIY.


Please read each page of this guide carefully during installation, following along one step at a time.

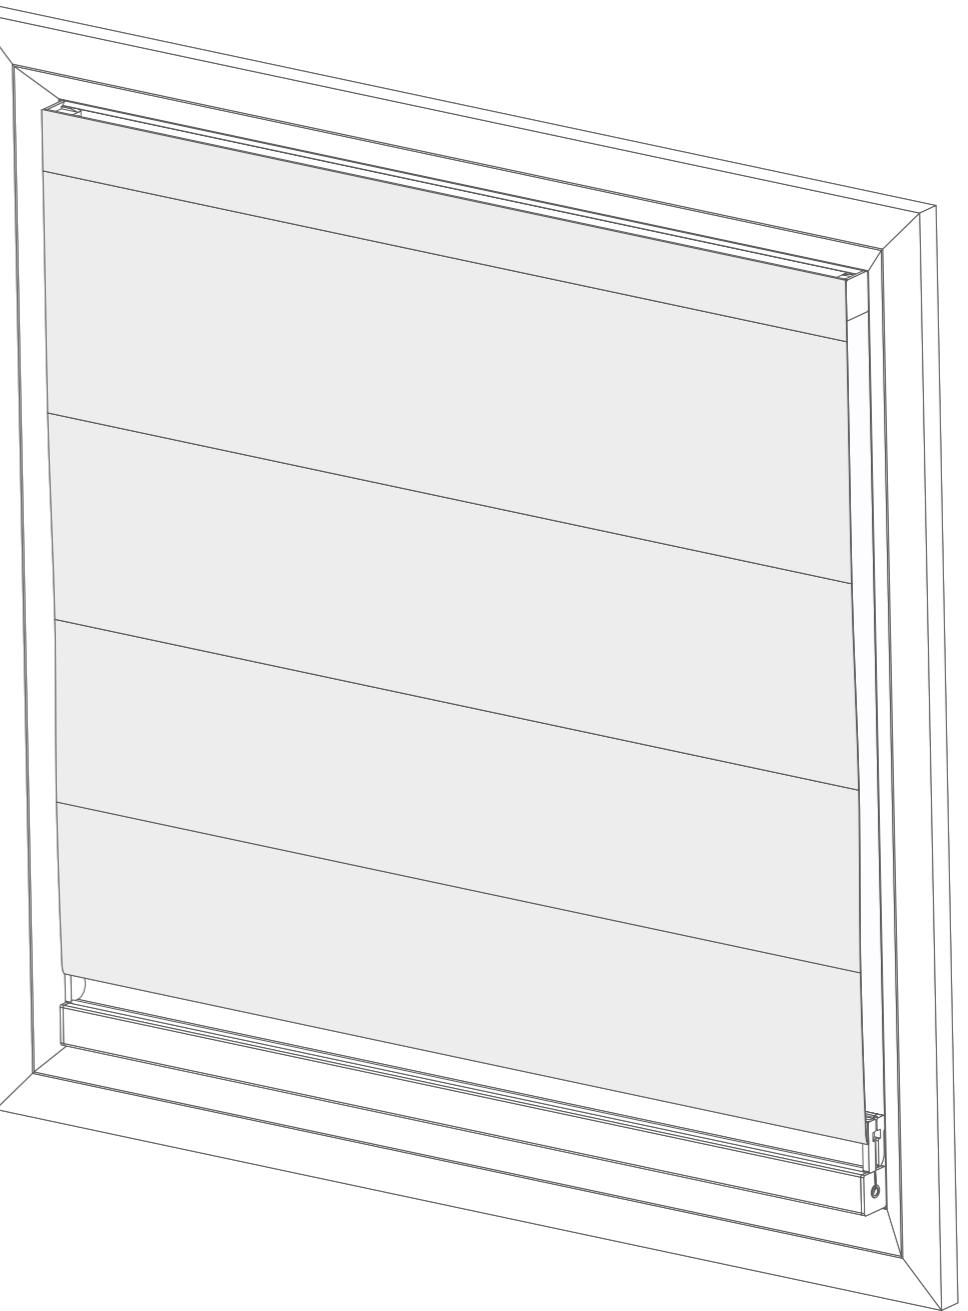

Parts contained in your order...


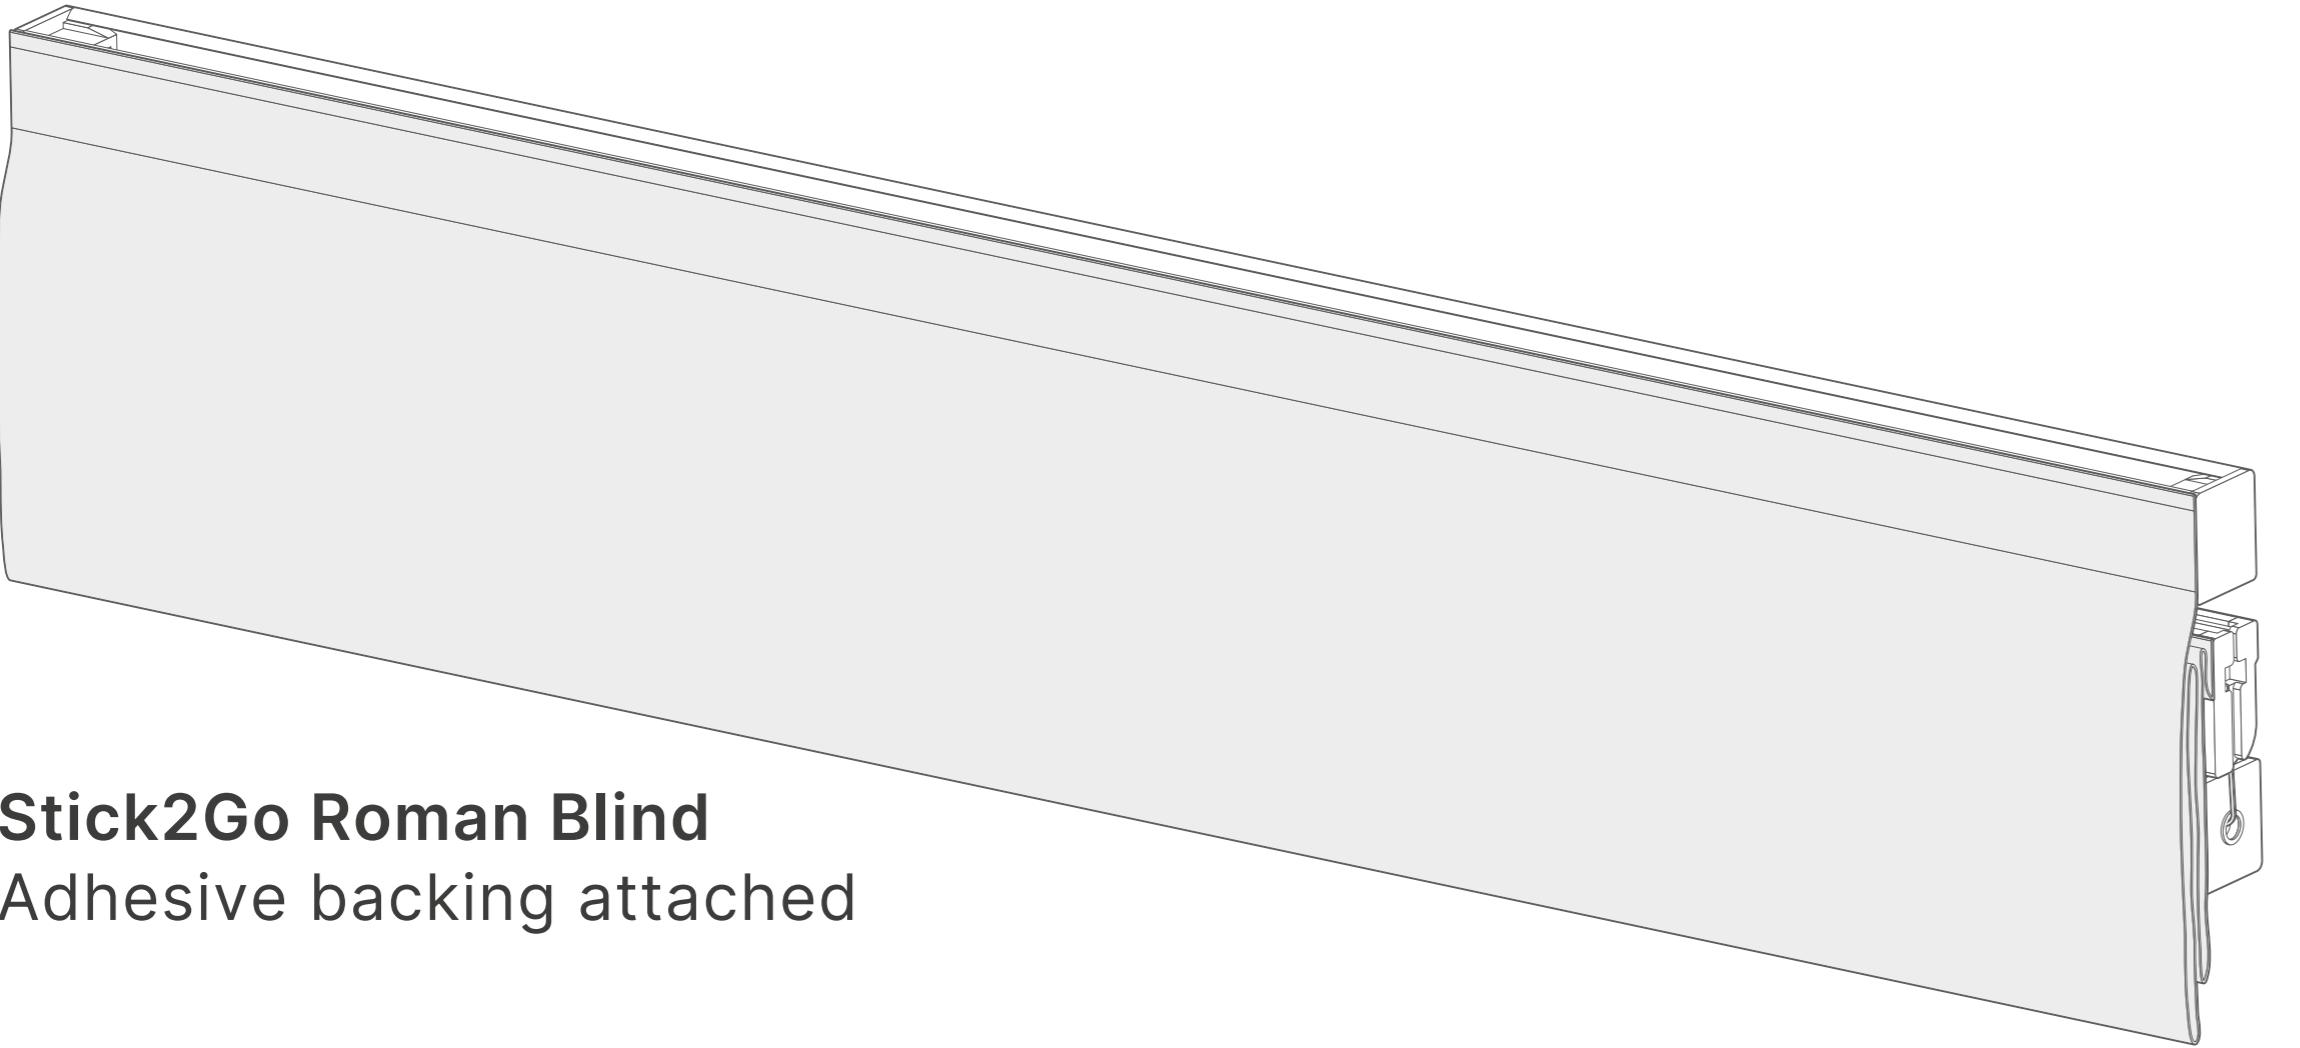


Stick2Go Roman Blind
Adhesive backing attached

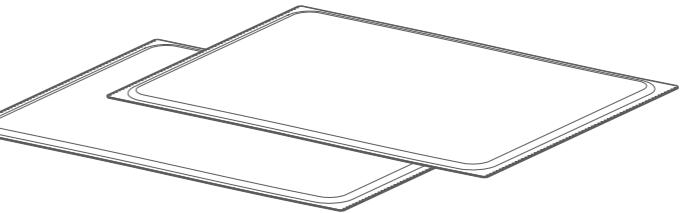


Alcohol Wipes

SECTION 2 | INSTALLING THE BLIND

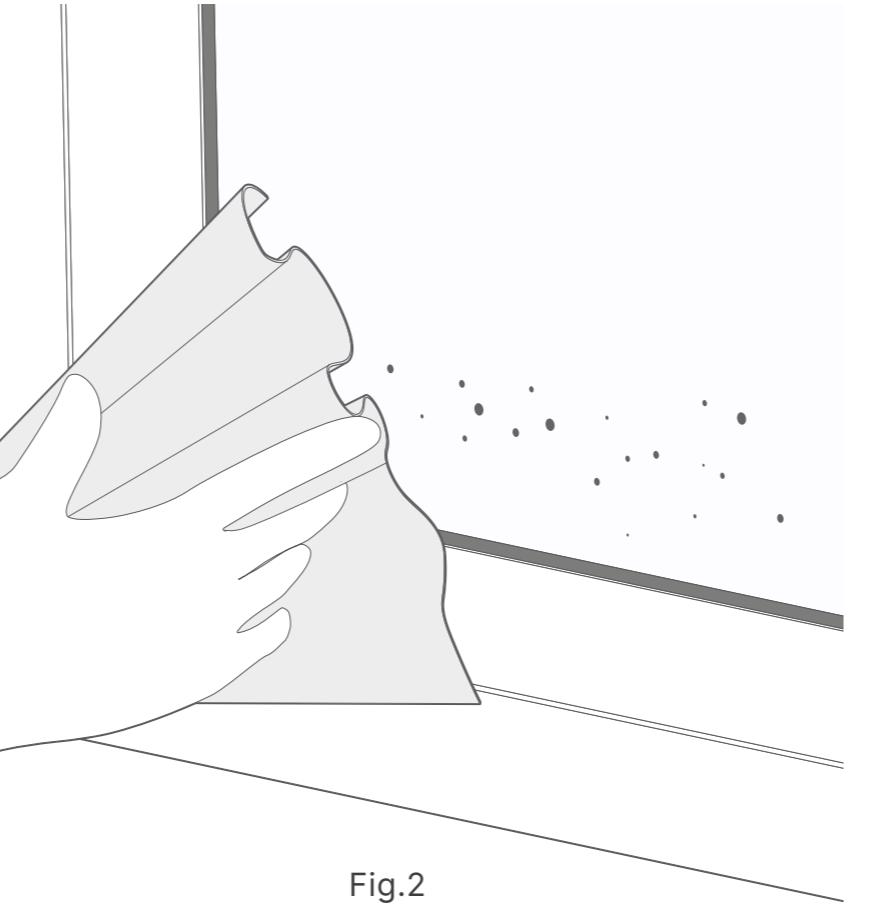
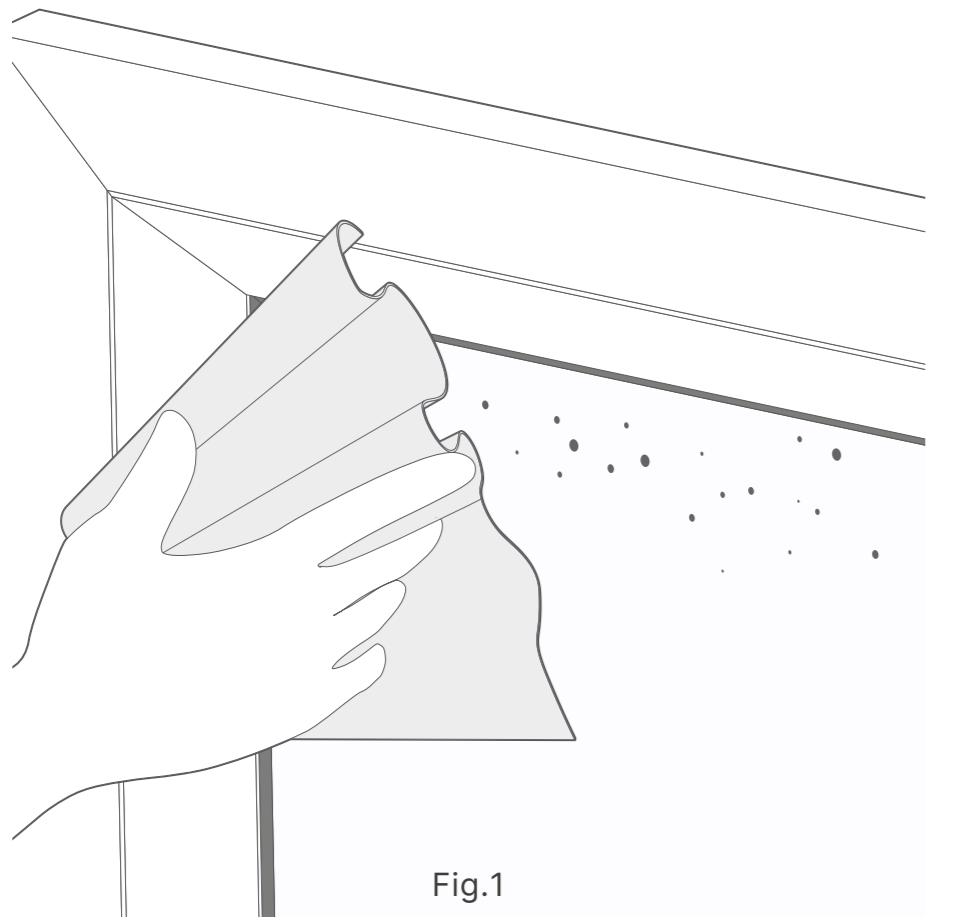


Use soapy water and a cloth, then the alcohol wipes provided, to clean the glass, especially across the top and bottom (Fig.1 / 2).

Allow time for the glass to dry fully before moving to the next step.

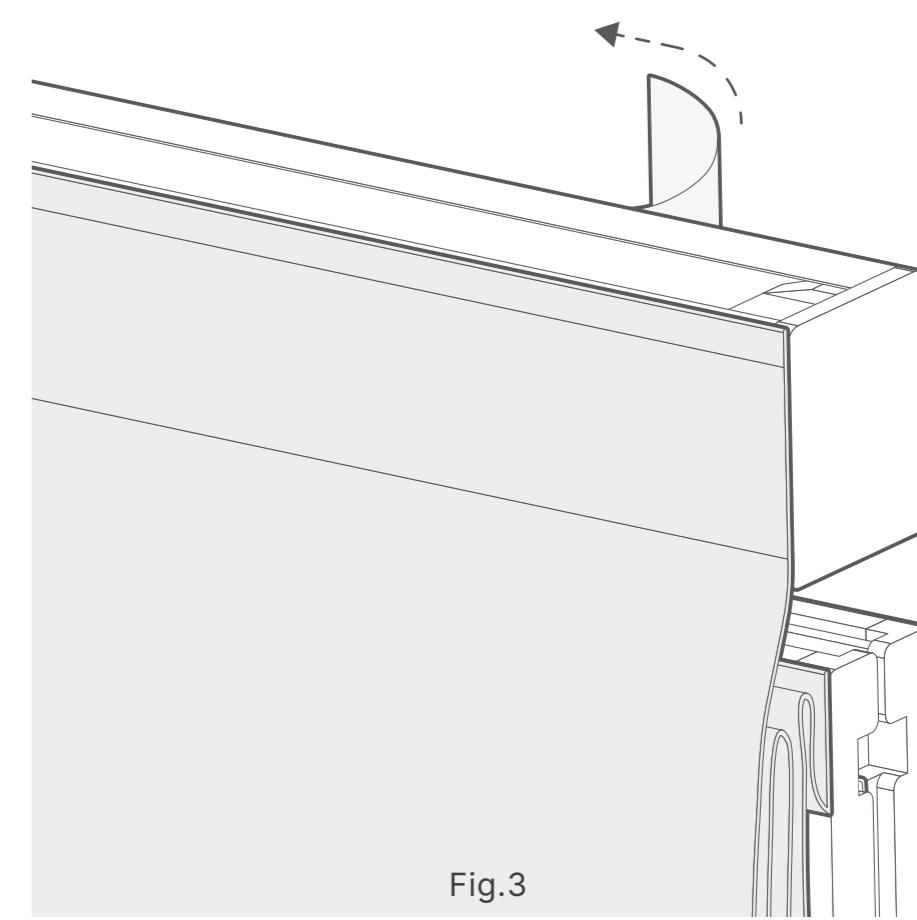


Peel the cover from the adhesive strip on the back of the top rail (Fig.3). **Only remove the cover from the top rail for now, leave the bottom rail covered.**

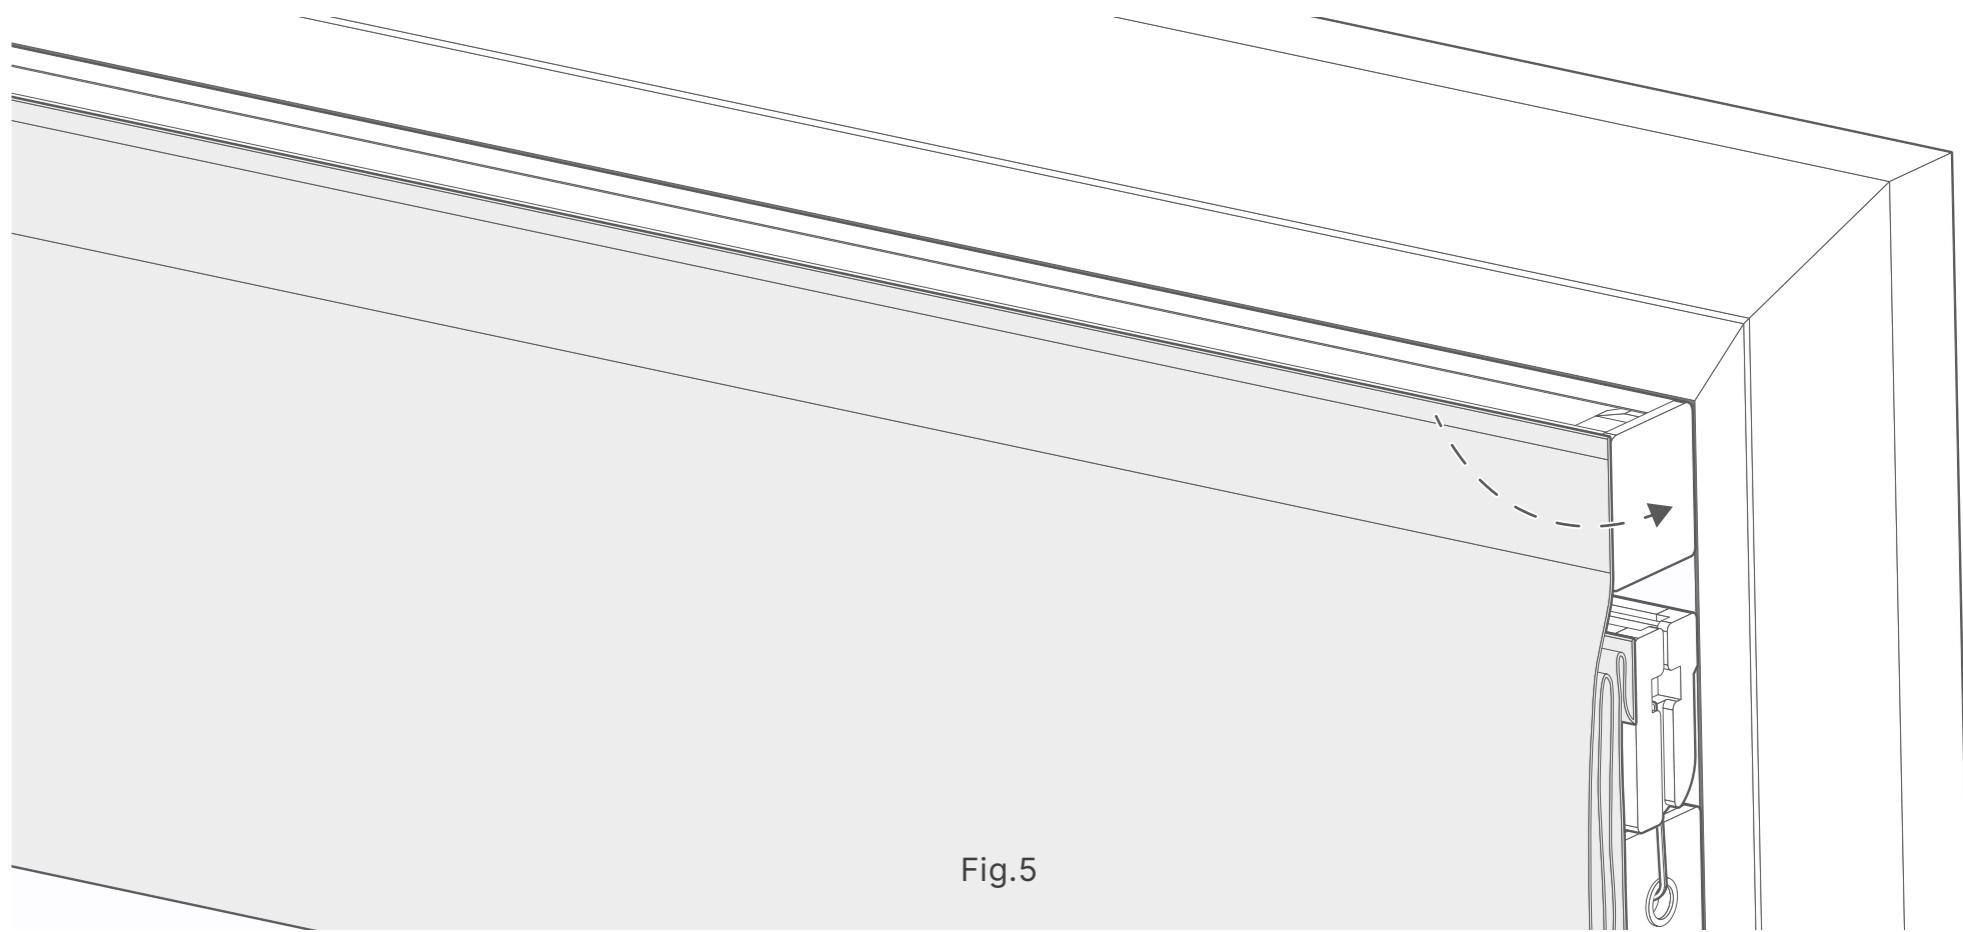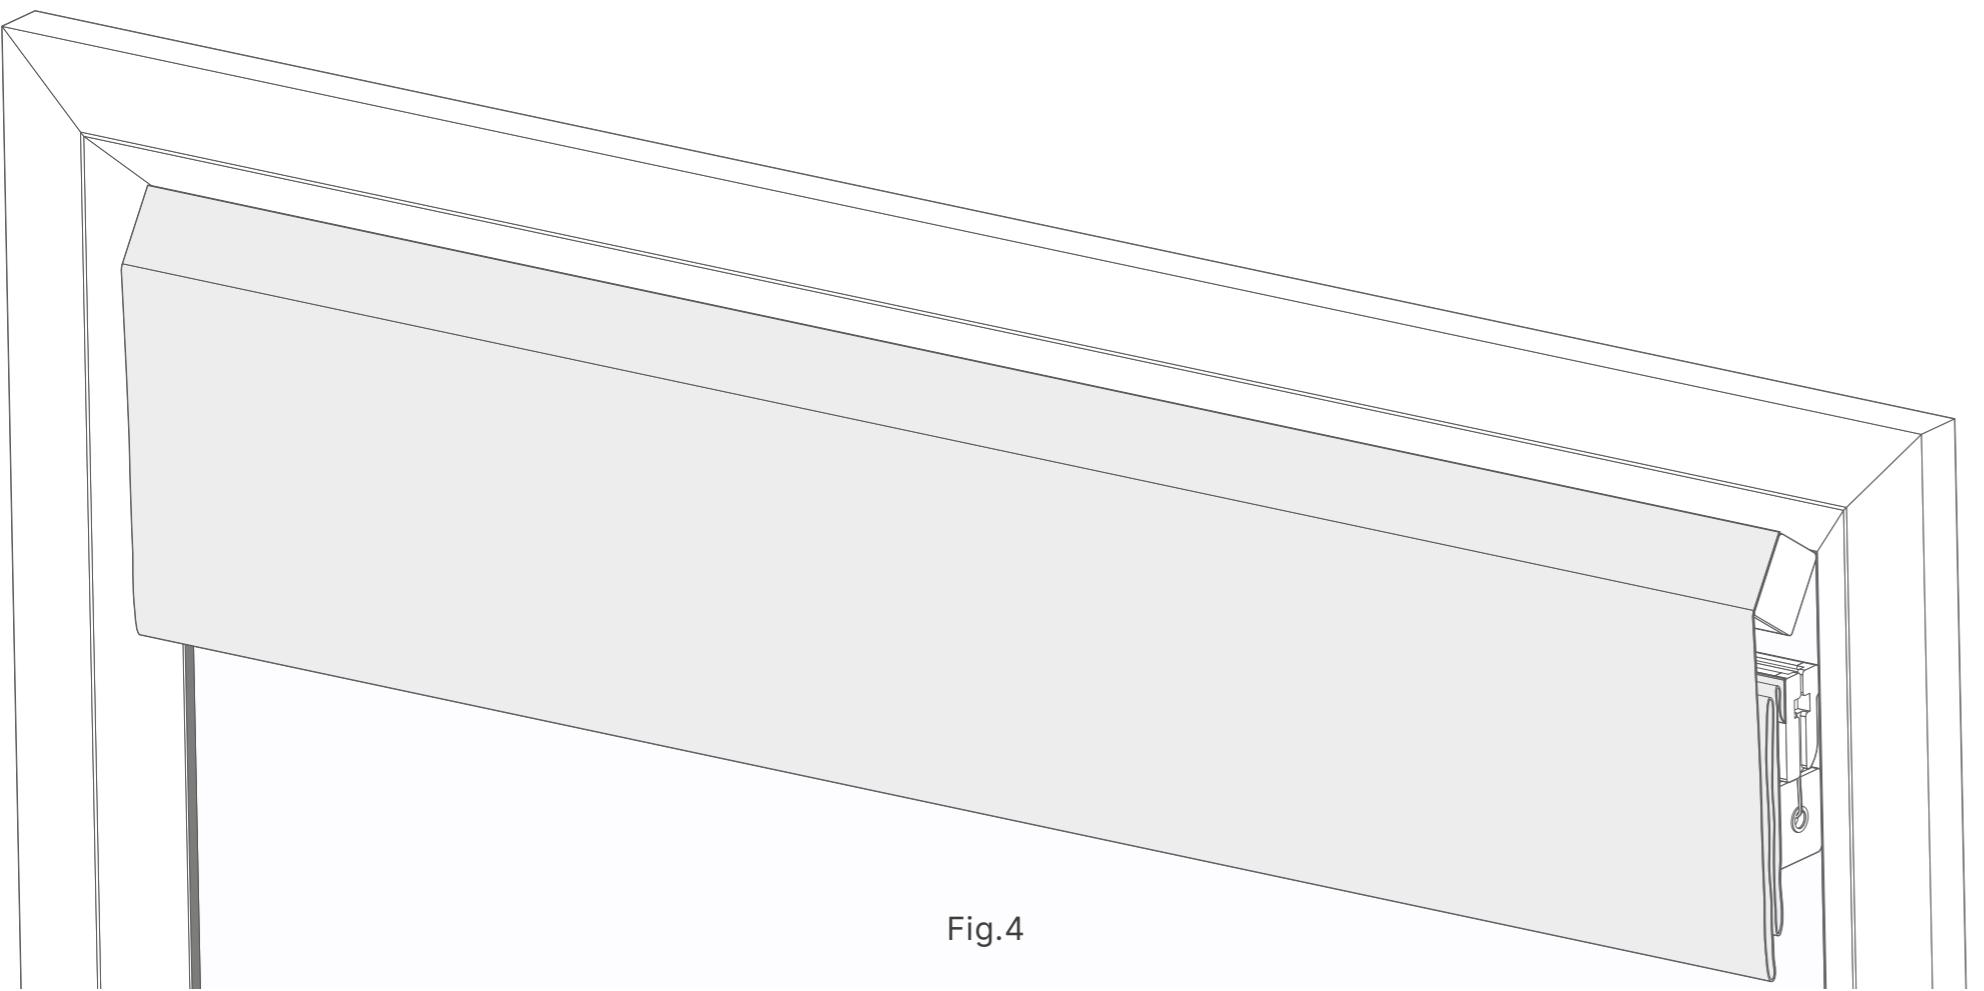

Line up the top rail with the top of the glass - hold it at an angle to begin with, to avoid accidentally sticking it to the glass whilst you straighten it up (Fig.4). When you're happy that it's straight and level, press the rail back against the glass and hold for around 30 seconds to give it time to adhere (Fig.5).



Note that after 12 hours the adhesive will be fully cured.



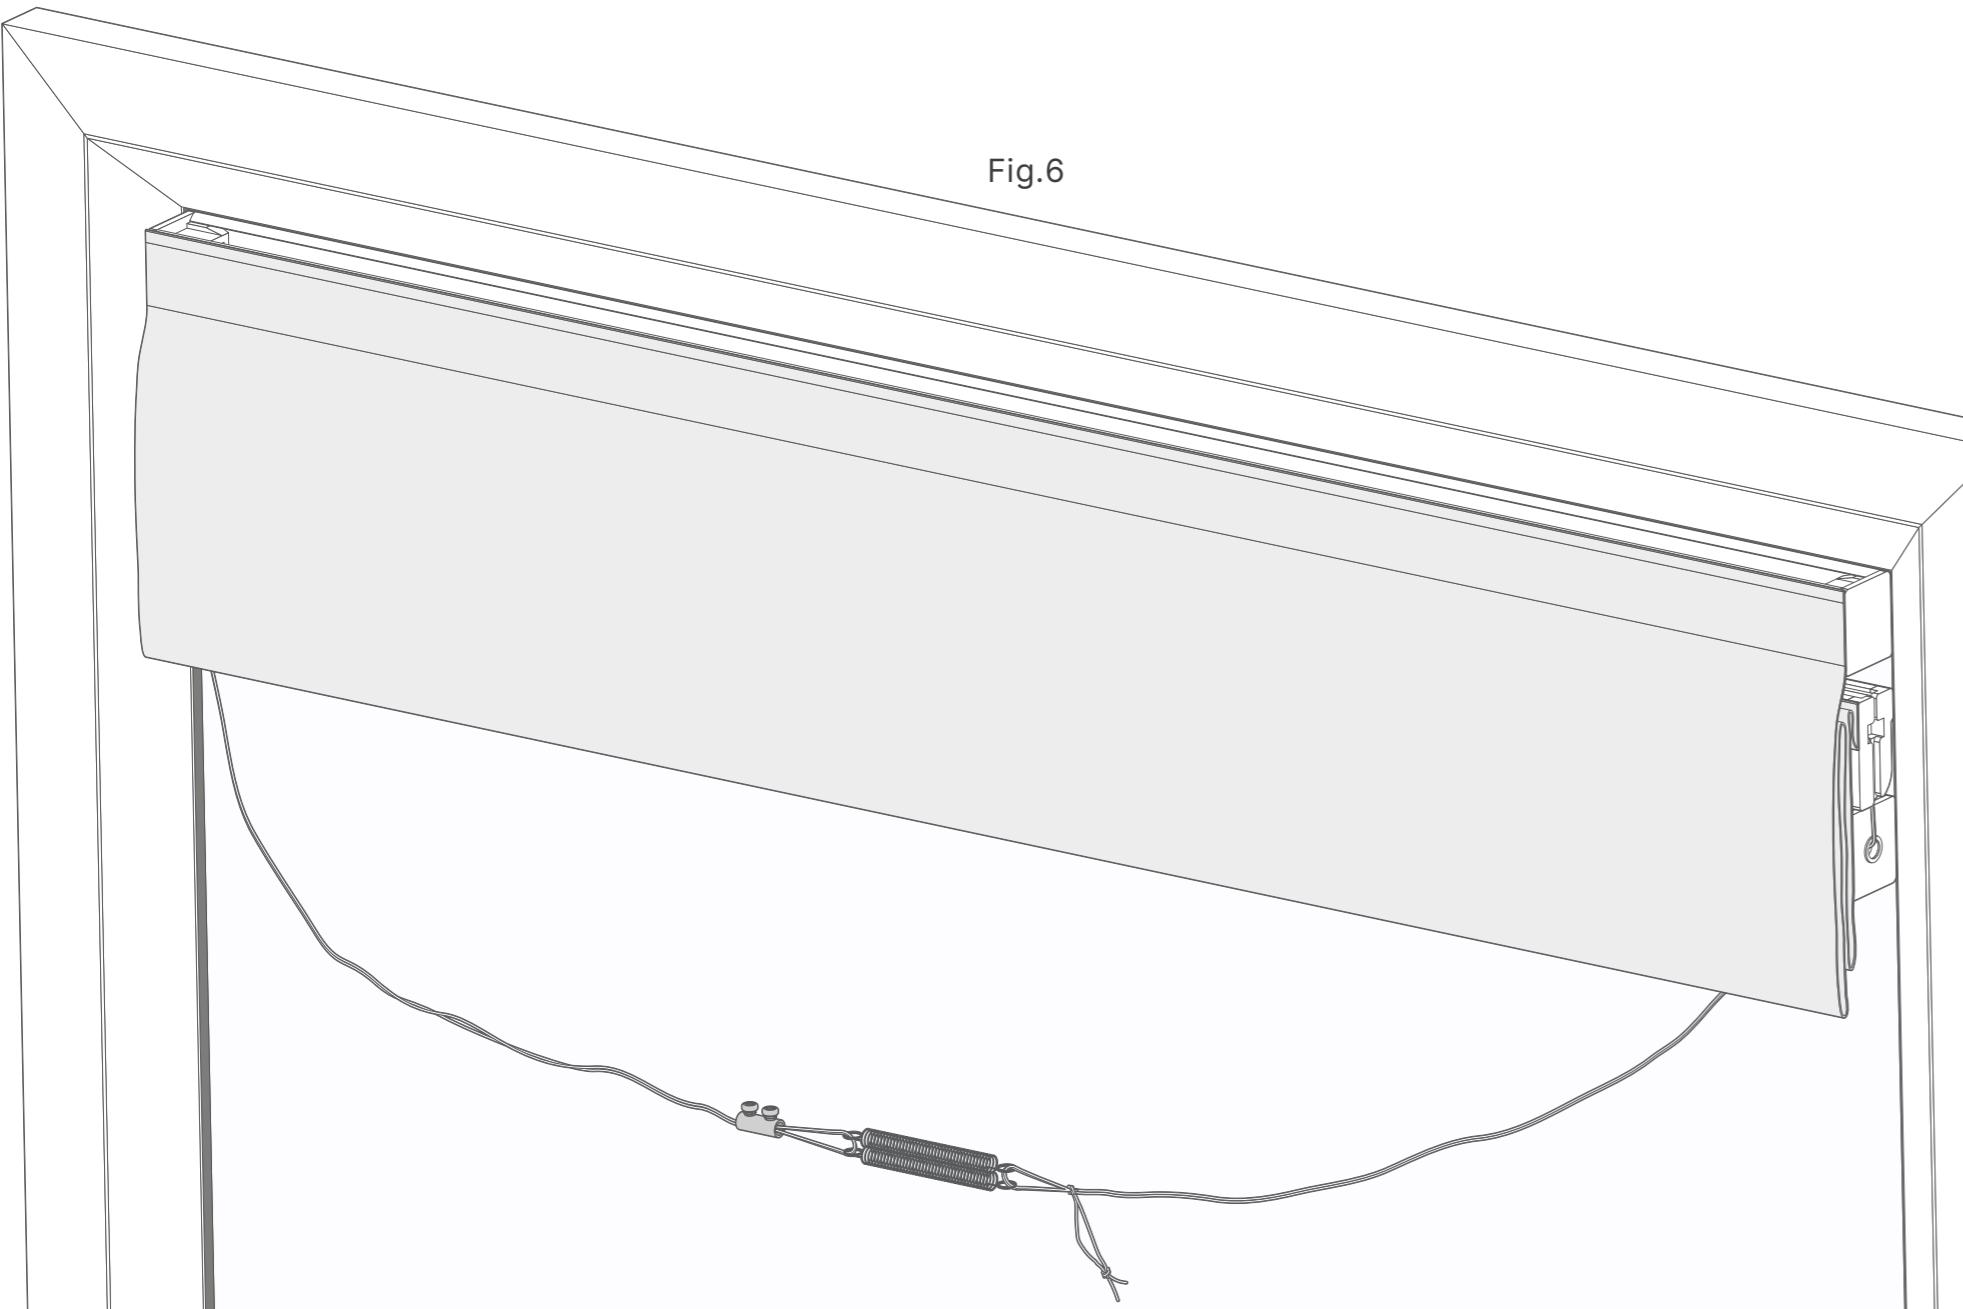

The tension cords are knotted to protect them in transit, so you'll need to untie and release them before fitting the bottom rail (Fig.6).

Make sure that you do not untie the cords from the double spring to which they're attached.

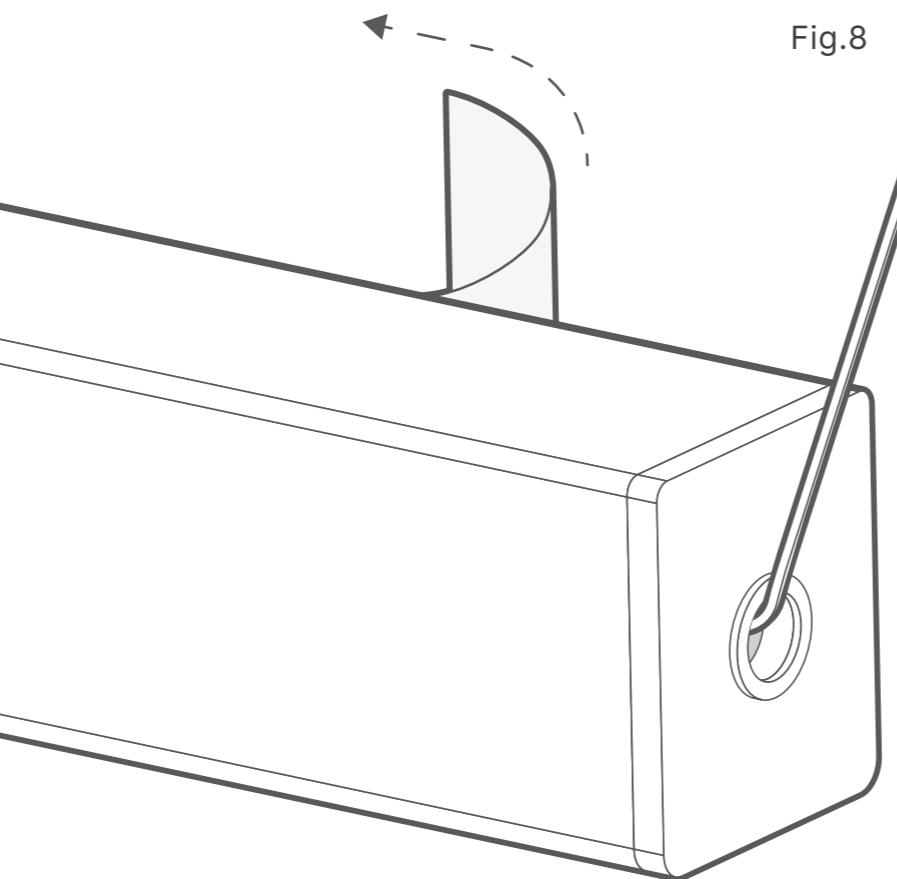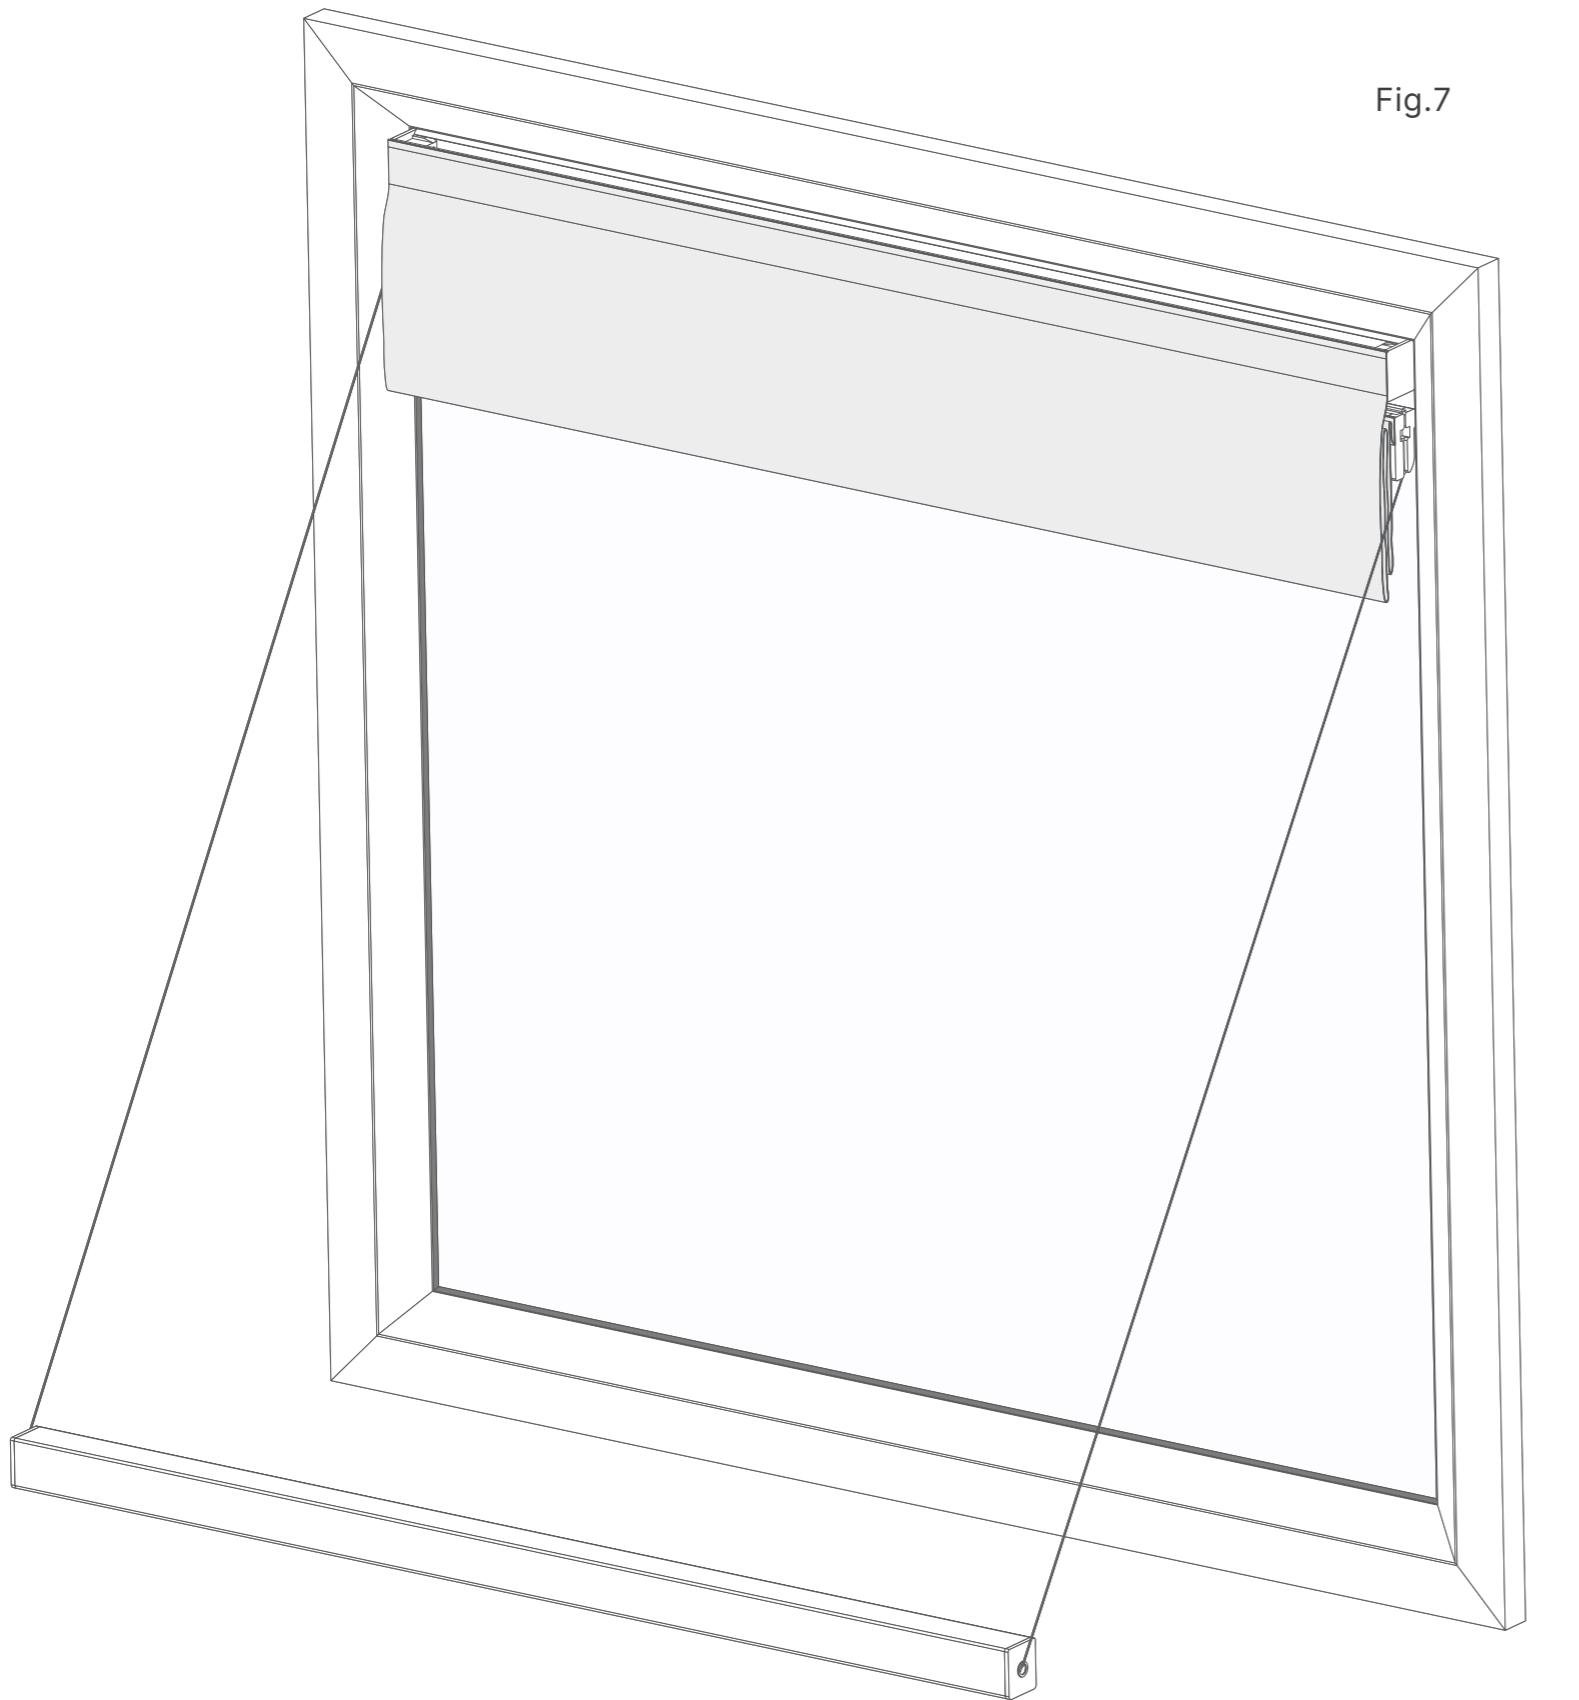

Hold the blind steady and pull the bottom rail down to the bottom of the window (Fig.7).

Remove the cover from the adhesive strip on the back of the bottom rail (Fig.8).

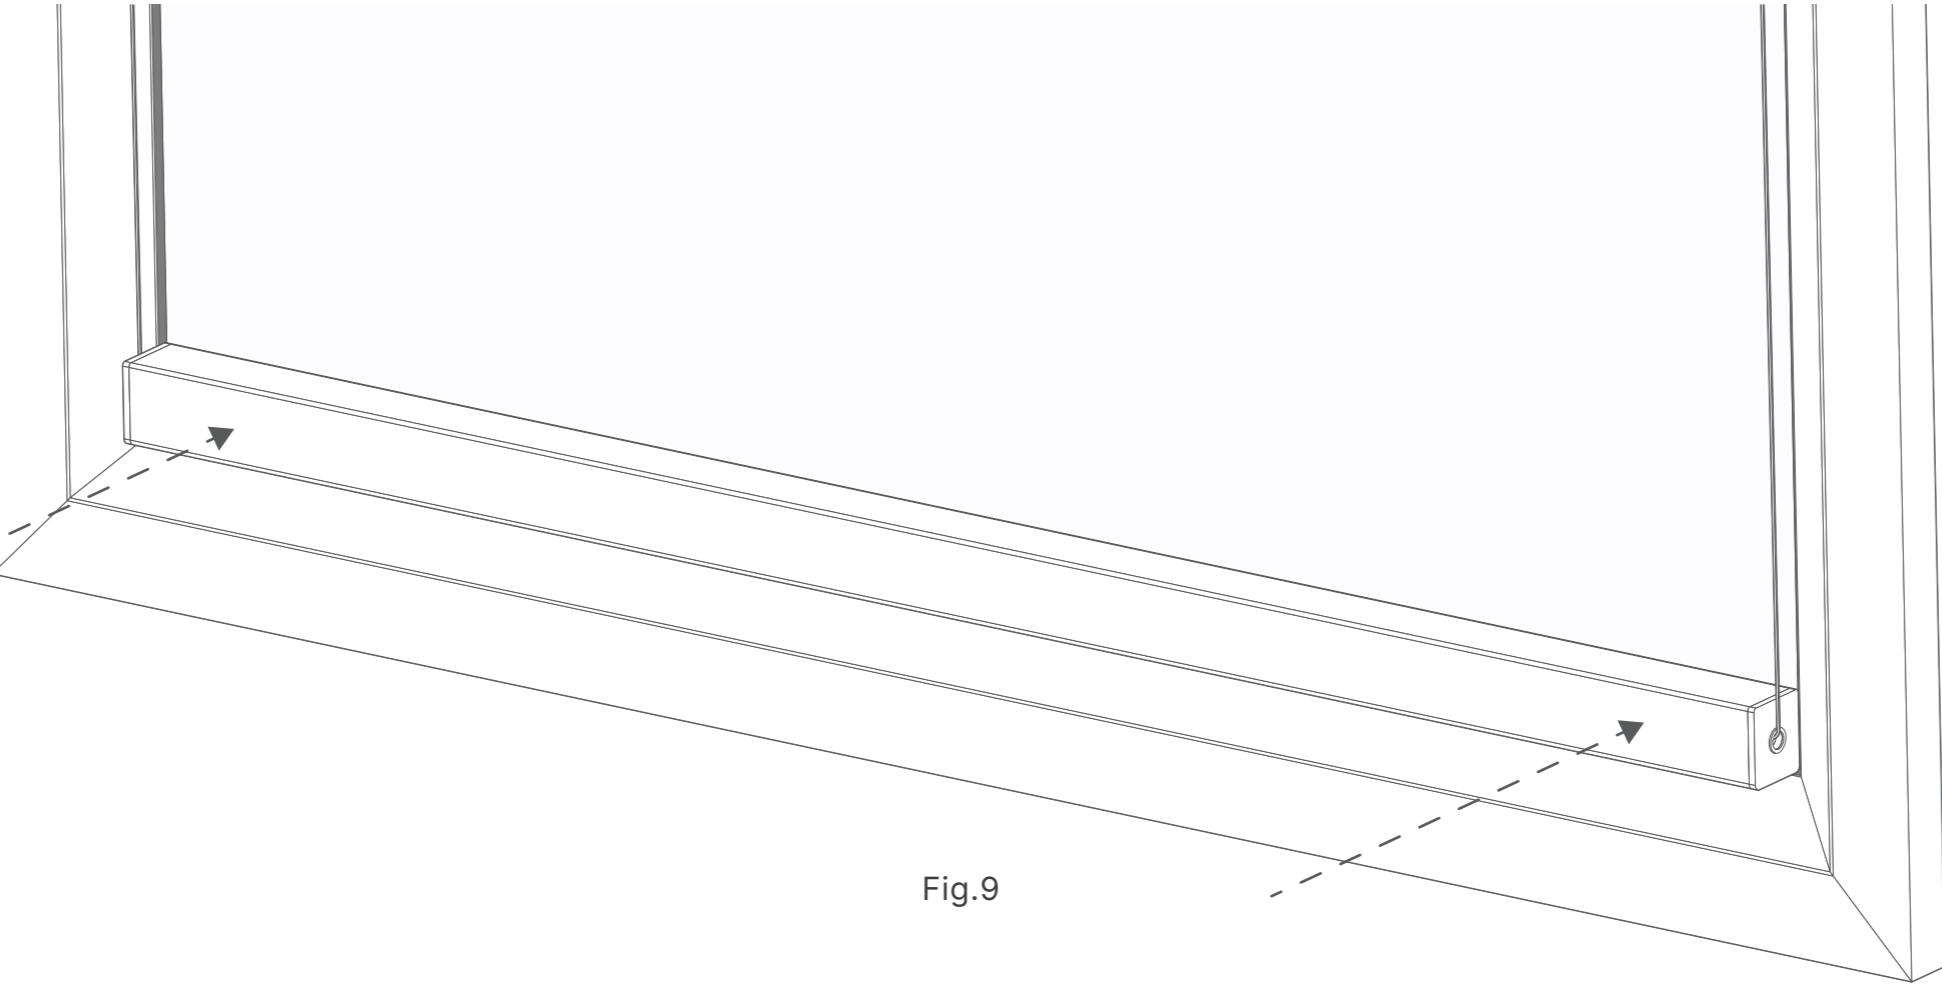


Fig.9

Press the bottom bar against the glass and hold in position for around 30 seconds to give it time to adhere fully (Fig.9).

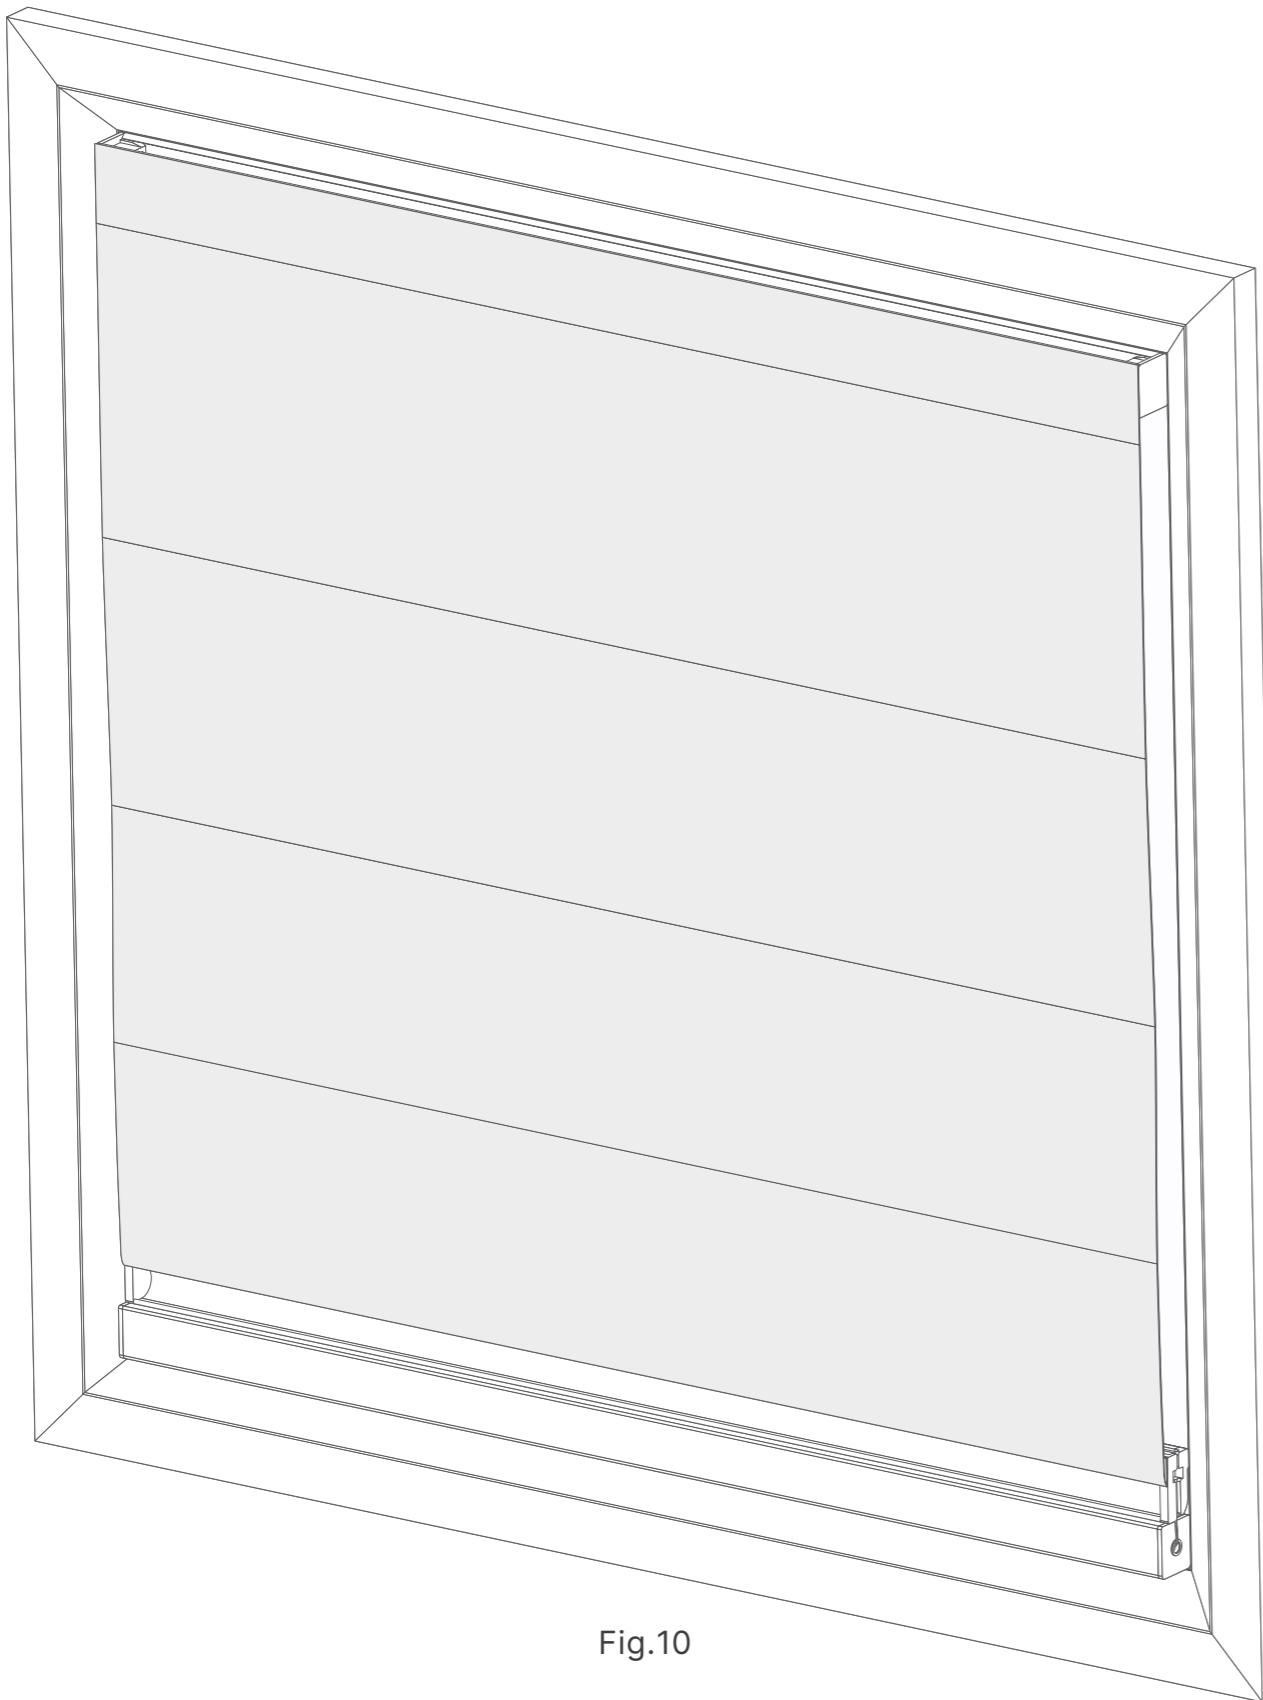


Fig.10

Use the central bar, to which the bottom of the fabric is attached, to raise and lower the fabric (Fig.10). Raise or lower your blind to any height, and cord tension will keep it in position.

And that's it! Your beautiful new blind is installed and ready to enjoy.