

## Designed for DIY...

Our Vertical Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Featuring our innovative Stick2Go no-drill fitting system, you can have these blinds installed in minutes, with no tools or messy DIY.


**Please read each page of this guide carefully during installation, following along one step at a time.**

---


## Upgrades & Variations...

If you did not choose our Stick2Go upgrade, just click or tap this link to find your installation guide:


**[Standard Vertical Blinds >>](#)**

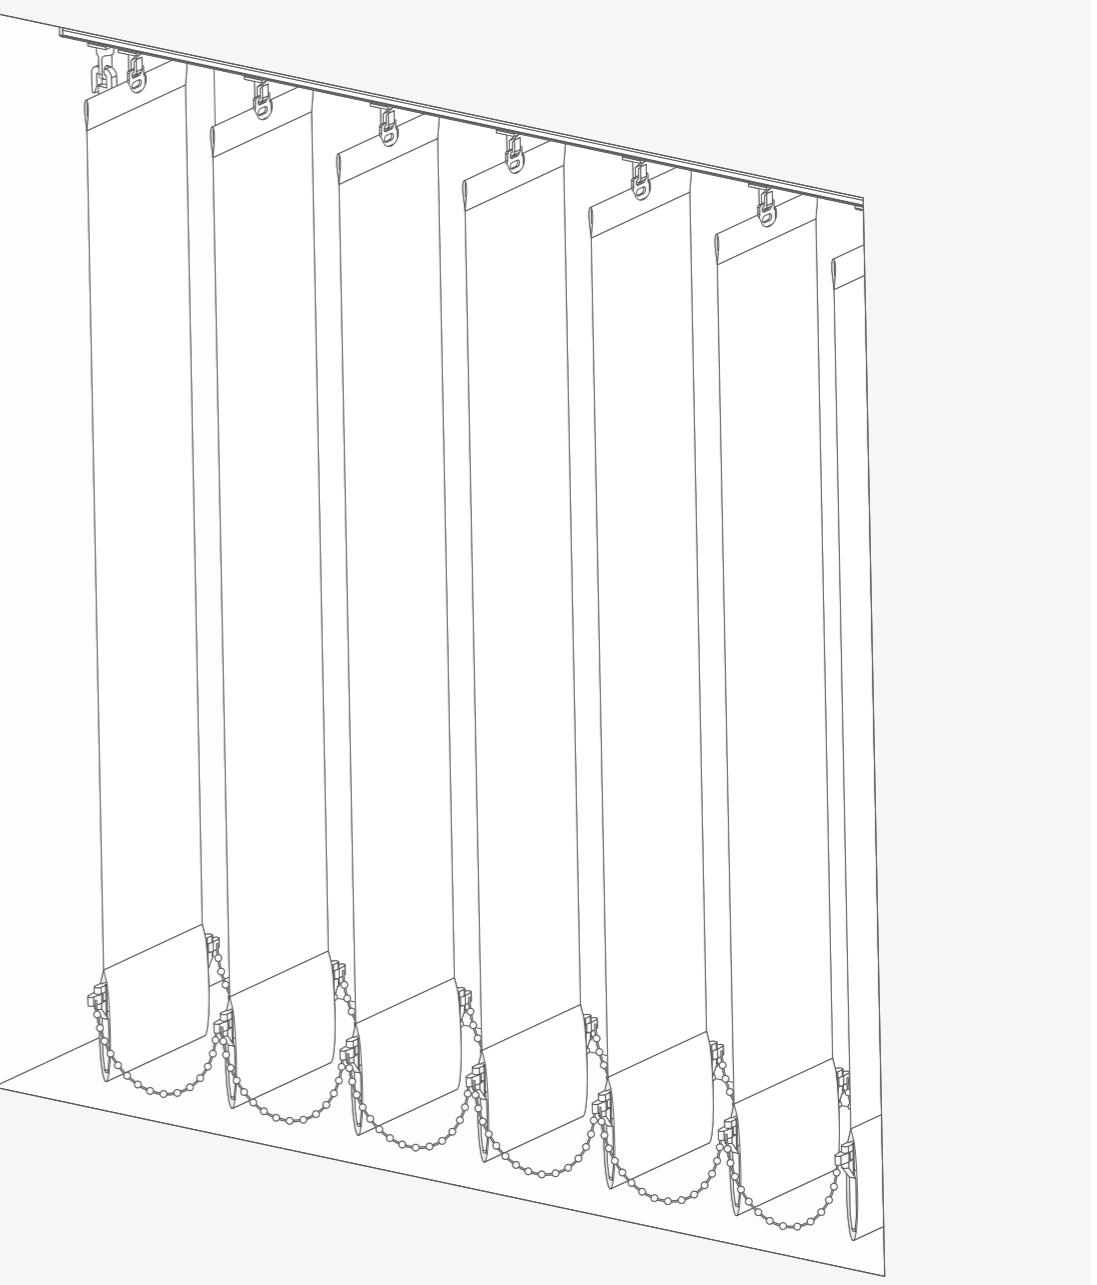


## Parts contained in your order...

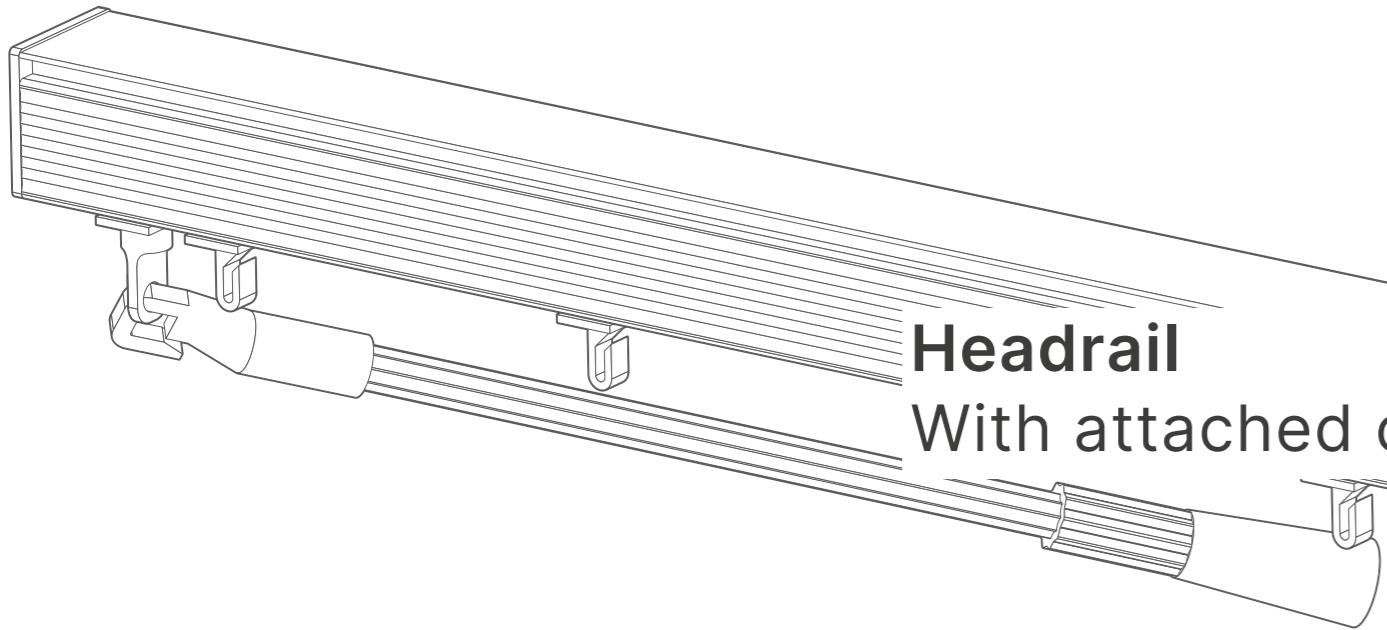


**Headrail**  
With attached control wand

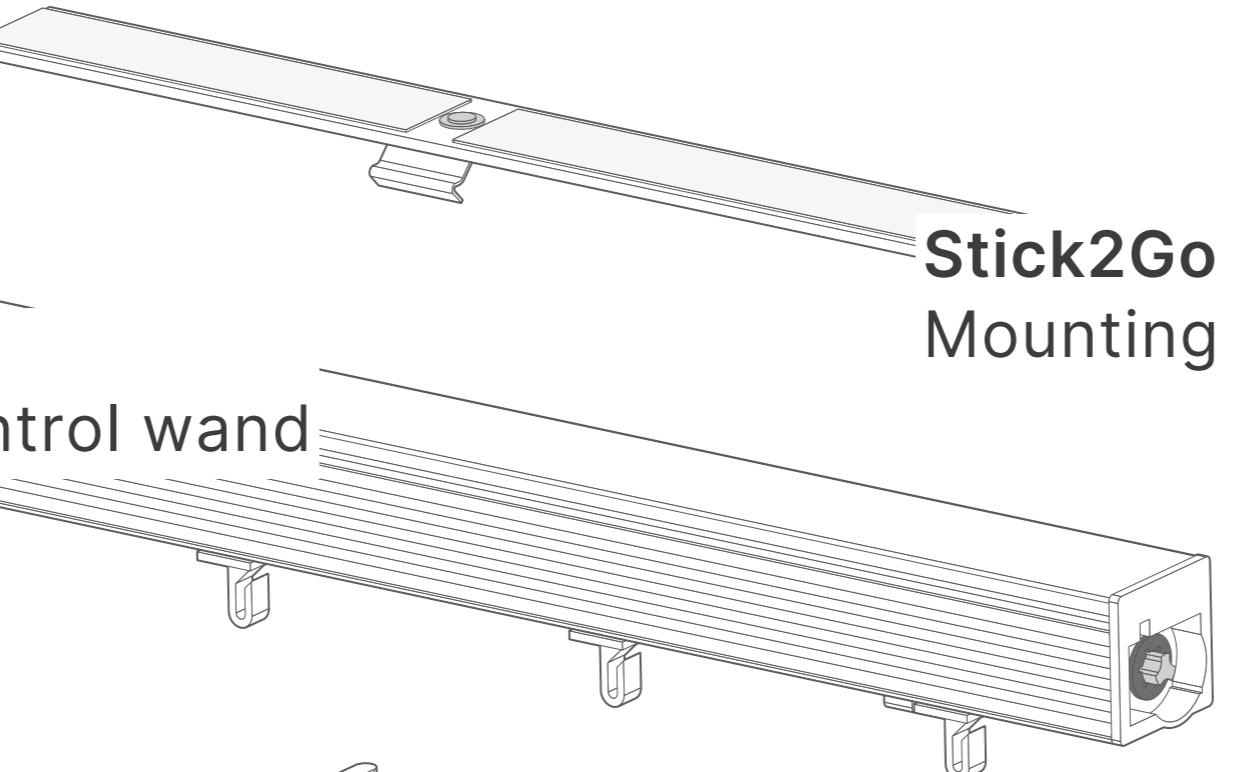


**Stick2Go Rail**  
Mounting brackets attached

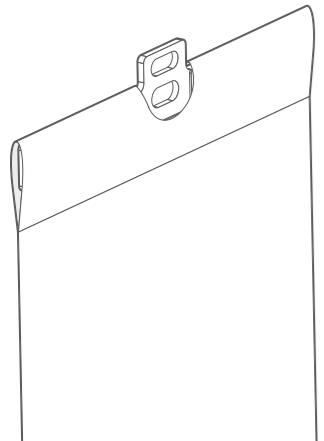

**Fabric Louvres (Coiled)**  
Multiple, based on blind width



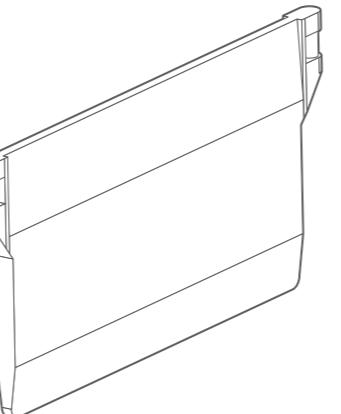


**Louvre Weights**  
x1 per louver

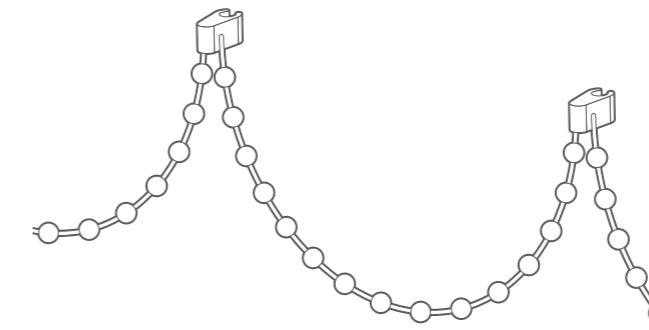

**Stabilising Chain (Coiled)**  
Not provided for blinds  
with chainless weights



## SECTION 2 | INSTALLING THE STICK2GO RAIL

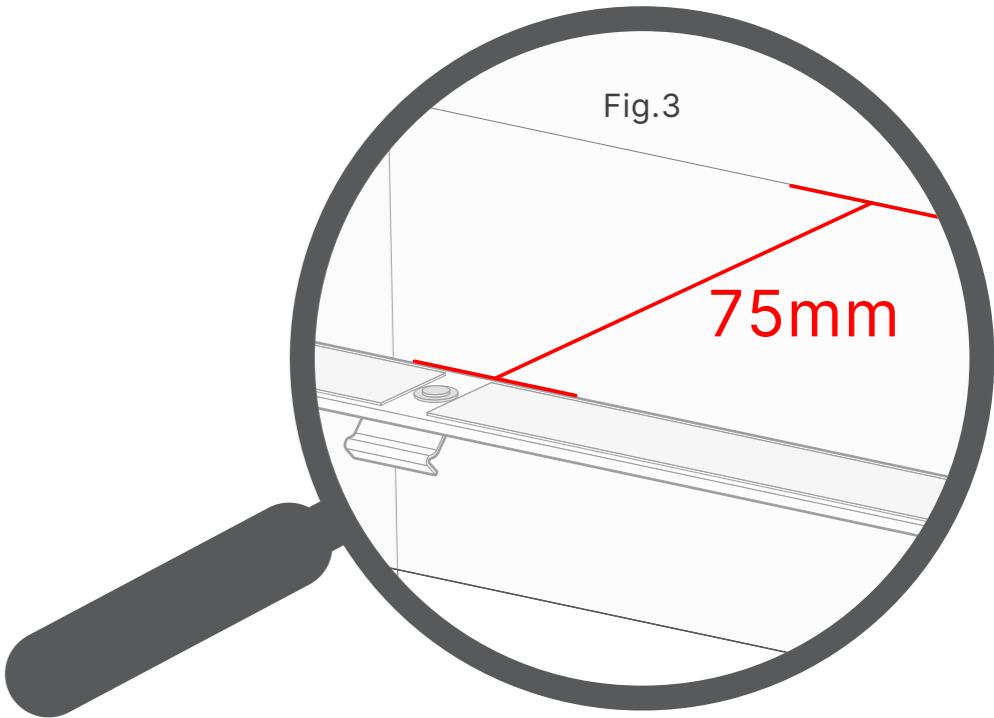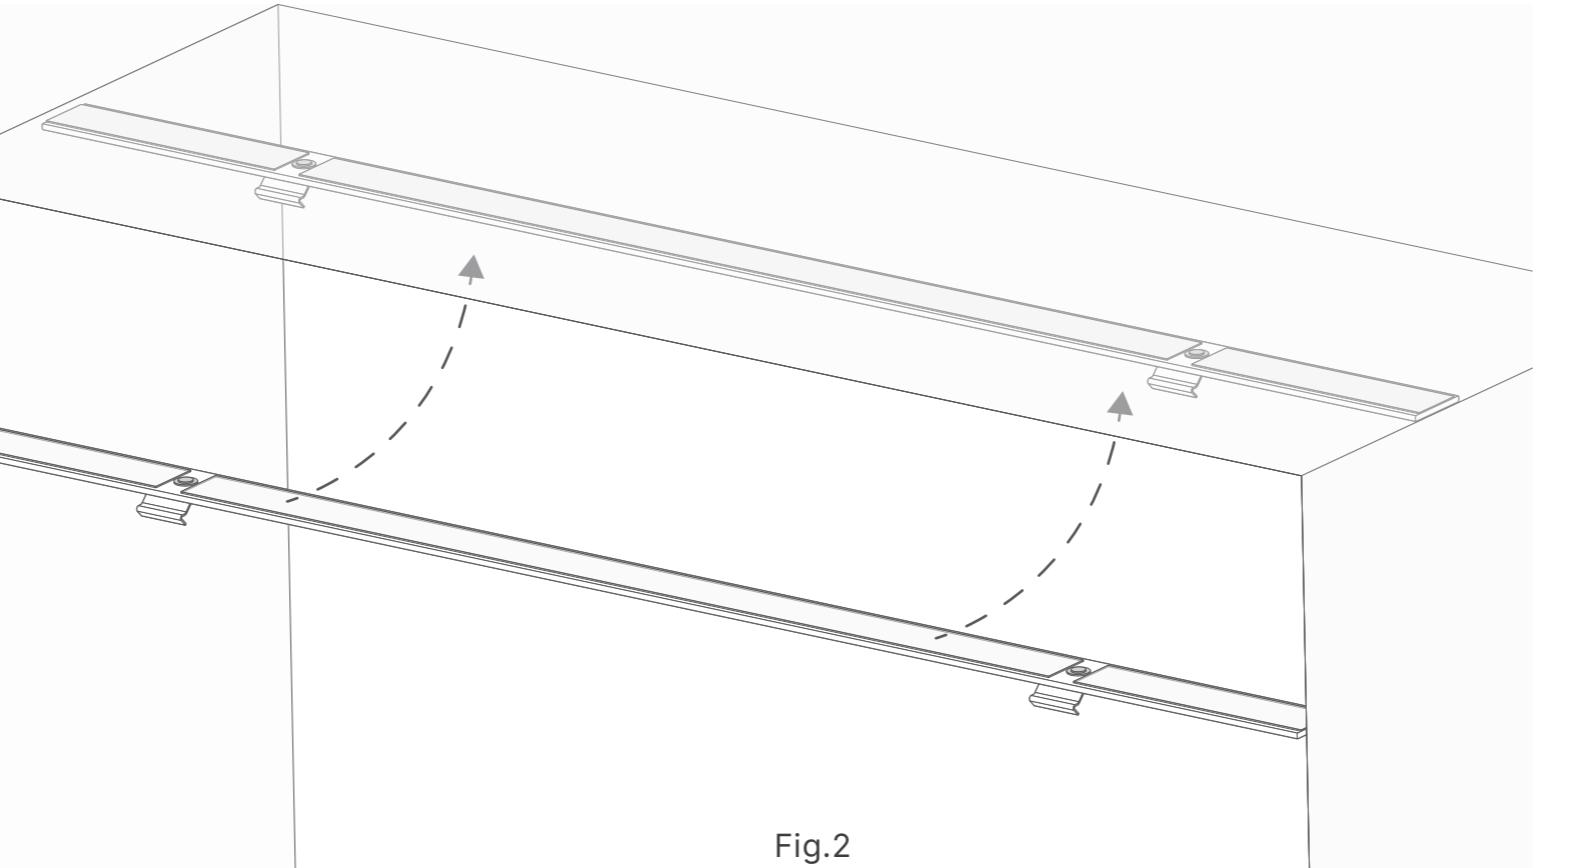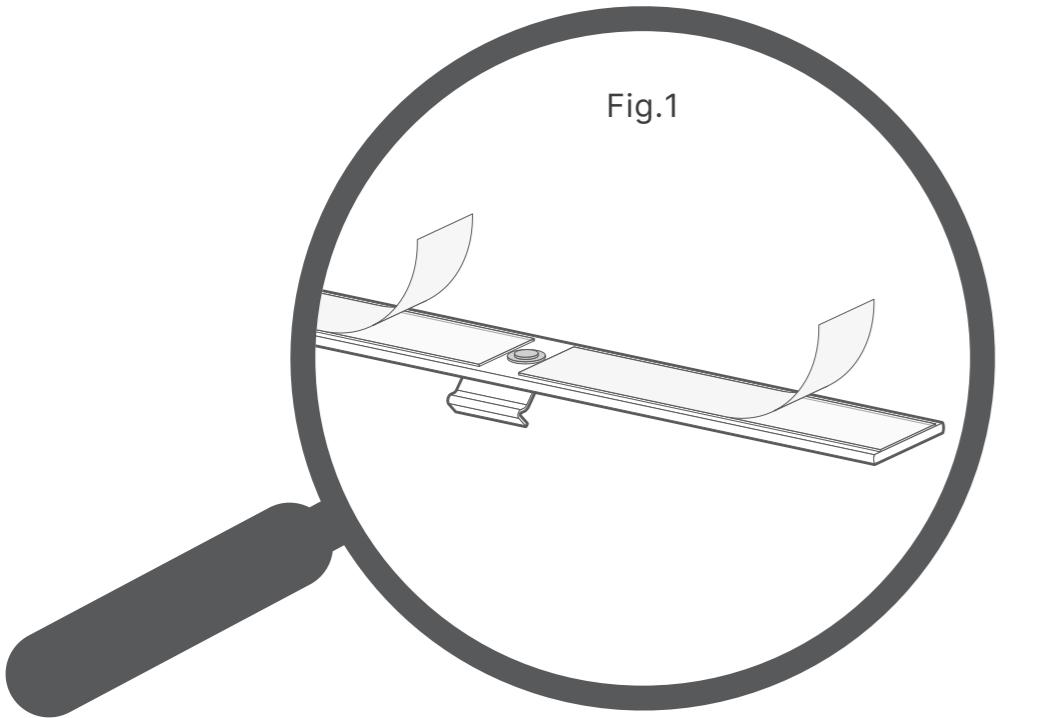

Peel the covers from the adhesive strips along the top of the Stick2Go rail (Fig.1). Raise the rail into the recess and carefully press into place, making sure the rail is straight (Fig.2). The brackets should be located at least 75mm from the back of the recess, or any obstructions that might catch the back of the blind (Fig.3). Make sure that the rail is making contact with the top of the recess all the way along.


**Note that after 12 hours the adhesive will be fully cured.**




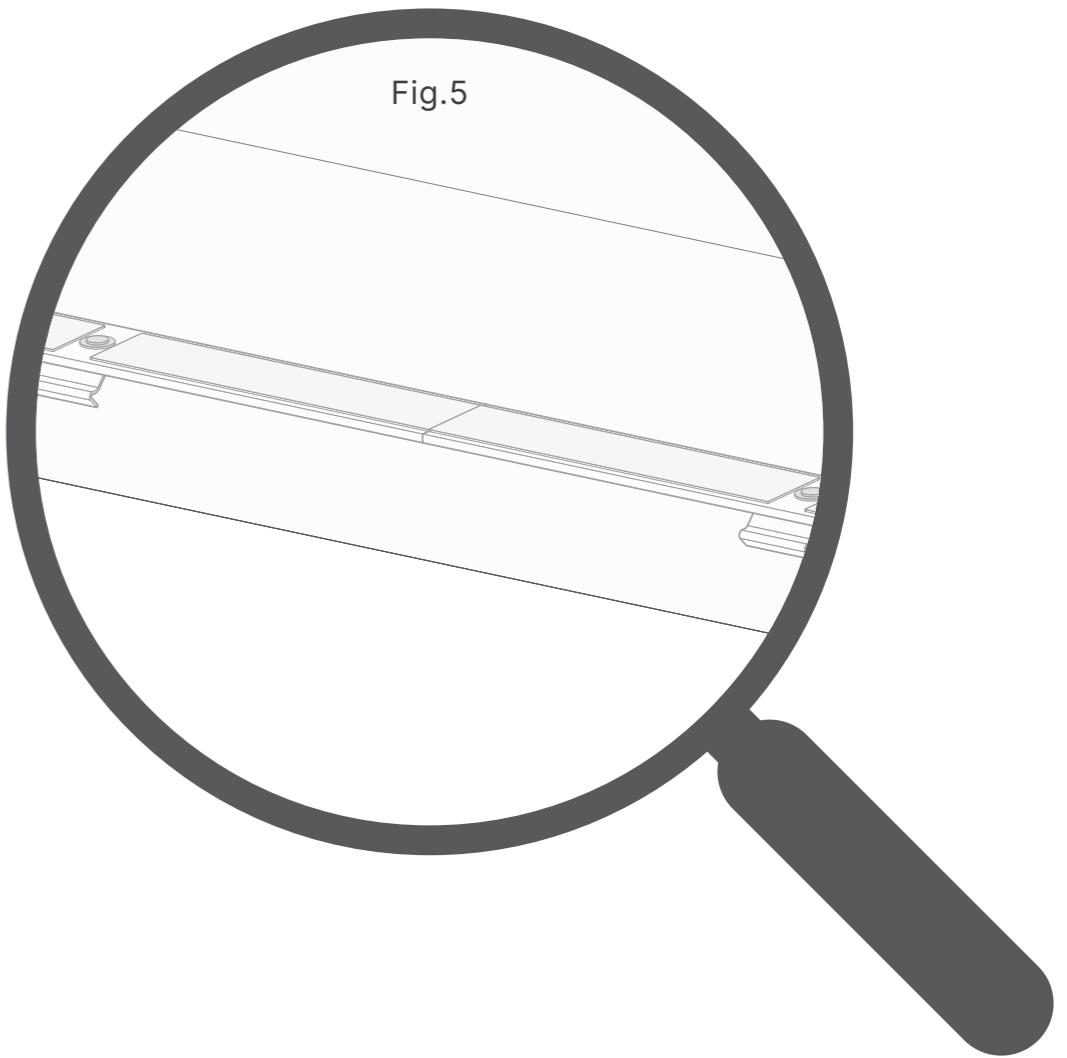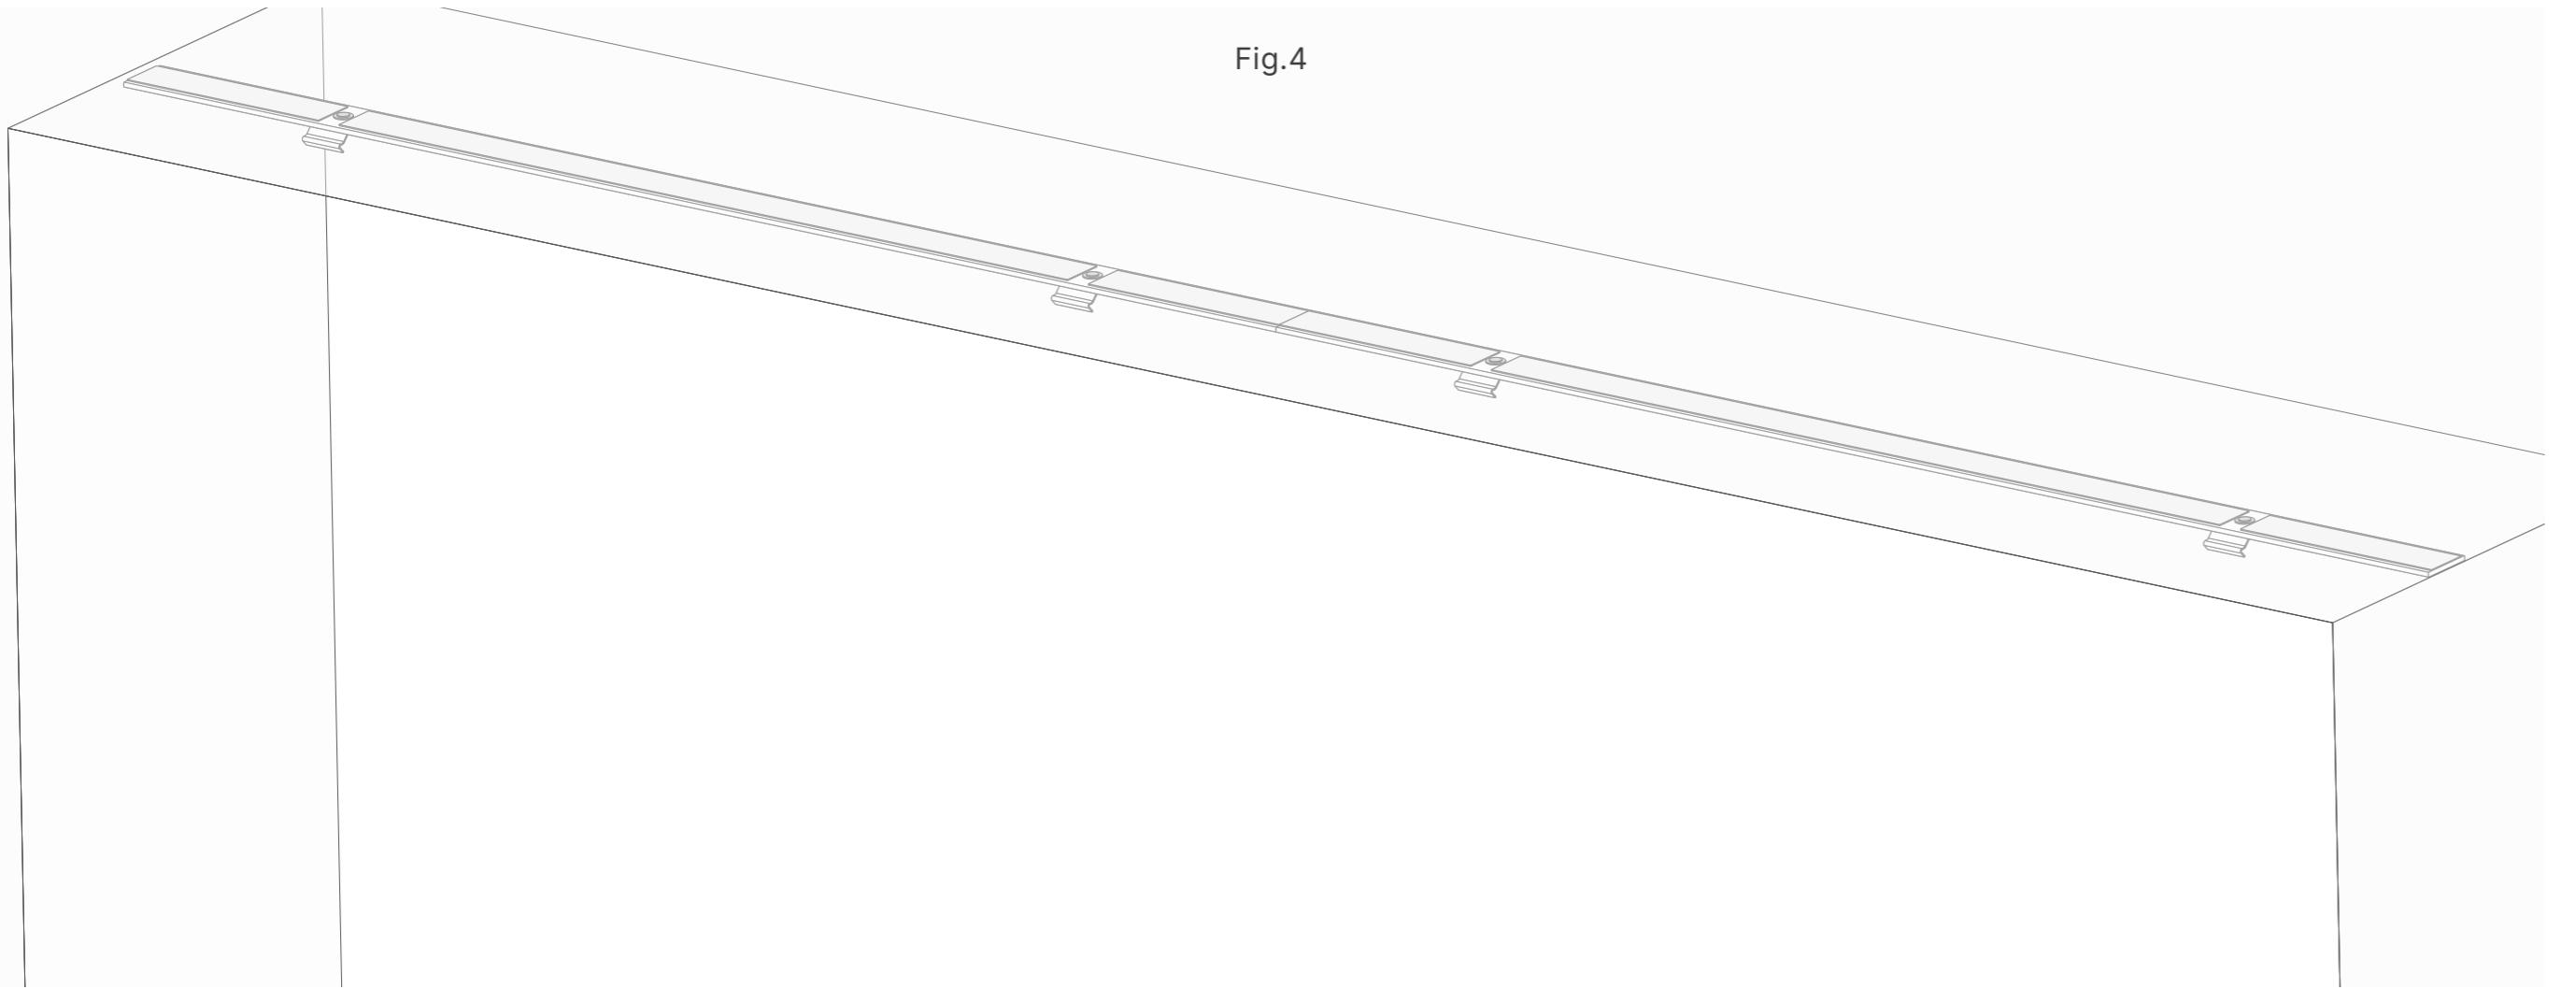


If you ordered a wider blind, you'll find that the width has been split into two and you've received 2 Stick2Go rails and 2 blind headrails. Installation is just as easy as a single rail, simply fit the 2 rails into the recess, facing the same way, butted up together (Fig.4 / 5).


## SECTION 3 | INSTALLING THE BLIND'S HEADRAIL

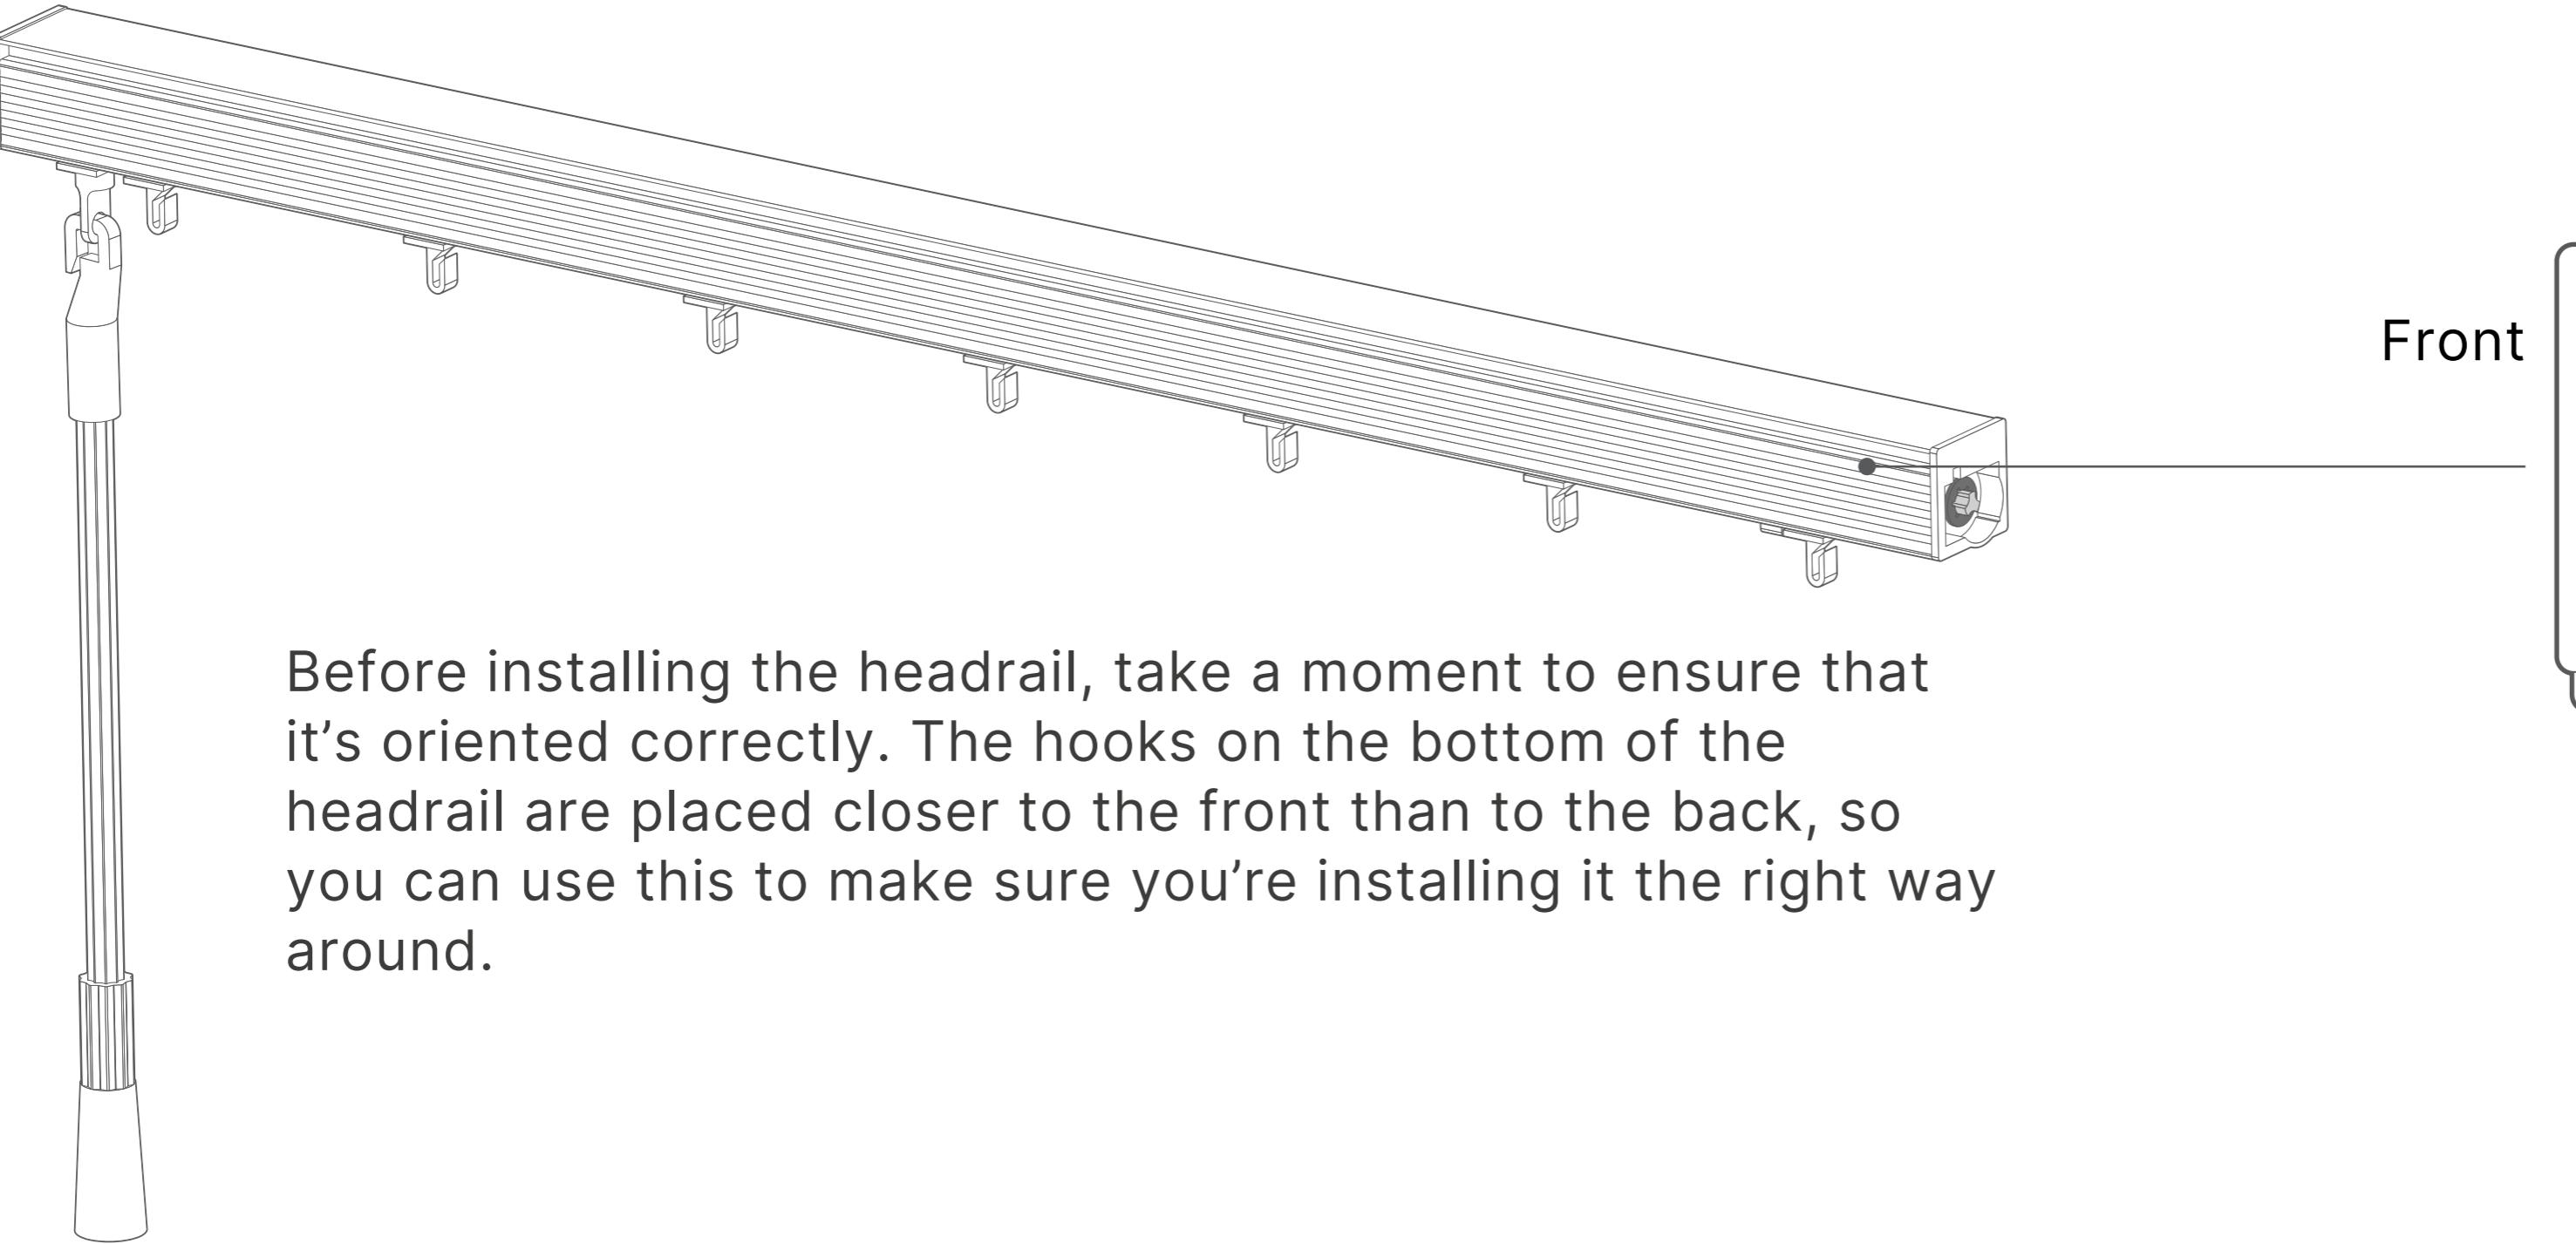

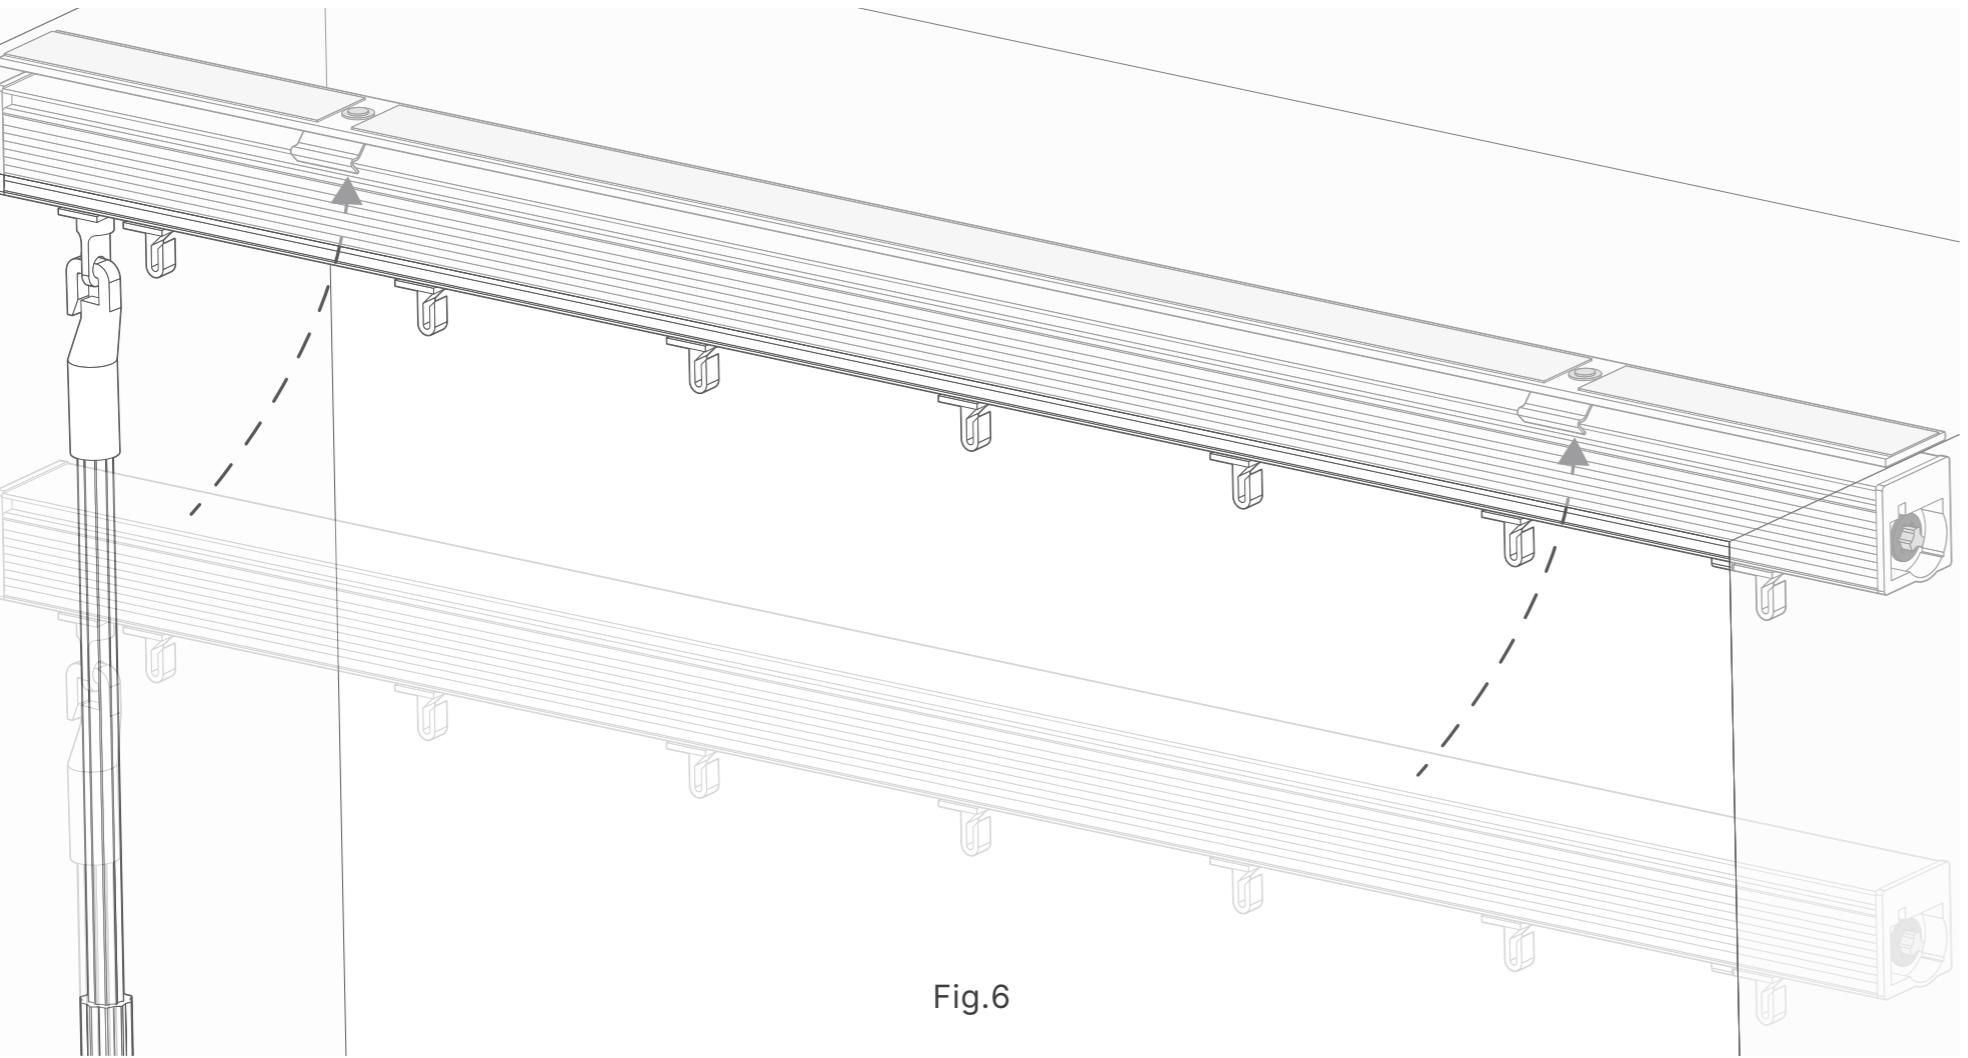


Raise the blind's headrail to the Stick2Go rail (Fig.6). Hook the lip at the front of the headrail into the front hook of the bracket (Fig.7), then push up against the brackets until the rail snaps into place.

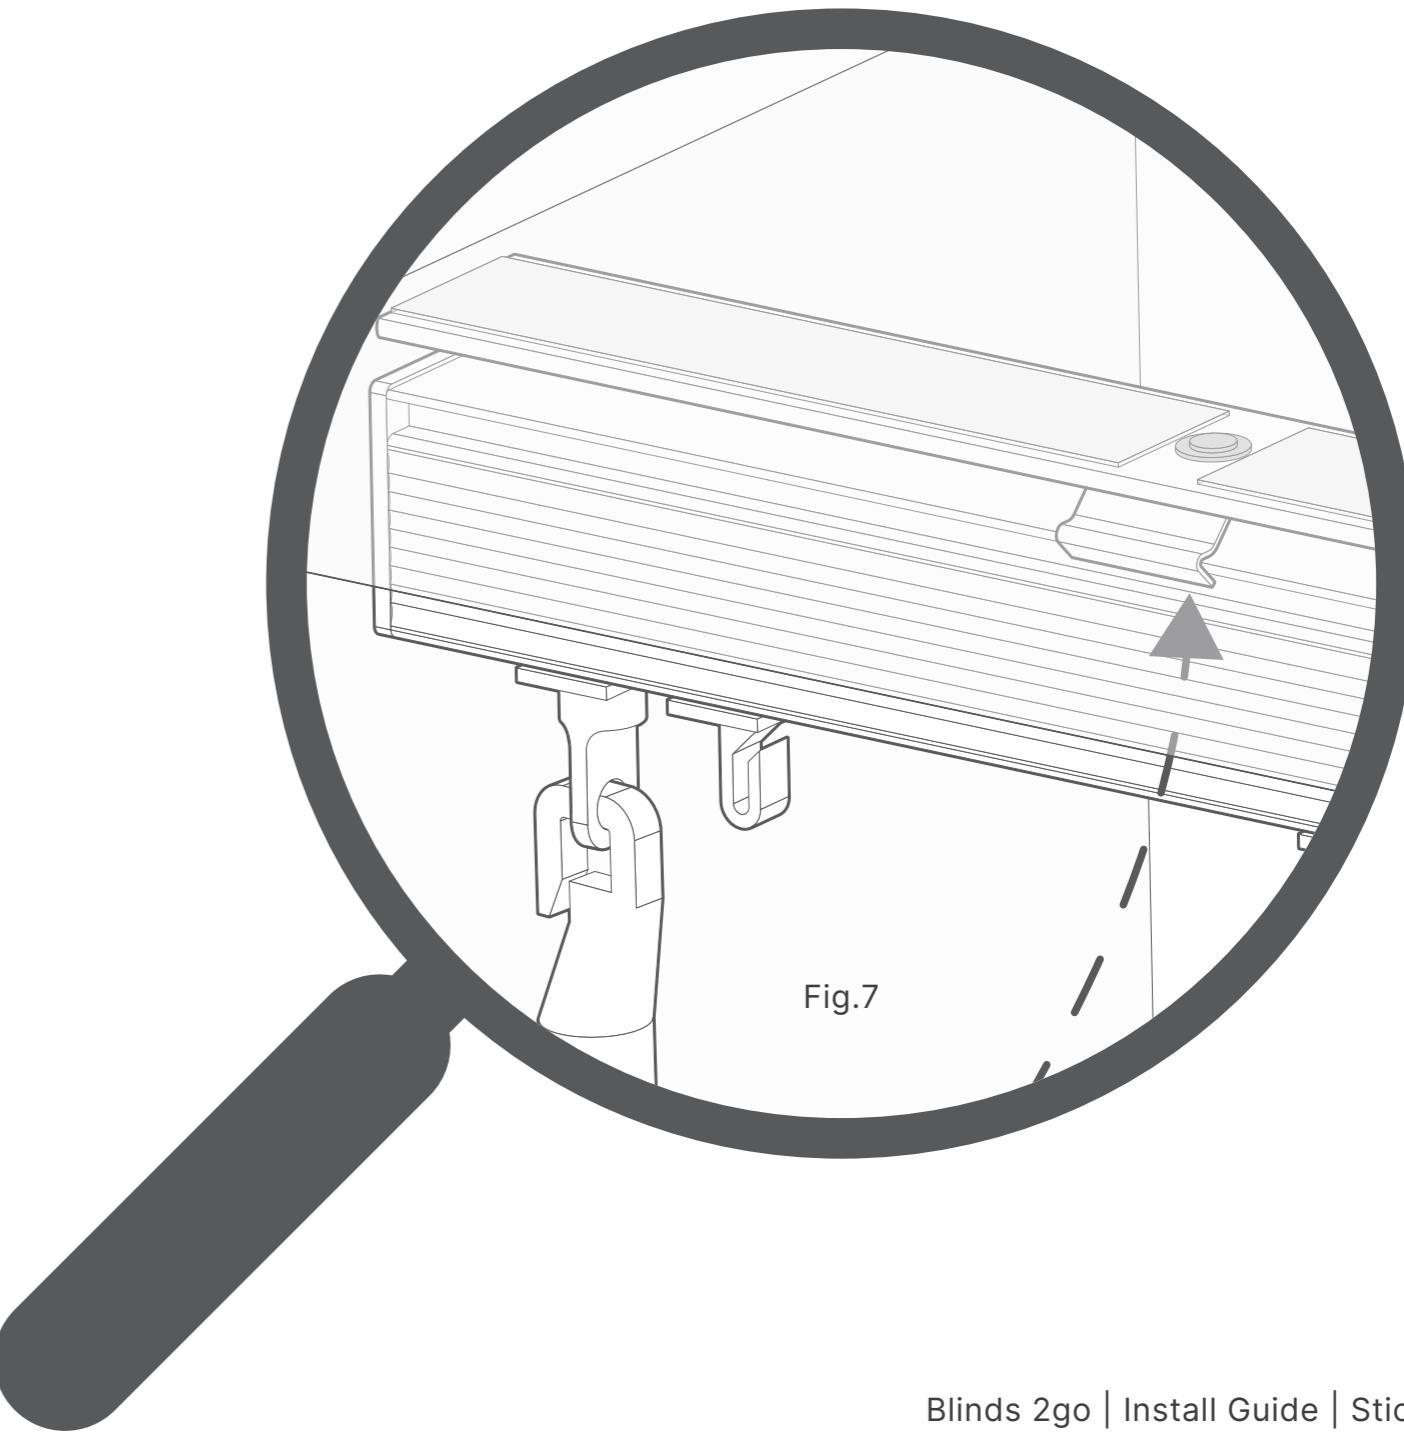

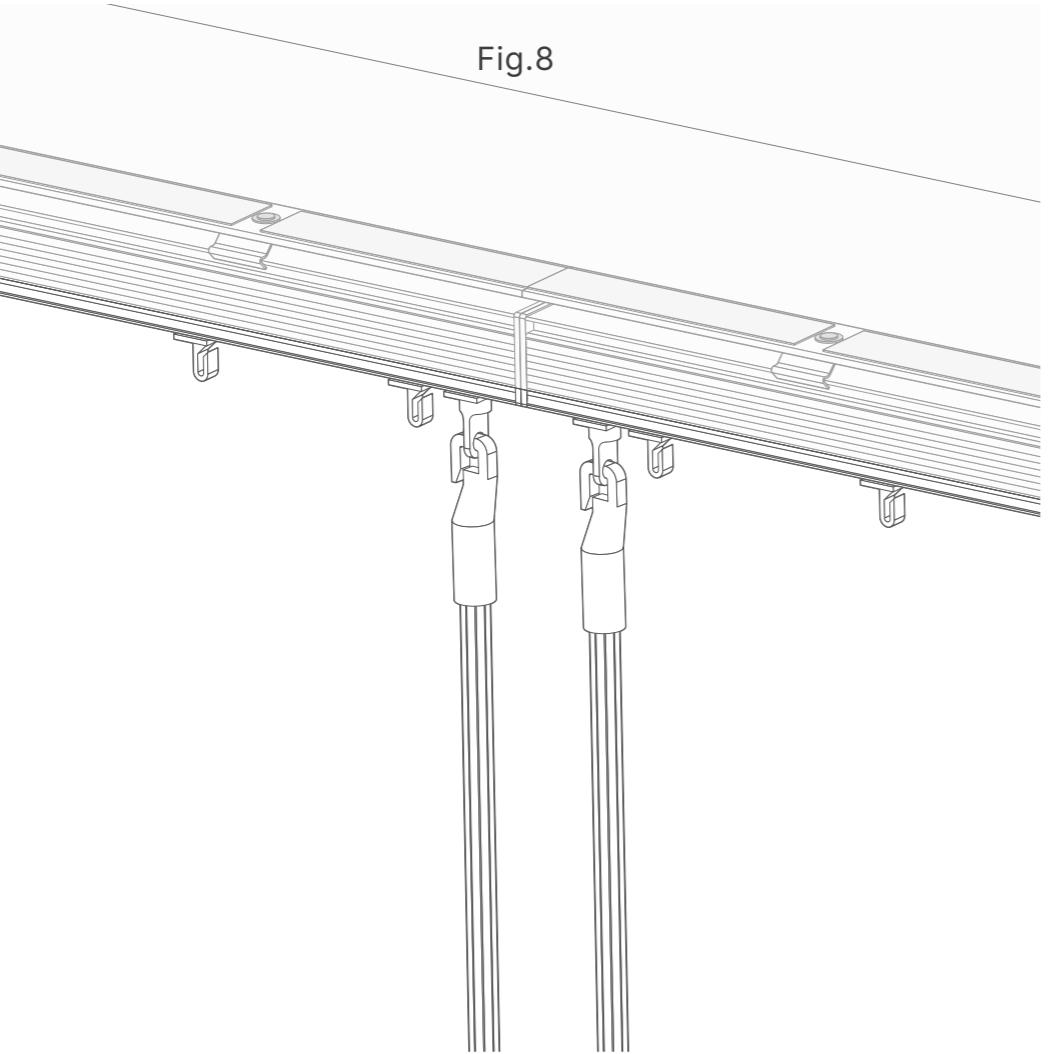

Wider blinds supplied with 2 headrails are fitted in exactly the same way - note that in this case the control wands will sit beside each other in the centre of the window (Fig.8).

## SECTION 4 | INSTALLING THE LOUVRES

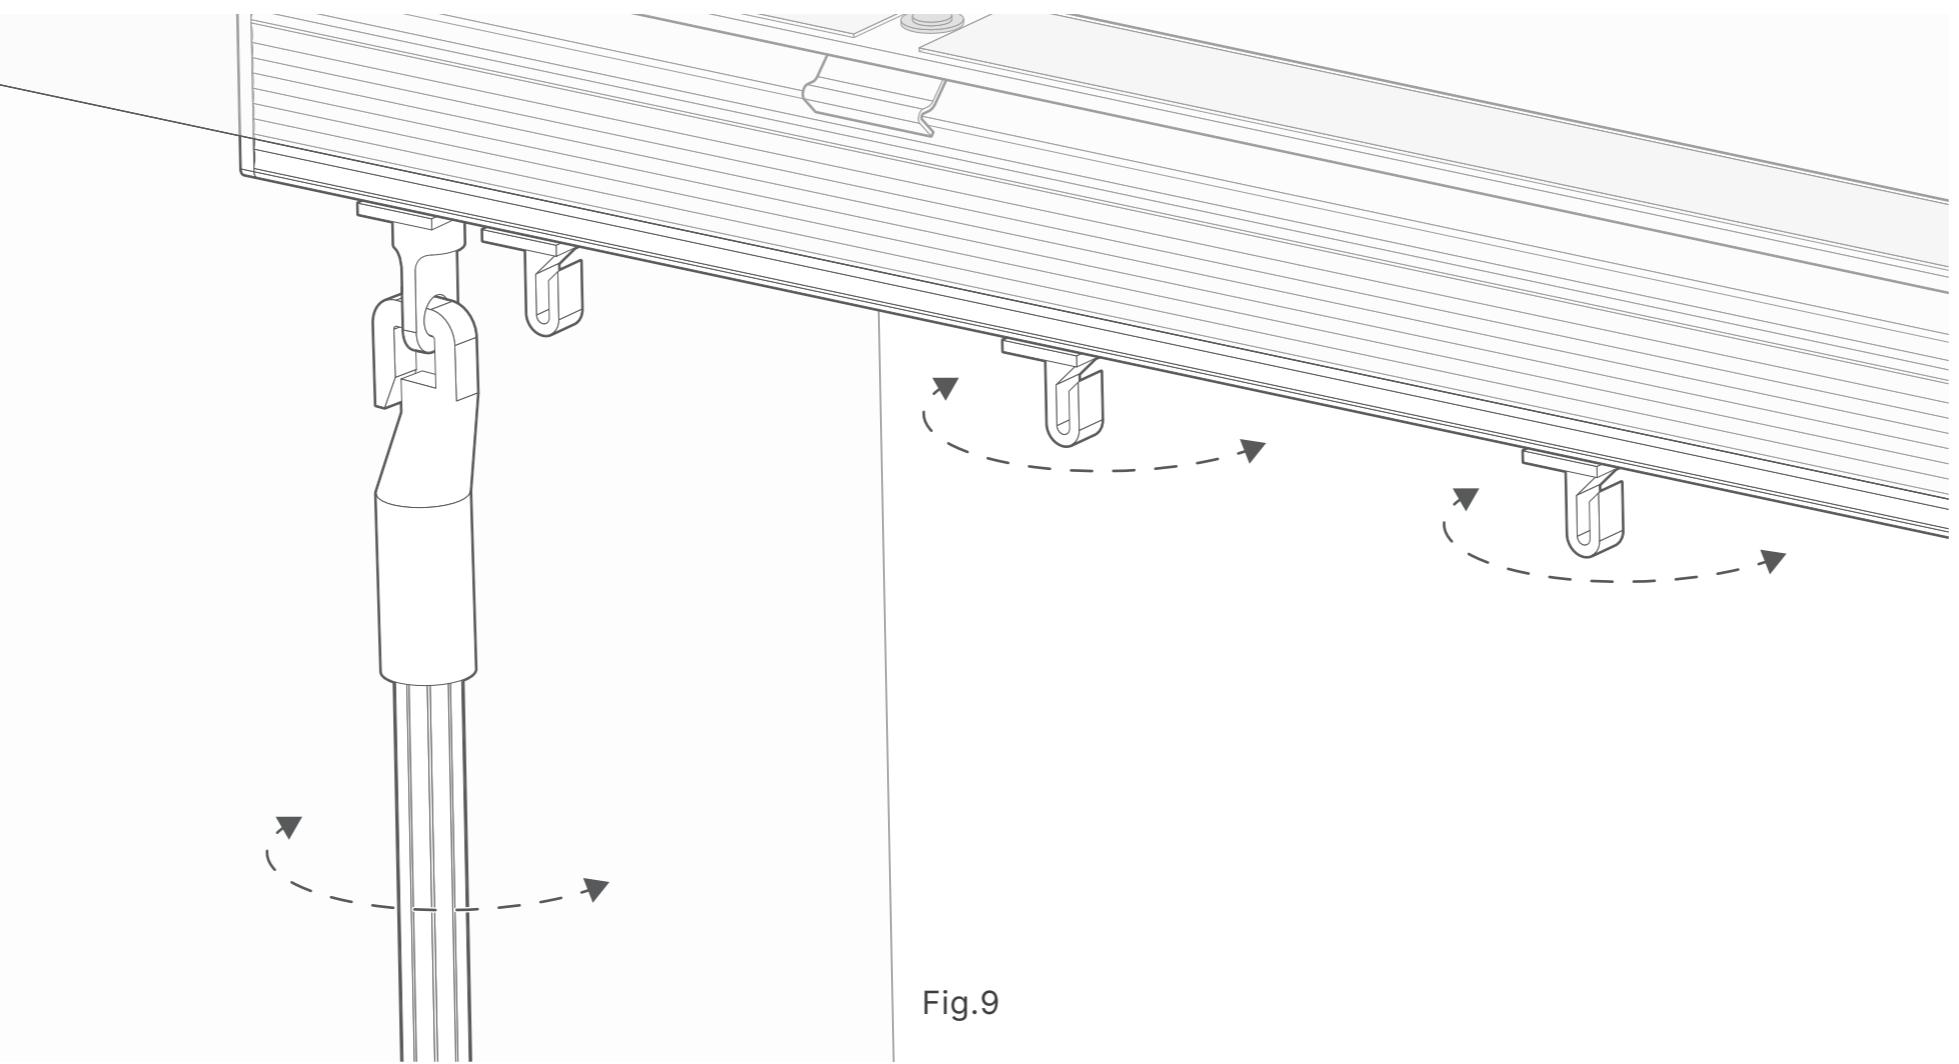

Before attaching the louvres, take a moment to make sure the hooks in the headrail are all aligned. Twist the wand fully in one direction, then fully in the other, checking that all the hooks are turning smoothly as you do so (Fig.9). Then turn the hooks so that they're all facing to the side.

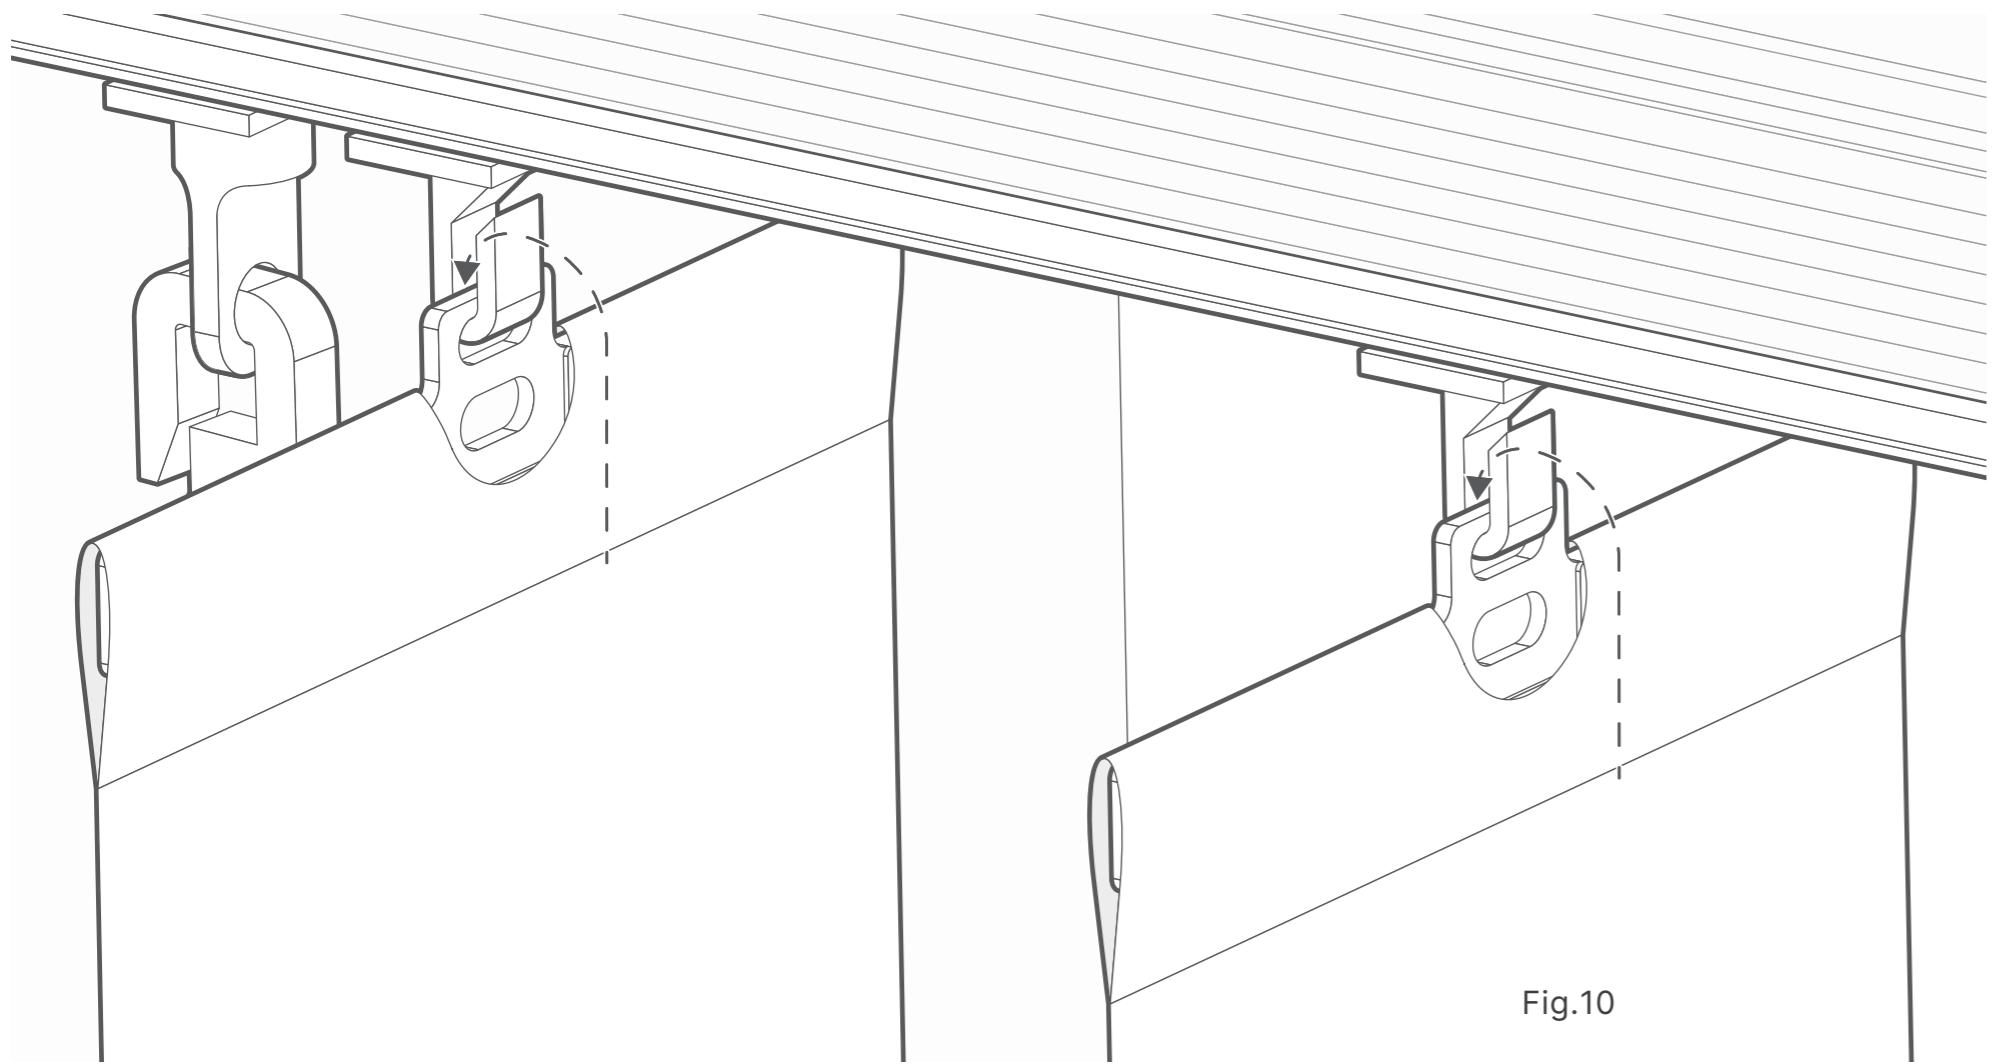


Fig.10

Hook the louvres onto the hooks into the headrail one by one, ensuring that they're all facing the same direction (Fig.10).

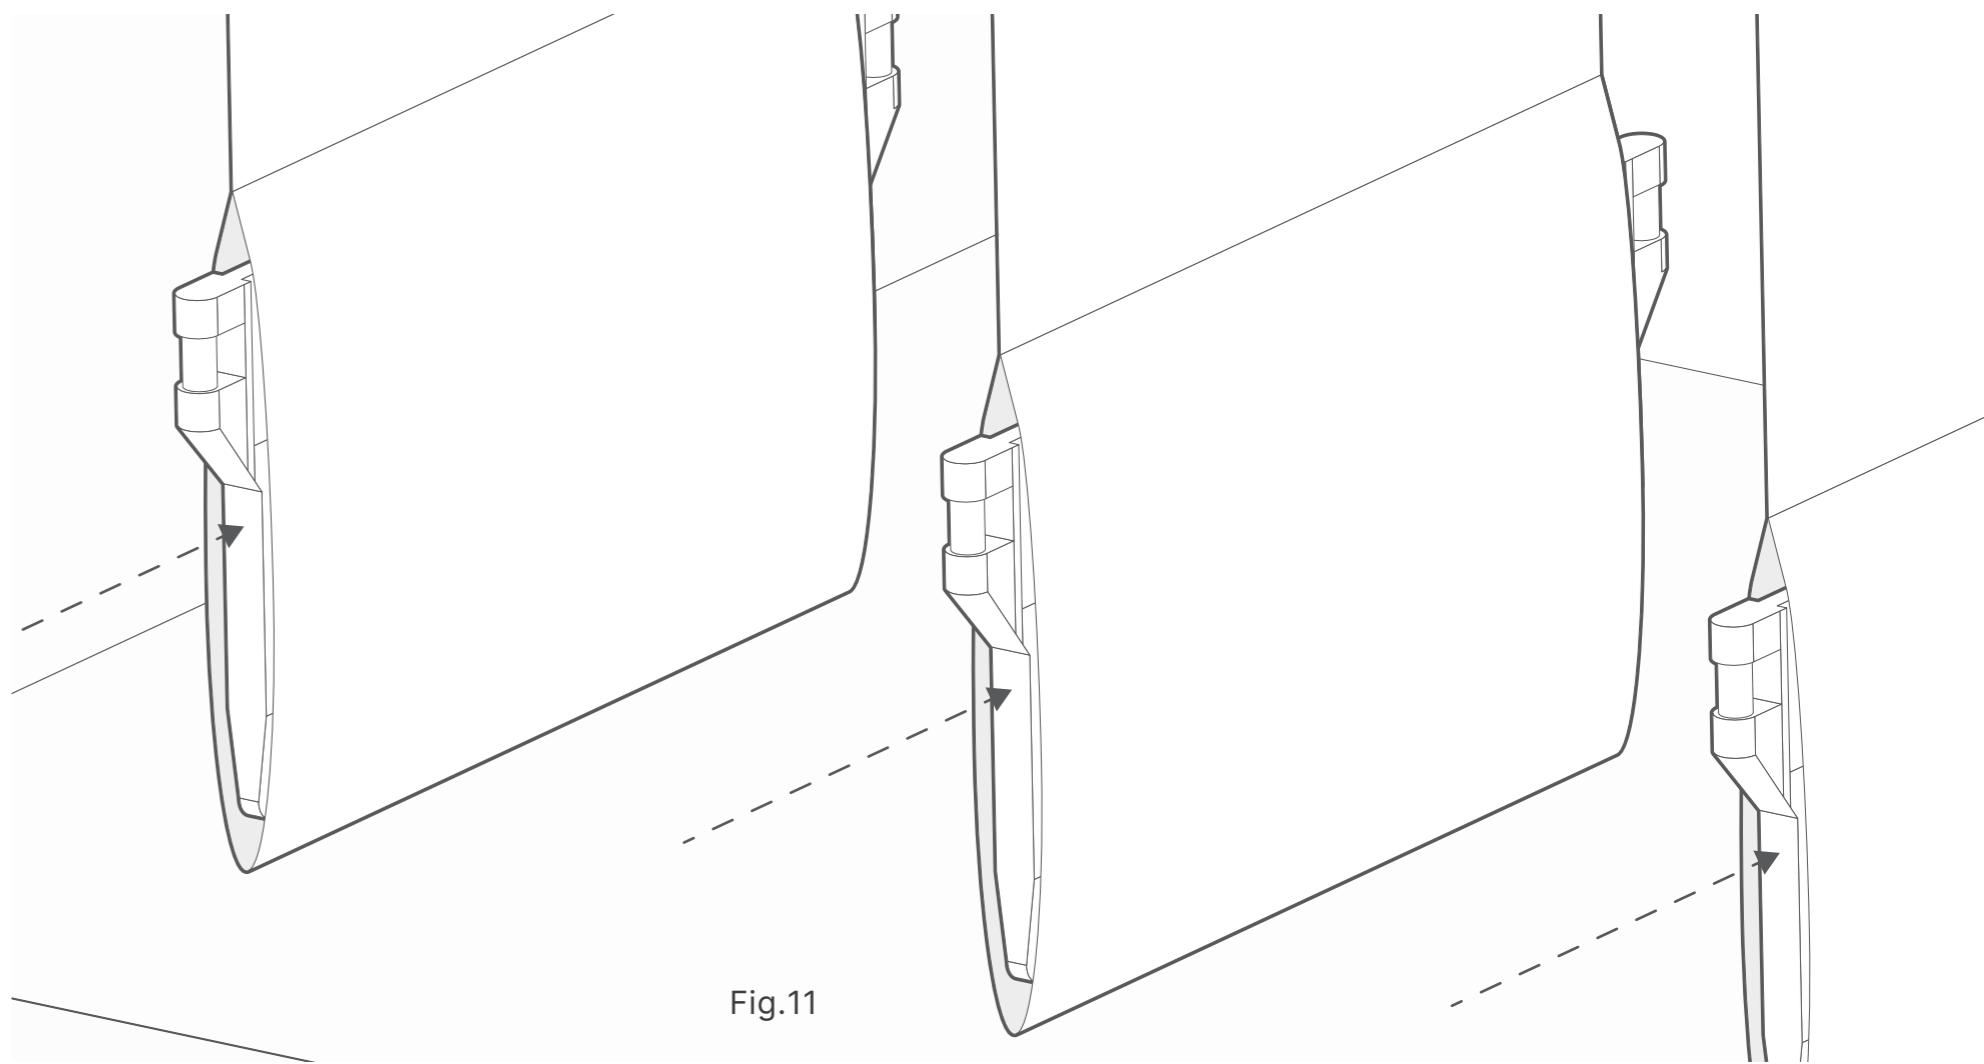


Fig.11

Slot the weights into the bottom pocket of each louvre (Fig.11).

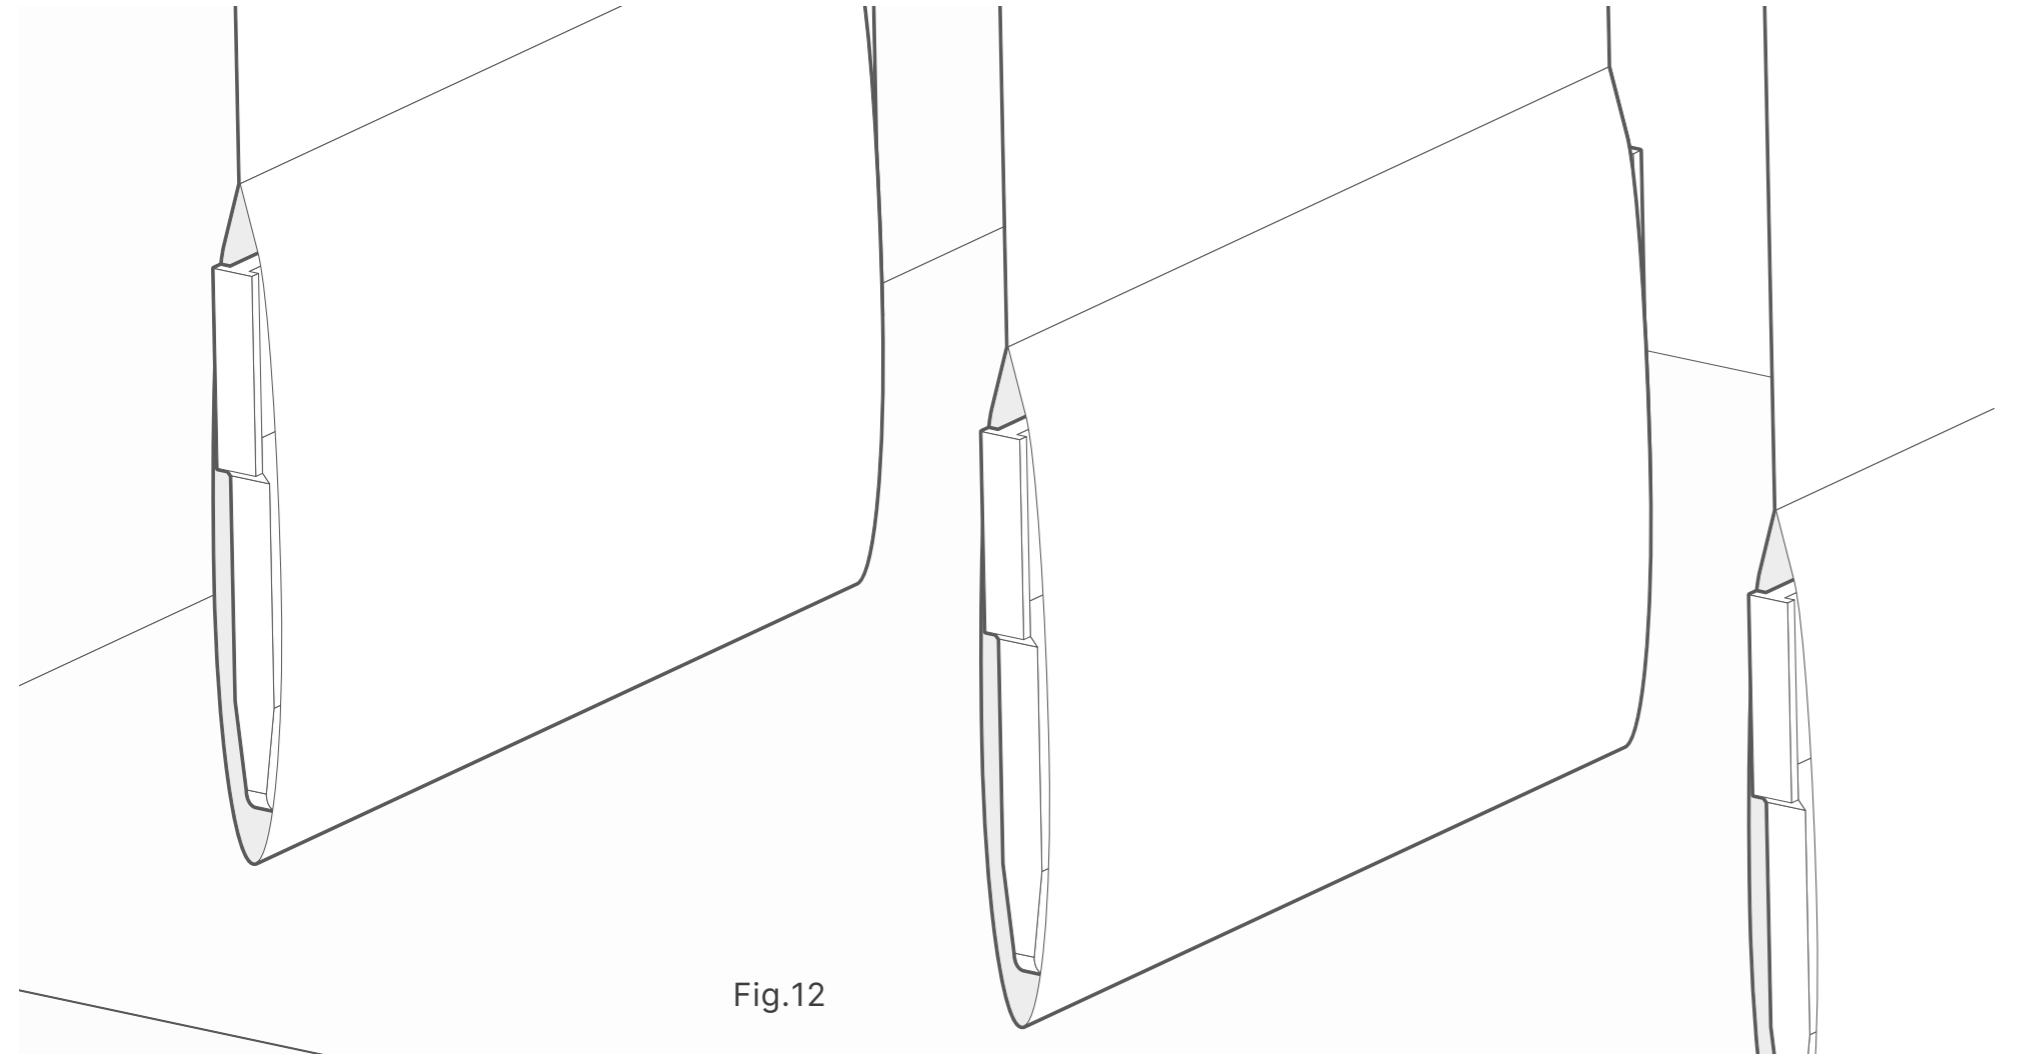


Fig.12

Note that if you have chainless weights then once the weights are inserted, your installation is complete (Fig.12). If not, then the last thing to do is to clip on the stabilising chain.


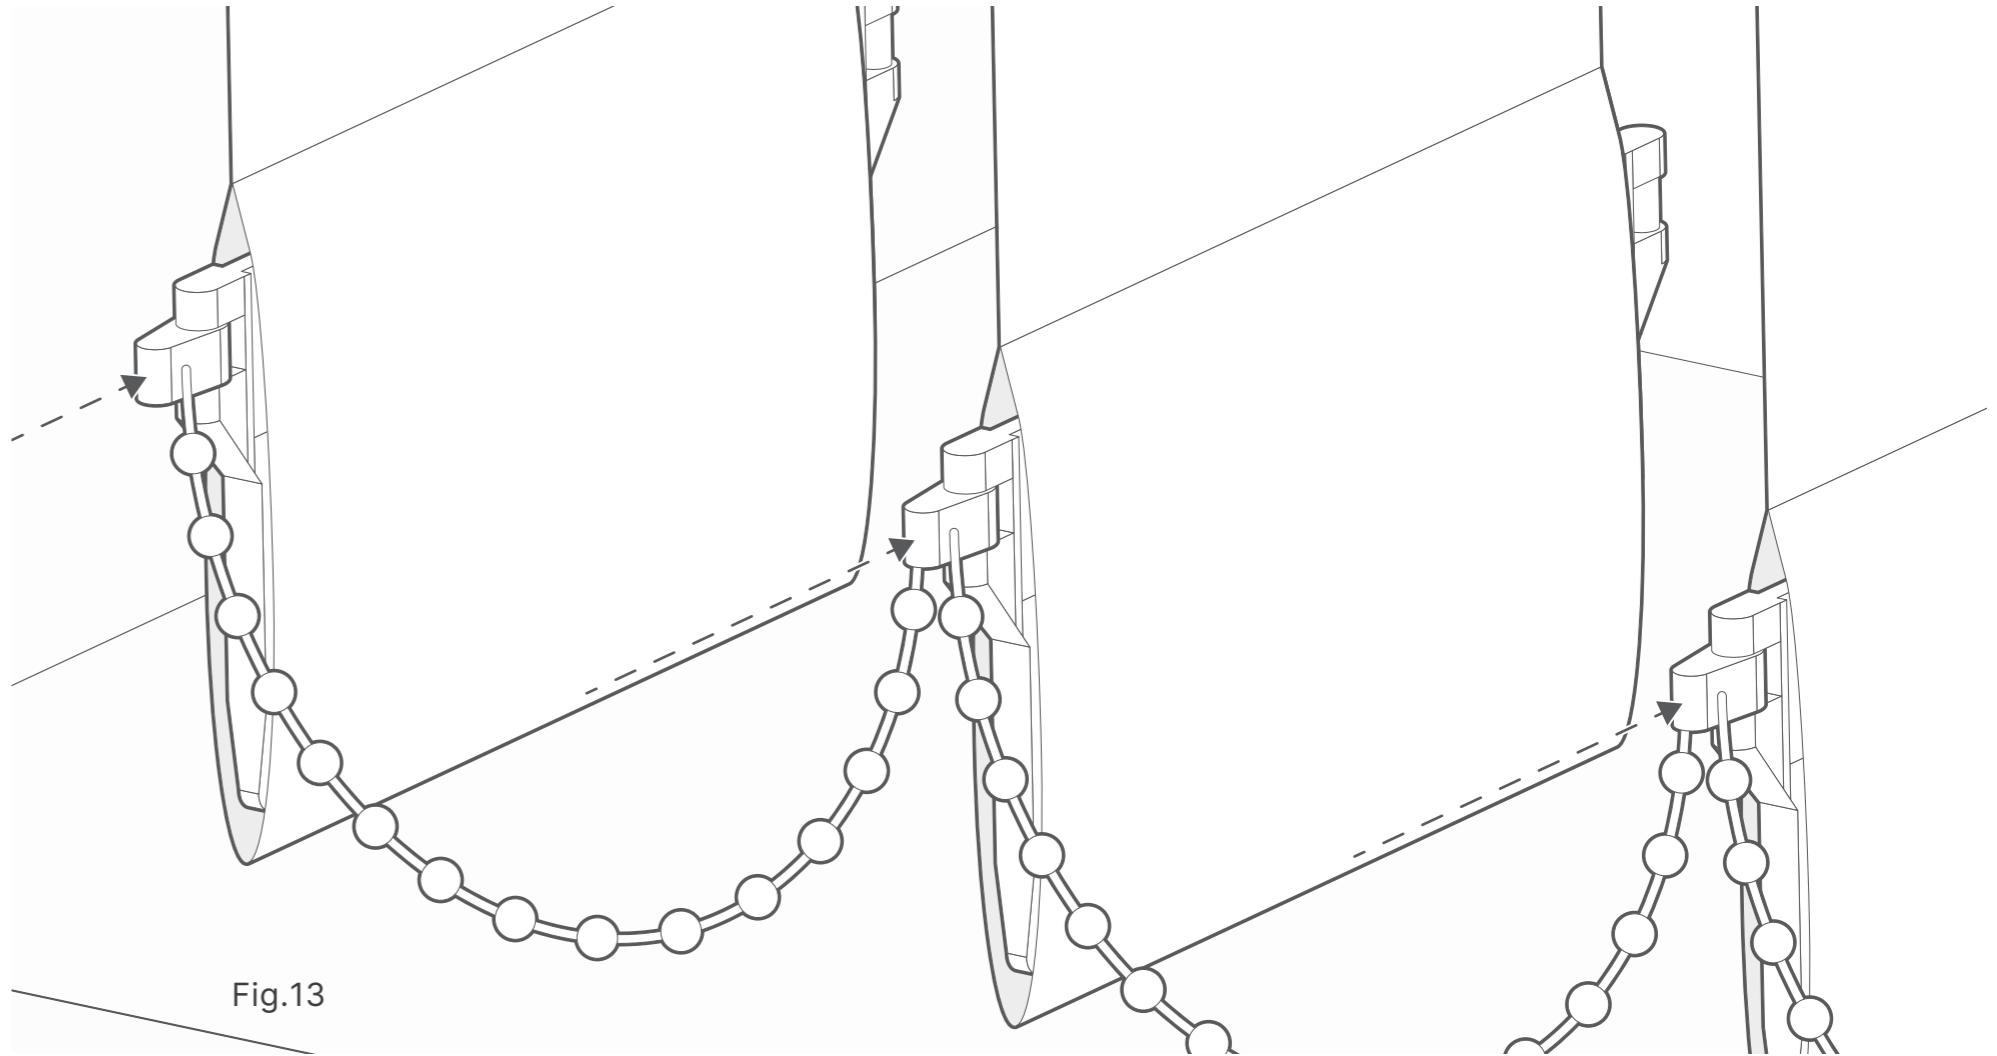


Fig.13

Starting at one end, clip the stabilising chain onto the front of the weights (Fig.13). Do not cut or trim the chain until you have it clipped onto the front of every louvre.

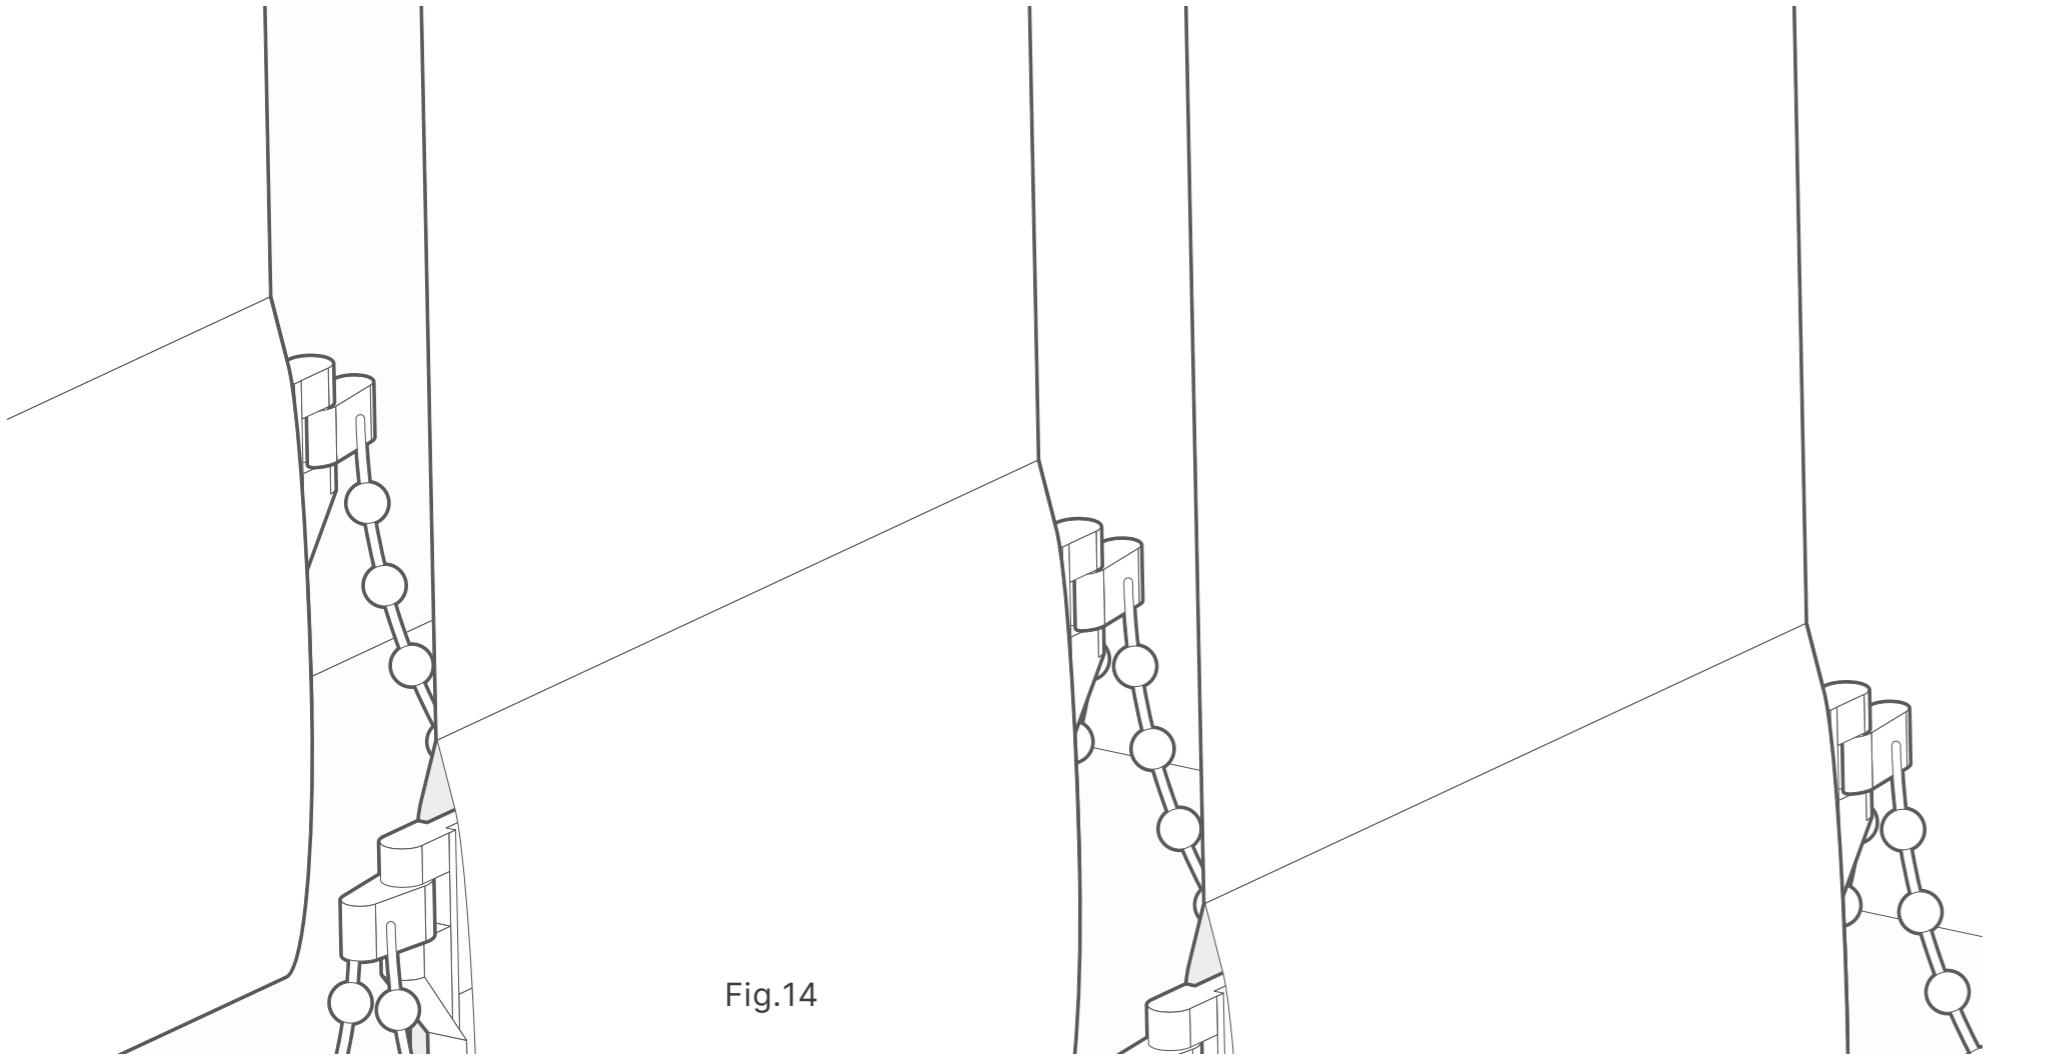

Once you've covered the front of the louvres, use a pair of scissors to cut off the remaining stabilising chain and clip it onto the back of the weights (Fig.14).

**And that's it! Your beautiful new Vertical Blind is fully installed and ready to enjoy...**